

ALPHABETICAL INDEX

SECTION **IDX**

ALPHABETICAL INDEX

A

A/T - Wiring diagram	AT-1009
A/T control	EC-1148
A/T fluid temperature sensor	AT-1081
A/T mode switch	AT-1095
A/T self-diagnoses	AT-1028
A/T shift lock system - Wiring diagram	AT-1117
A/T shift lock system	AT-1116
A/T trouble diagnoses	AT-1036
APS - Wiring diagram	EC-1125
ASCD (automatic speed control device)	EL-1110
ASCD - Wiring diagram	EL-1111
AT/C - Wiring diagram	EC-1150
Accelerator control system	FE-1007
Accelerator position sensor	EC-1125
Air bag disposal	RS-1015
Air bag precautions	GI-1002
Air bag	RS-1003
Air cleaner filter replacement	MA-1019
Air conditioner cut control	EC-1021
Air flow meter - See Mass air flow sensor	EC-1086
Alternator	EL-1041
Angular tightening application	EM-1003
Anti-lock brake system - Wiring diagram	BR-1002
Audio	EL-1108
Automatic speed control system - See ASCD	EL-1110
Automatic transmission fluid replacement	MA-1021

B

BACK/L - Wiring diagram	EL-1051
BOOST - Wiring diagram	EC-1204
Back-up lamp	EL-1051
Basic inspection	EC-1049
Battery	EL-1035
Boring/horning cylinder block	EM-1075

C

CHARGE - Wiring diagram	EL-1040
CKPS - Wiring diagram	EC-1140
CONSULT for engine	EC-1038
CONSULT general information	GI-1003
COOL/F - Wiring diagram	EC-1105
CORNER - Wiring diagram	EL-1054
Camshaft inspection	EM-1032
Charging system	EL-1040
Chassis and body maintenance	MA-1020
Clutch operating cylinder	CL-1003
Collision diagnosis	RS-1052
Combination meter	EL-1073

Combination switch	EL-1042
Compression pressure	EM-1010
Compressor mounting	HA-1023
Connecting rod bearing clearance	EM-1078
Connecting rod bushing clearance	EM-1074
Connecting rod	EM-1074
Control valve (A/T)	AT-1148
Converter housing installation	AT-1128
Coolant mixture ratio	MA-1010
Coolant replacement	MA-1014
Cooling fan control	EC-1105
Cornering lamp	EL-1054
Crankcase emission control system - See Positive crankcase ventilation ...	EC-1022
Crankcase ventilation system - See Positive crankcase ventilation	EC-1022
Crankshaft position sensor (TDC)	EC-1140
Crankshaft	EM-1077
Cruise control - See ASCD	EL-1110
Cylinder block boring	EM-1020
Cylinder block	EM-1067
Cylinder head bolt tightening	EM-1034
Cylinder head	EM-1053

D

DEF - Wiring diagram	EL-1102
DTRL - Wiring diagram	EL-1044
Data link connector for Consult	EC-1038
Daytime light system	EL-1044
Diagnosis sensor unit	RS-1008
Diagnostic trouble code (DTC) for OBD system	EC-1032
Dome light - See Interior lamp	EL-1067
Door mirror	BT-1007
Door trim	BT-1004
Drive belt inspection	MA-1011
Drive plate runout	EM-1095
Dropping resistor (A/T)	AT-1086

E

ECCS-D control module ..	EC-1068, 1117, 1189, 1191, 1196, 1200
ECM input/output signal	EC-1068
ECTS - Wiring diagram	EC-1092
EGR - Wiring diagram	EC-1209
EGR volume control valve	EC-1207
Electrical unit	EL-1231
Electrical units location	EL-1185
Electronic fuel injection pump	EC-1119, 1153, 1159, 1165, 1171, 1177, 1180, 1215
Engine control circuit diagram	EC-1015
Engine control component parts location	EC-1011
Engine control system diagram and chart	EC-1016

ALPHABETICAL INDEX

Engine coolant temperature sensor (ECTS)	EC-1092
Engine oil filter replacement	MA-1013
Engine oil replacement	MA-1012
Engine removal	EM-1064
Engine serial number	GI-1008

F

F/FOG - Wiring diagram	EL-1052
Final drive disassembly	PD-1004, 1005
Fluid temperature sensor (A/T)	AT-1081
Fluids	MA-1008
Flywheel runout	EM-1095
Fog lamp, front	EL-1052
Fog lamp, rear	EL-1053
Forward clutch	AT-1167
Front axle	FA-1002
Front final drive disassembly (4WD)	PD-1004
Front fog lamp	EL-1052
Front passenger air bag	RS-1003
Front seat	BT-1006
Front washer	EL-1098
Front wiper	EL-1098
Fuel cut control (at no load & high engine speed)	EC-1021
Fuel filter replacement	MA-1017
Fuel gauge	EL-1073
Fuel injection system	EC-1019
Fuel line inspection	MA-1018
Fuel precautions	GI-1002
Fuse block	EL-1229
Fuse	EL-1230
Fusible link	EL-1230

G

GLOW - Wiring diagram	EC-1221
Gauges	EL-1073
Glow plug	EC-1221
Glow relay	EC-1221
Grease	MA-1008, 1016
Ground distribution	EL-1013

H

HEAT UP - Wiring diagram	EC-1242
HEATER - Wiring diagram	HA-1005
HLC - Wiring diagram	EL-1099
HORN - Wiring diagram	EL-1100
Harness layout	EL-1191
Hazard warning lamp	EL-1058
Headlamp washer	EL-1099
Headlamp wiper	EL-1099
Headlamp	EL-1044
Heat up switch	EC-1241
High clutch	AT-1165

Horn	EL-1100
How to erase DTC for OBD system	EC-1032

I

ILL - Wiring diagram	EL-1061
Identification plate	GI-1008
Idle speed	EC-1049
Illumination	EL-1060
Injection nozzle	EC-1023
Intake manifold	EM-1012
Interior lamp	EL-1067
Interior	BT-1004

J

Junction box (J/B)	EL-1229
--------------------------	---------

L

License lamp	EL-1046
Lifting points	GI-1009
Line pressure solenoid valve	AT-1086
Line pressure test (A/T)	AT-1044
Liquid gasket application	EM-1003
Location of electrical units	EL-1185
Low and reverse brake	AT-1171
Lubricants	MA-1008
Luggage room lamp	EL-1067

M

MAFS - Wiring diagram	EC-1086
MAIN - Wiring diagram	EC-1077
MAJOR OVERHALL	AT-1129
METER - Wiring diagram	EL-1073
Maintenance (engine)	MA-1011
Malfunction indicator lamp (MIL)	EC-1033
Manifold tightening torque (intake & exhaust)	MA-1011
Mass air flow sensor (MAFS)	EC-1086
Meter	EL-1073
Mirror, door	BT-1007
Mirror, outside	BT-1007
Model variation	GI-1005

N

NATS (Nissan Anti-theft System)	EL-1163
NATS - Wiring diagram	EL-1166
NVH troubleshooting (EM)	EM-1008

ALPHABETICAL INDEX

O

Oil change (capacity)	MA-1008
Oil pan (engine)	EM-1022
Oil pump (A/T)	AT-1144
Oil seal replacement (engine)	EM-1051
On board diagnostic system	EC-1032
Operating cylinder (clutch)	CL-1003
Outside mirror	BT-1007
Overdrive control switch	AT-1095
Overrun clutch solenoid valve	AT-1075
Overrun clutch	AT-1167
Oversize piston	EM-1075

P

P/ANT - Wiring diagram	EL-1109
PCV (positive crankcase ventilation) ...	EC-1022
PNP/SW - Wiring diagram	EC-1233
POWER - Wiring diagram	EL-1005
Park/Neutral position switch	EC-1233
Park/neutral position switch (A/T)	AT-1095
Parking lamp	EL-1046
Pilot bushing replacement - See Pilot converter	EM-1083
Piston pin inspection	EM-1072
Piston ring inspection	EM-1073
Piston to bore clearance	EM-1076
Power antenna	EL-1109
Power supply routing	EL-1004
Power window	EL-1115
Pressure test (A/T)	AT-1044
Priming pump	EC-1049
Propeller shaft on vehicle service	PD-1003
Propeller shaft vibration	PD-1003
Propeller shaft	PD-1002

Q

Quick-glow system	EC-1221
-------------------------	---------

R

R/COOL - Wiring diagram (front auto A/C)	HA-1013, 1017
R/COOL - Wiring diagram (front manual A/C)	HA-1019
R/HEAT - Wiring diagram	HA-1006
ROOM/L - Wiring diagram	EL-1068
Radio - See Audio	EL-1108
Rear cooler - Wiring diagram (front auto A/C)	HA-1013, 1017
Rear cooler - Wiring diagram (front manual A/C)	HA-1019
Rear fog lamp	EL-1053
Rear heater - Wiring diagram	HA-1006

Rear window defogger	EL-1101
Refrigerant lines	HA-1021
Removal and installation (A/T)	AT-1127
Reverse clutch	AT-1161
Revolution sensor (A/T)	AT-1065
Room lamp - See Interior lamp	EL-1067

S

S/LOCK - Wiring diagram	EL-1128
S/TANK - Wiring diagram	FE-1003
SHIFT - Wiring diagram	AT-1117
SRS - See Supplemental Restraint System	RS-1003
STAB - Wiring diagram	RA-1002
START - Wiring diagram	EL-1036
SWL/V - Wiring diagram	EC-1248
Screw jack	GI-1009
Seat belt pre-tensioner disposal	RS-1015
Seat belt pre-tensioner	RS-1003
Seat, front	BT-1006
Self-diagnostic results	EC-1034
Shift lock system	AT-1116
Shift schedule	AT-1206
Shift solenoid valve A (A/T)	AT-1071
Shift solenoid valve B (A/T)	AT-1073
Side air bag	RS-1003
Speedometer	EL-1073
Spiral cable	RS-1009
Stabilizer release device - Wiring diagram	RA-1002
Stabilizer release device	RA-1002
Stall test (A/T)	AT-1041
Start signal	EC-1230
Starter	EL-1039
Starting system	EL-1036
Steering switch	EL-1043
Stop lamp	EL-1050
Super lock	EL-1124, 1159
Supplemental Restraint System	RS-1003
Supplemental restraint system - Wiring diagram	RS-1024, 1028
Swirl control valve control solenoid valve	EC-1246
Symptom matrix chart	EC-1055

T

TCM circuit diagram	AT-1008
TCM inspection table	AT-1060
Tachometer	EL-1073
Tail lamp	EL-1046
Throttle position switch	AT-1096
Timing chain	EM-1027
Timing gear	EM-1039
Torque converter clutch solenoid valve	AT-1078
Torque converter installation	AT-1128

ALPHABETICAL INDEX

Tow truck towing GI-1009, 1010
Towing point GI-1010
Trim BT-1004
Turbocharger charge air cooler EM-1011
Turbocharger EM-1014
Turn signal lamp EL-1058

v

VSS - Wiring diagram EC-1096
Vacuum hose drawing (Engine
control) EC-1017
Valve clearance EM-1036
Valve guide EM-1060
Valve lifter EM-1033
Valve seat EM-1061

Valve spring EM-1062
Vehicle identification number GI-1005, 1007
Vehicle speed sensor (VSS) EC-1096

w

WARN - Wiring diagram EL-1080
WINDOW - Wiring diagram EL-1117
WIPER - Wiring diagram EL-1098
Warning chime EL-1091
Warning lamps EL-1078
Washer, front EL-1098
Water temperature gauge EL-1073
Wiper, front EL-1098