
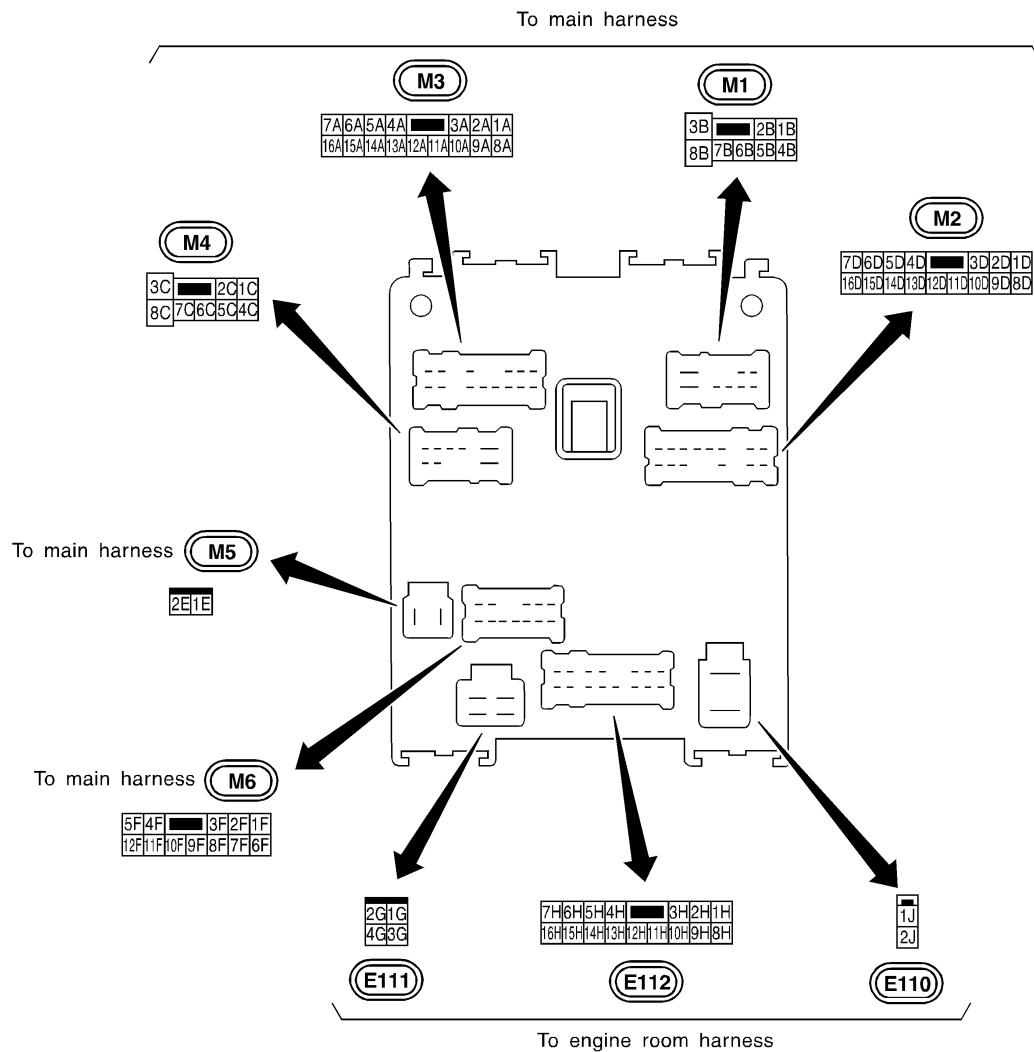



# FUSE BLOCK — Junction Box (J/B)

## Terminal Arrangement

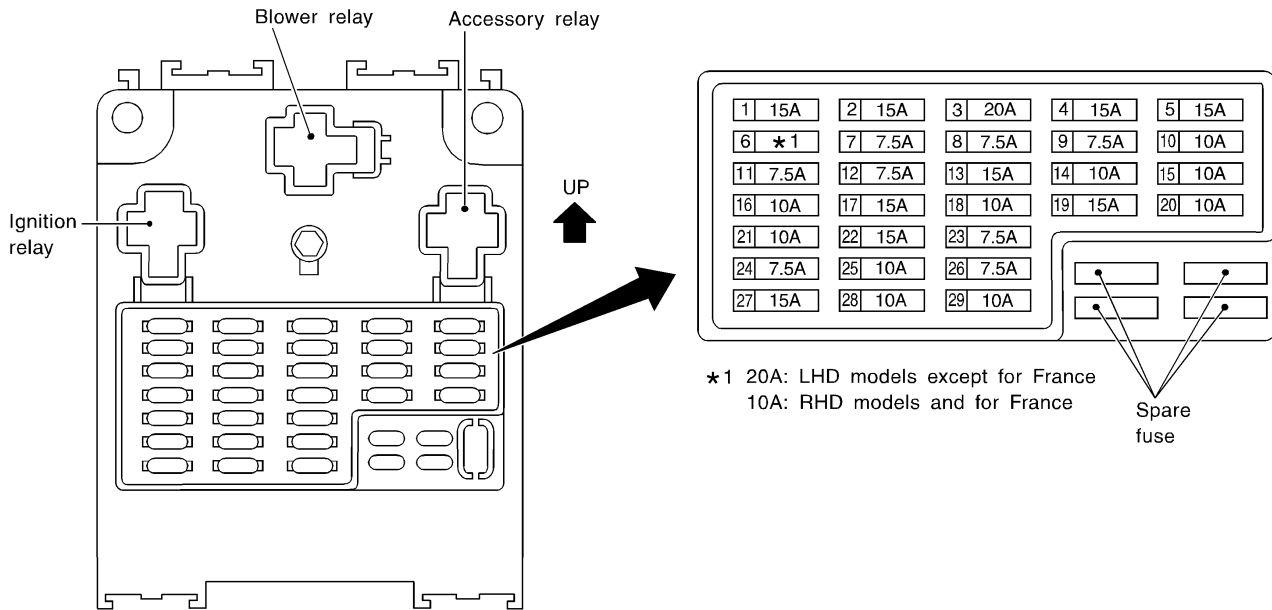

# FUSE AND FUSIBLE LINK BOX

## Terminal Arrangement

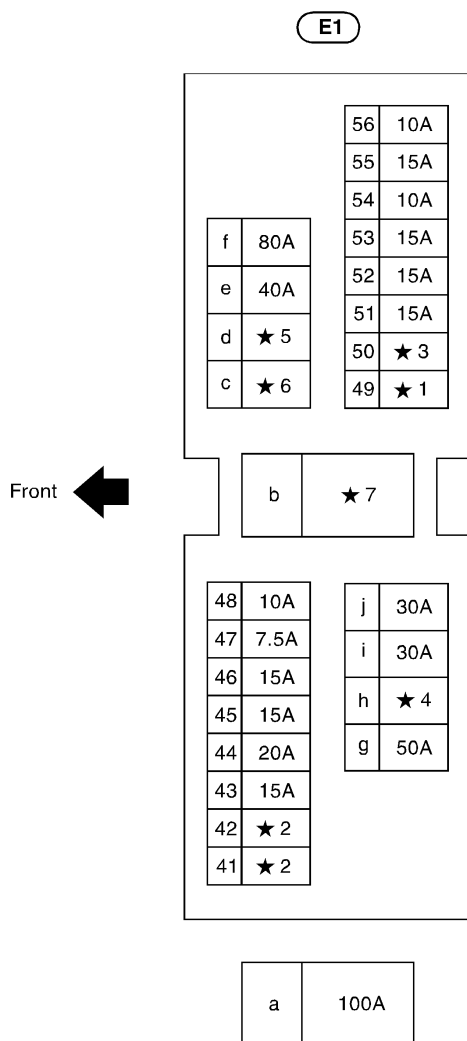


No. 41 - 56: FUSE  
a - j: FUSIBLE LINK

- ★ 1 7.5A: TB45E engine models  
15A: TB48 engine models  
10A: TD engine models with NATS and ZD engine models
- ★ 2 20A: With xenon headlamp system  
7.5A: LHD models for Europe
- ★ 3 7.5A: TB45E engine models  
10A: TB48 engine models  
20A: ZD engine models
- ★ 4 30A: TB48 engine models with ABS  
40A: Except for TB48 engine models
- ★ 5 40A: TB48 engine models  
30A: With ABS except for TB48 engine models
- ★ 6 40A: TB48 engine models  
30A: Except for TB48 engine models
- ★ 7 120A: TB48 engine models  
100A: Except for TB48 engine models


# ELECTRICAL UNITS

## Terminal Arrangement


### ECM (TB48 engine)

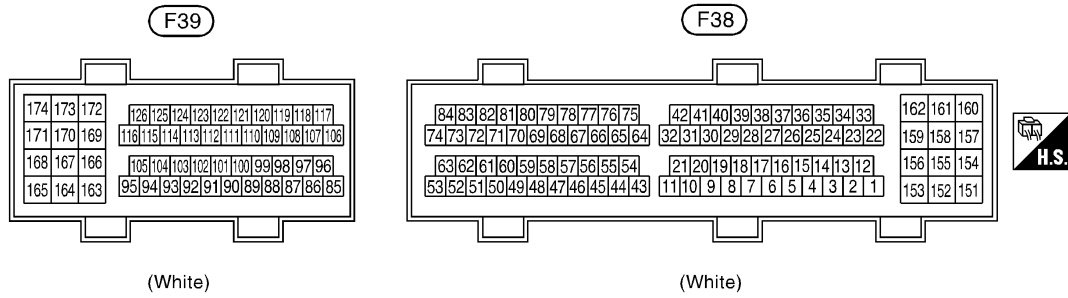


### ECM **F8** (TB45E engine)

 


### ECM **F8** (ZD30ETi engine)

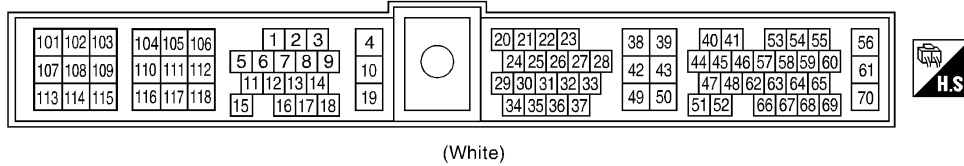


### TCM (TRANSMISSION CONTROL MODULE)

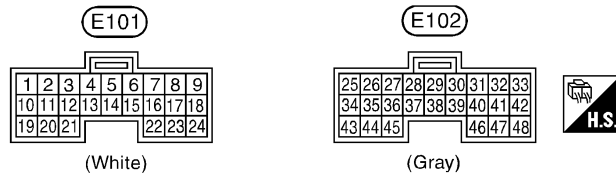

### ABS ACTUATOR AND ELECTRIC UNIT **E18**

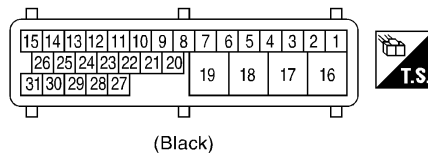


### A/C AUTO AMP.

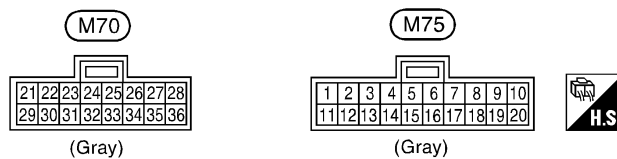


ELECTRICAL UNITS

Terminal Arrangement (Cont'd)

SUPER LOCK CONTROL UNIT








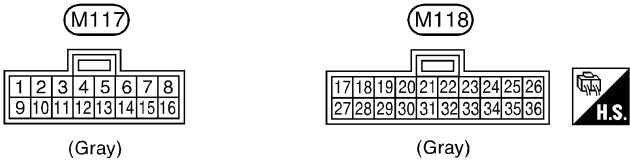


SMART ENTRANCE CONTROL UNIT (For China)


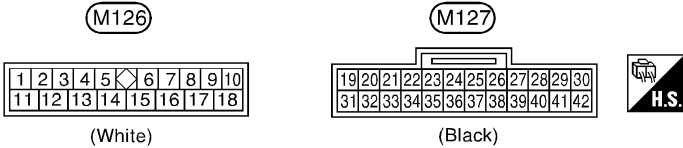


JOINT CONNECTOR (J/C)

        Terminal Arrangement



(Gray)

  

(Pink)