

ALPHABETICAL INDEX

SECTION **IDX**

ALPHABETICAL INDEX

A

A/T - Wiring diagram	AT-2003
A/T control	EC-2021
A/T shift lock system	AT-2013
ABS - Wiring diagram	BR-2003
APS - Wiring diagram	EC-2019
AT/C - Wiring diagram	EC-2021
AUDIO - Wiring diagram	EL-2088
Accelerator position sensor	EC-2019
Air bag disposal	RS-2009
Air bag	RS-2003
Air flow meter - See Mass air flow sensor	EC-2006
Anti-lock brake system - Wiring diagram	BR-2002
Audio	EL-2088

B

BACK/L - Wiring diagram	EL-2047
BOOST - Wiring diagram	EC-2029
Back-up lamp	EL-2047
Bumper, front	BT-2003

C

CD/CHG - Wiring diagram	EL-2092
CIGAR - Wiring diagram	EL-2085
COOL/F - Wiring diagram	EC-2010
Cigarette lighter	EL-2085
Clutch cover	CL-2005
Clutch damper	CL-2004
Clutch master cylinder	CL-2004
Clutch operating cylinder	CL-2003
Combination meter	EL-2062
Cool box - Wiring diagram	HA-2011
Coolant replacement	MA-2003
Cooling circuit (engine)	LC-2002
Cooling fan control	EC-2010

D

DEICER - Wiring diagram	EL-2086
DTRL - Wiring diagram	EL-2037
Daytime light system	EL-2037
Diagnosis sensor unit	RS-2005

E

ECCS-D control module	EC-2027, 2028
ECTS - Wiring diagram	EC-2007
EGR - Wiring diagram	EC-2030
EGR volume control valve	EC-2030
Electrical unit	EL-2136

Electrical units location	EL-2103
Electronic fuel injection pump	EC-2018, 2022, 2023, 2024, 2025, 2026, 2031
Engine control circuit diagram	EC-2003
Engine coolant temperature sensor (ECTS)	EC-2007
Exterior	BT-2006

F

F/FOG - Wiring diagram	EL-2048
Fluids	MA-2002
Flywheel (clutch)	CL-2005
Fog lamp, front	EL-2048
Front bumper	BT-2003
Front fog lamp	EL-2048
Front passenger air bag	RS-2003
Fuel gauge	EL-2062
Fuse block	EL-2134
Fuse	EL-2135
Fusible link	EL-2135

G

Gauges	EL-2062
Grease	MA-2002
Ground distribution	EL-2014

H

H/LAMP - Wiring diagram	EL-2034
HEAT UP - Wiring diagram	EC-2035
HLC - Wiring diagram	EL-2083
HORN - Wiring diagram	EL-2084
Harness layout	EL-2106, 2108
Hazard warning lamp	EL-2050
Headlamp wiper	EL-2083
Headlamp	EL-2034, 2037
Heat up switch	EC-2035
Hood	BT-2003
Horn	EL-2084

I

ILL - Wiring diagram	EL-2055
Illumination	EL-2054

J

Junction box (J/B)	EL-2134
--------------------------	---------

ALPHABETICAL INDEX

L

License lamp	EL-2041
Location of electrical units	EL-2103
Lubricants	MA-2002

M

MAFS - Wiring diagram	EC-2006
MAIN - Wiring diagram	EC-2004
METER - Wiring diagram	EL-2064
MIRROR - Wiring diagram	EL-2098
Maintenance (engine)	MA-2003
Mass air flow sensor (MAFS)	EC-2006
Meter	EL-2062
Model variation	GI-2002

N

NATS (Nissan Anti-theft System)	EL-2100
NATS - Wiring diagram	EL-2100

O

Oil change (capacity)	MA-2002
Operating cylinder (clutch)	CL-2003

P

PNP/SW - Wiring diagram	EC-2034
POWER - Wiring diagram	EL-2005
Park/Neutral position switch	EC-2034
Parking lamp	EL-2041
Power door mirror	EL-2098
Power supply routing	EL-2004, 2005
Pressure plate - See Clutch cover	CL-2005

R

R/HEAT - Wiring diagram	HA-2003
Radio - See Audio	EL-2088
Rear washer	EL-2078
Rear wiper	EL-2078

S

SHIFT - Wiring diagram	AT-2013
SRS - See Supplemental Restraint System	RS-2003
STAB - Wiring diagram	RA-2002
SWL/V - Wiring diagram	EC-2036
Seal - See Exterior	BT-2006
Seat belt pre-tensioner disposal	RS-2009

Seat belt pre-tensioner	RS-2003
Shift schedule	AT-2014
Side air bag	RS-2003
Speedometer	EL-2062
Spiral cable	RS-2006
Stabilizer release device - Wiring diagram	RA-2002
Stabilizer release device	RA-2002
Start signal	EC-2033
Starter	EL-2032
Starting system	EL-2029
Supplemental Restraint System	RS-2003
Supplemental restraint system - Wiring diagram	RS-2020, 2021
Swirl control valve control solenoid valve	EC-2036

T

TAIL/L - Wiring diagram	EL-2041
TCM circuit diagram	AT-2002
TURN - Wiring diagram	EL-2050
Tachometer	EL-2062
Tail lamp	EL-2041
Thermostat	LC-2003
Turn signal lamp	EL-2050

V

VSS - Wiring diagram	EC-2008
Vehicle identification number	GI-2002, 2003
Vehicle speed sensor (VSS)	EC-2008

W

WARN - Wiring diagram	EL-2069
WIP/R - Wiring diagram	EL-2079
Warning lamps	EL-2067
Washer, rear	EL-2078
Water temperature gauge	EL-2062
Wiper deicer	EL-2086
Wiper, rear	EL-2078

ALPHABETICAL INDEX
