



FUSE AND FUSIBLE LINK BOX

Terminal Arrangement

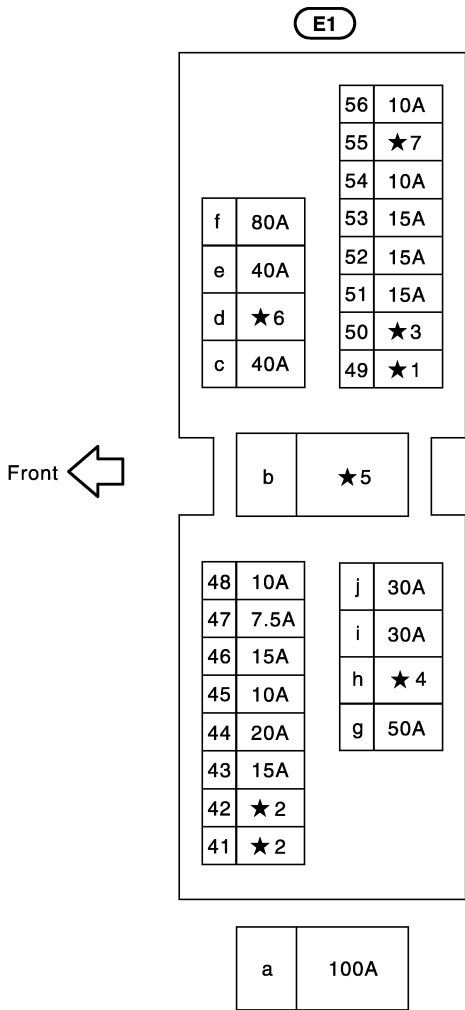








No. 41 - 56: FUSE
a - j: FUSIBLE LINK

- ★1 7.5A: TB45E engine models
15A: TB48 and TB45S engine models
20A: TD engine models with NATS and ZD engine models
- ★2 20A: With xenon headlamp system
7.5A: LHD models for Europe
- ★3 7.5A: TB45E engine models
10A: TB45S engine models with NATS, TB48 and ZD engine models
- ★4 30A: With ABS except for TB45S engine models
40A: TB45S engine models
- ★5 120A: TB48 and TB45E engine models
100A: Except for TB48 and TB45E engine models
- ★6 40A: TB48 and TB45E engine models
30A: TB45S engine models with ABS
- ★7 10A: TD42Ti engine models
15A: Except for TD42Ti engine models

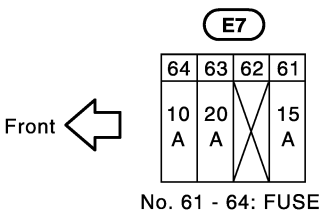

JOINT CONNECTOR (J/C)

       Terminal Arrangement



(Gray)

