

SECTION

RA

- MODIFICATION NOTICE:**
- Tightening torque for bearing cage has been changed.
  - Wiring diagrams have been changed.

CONTENTS

|                        |   |                                        |   |
|------------------------|---|----------------------------------------|---|
| <b>REAR AXLE</b> ..... | 2 | <b>STABILIZER RELEASE DEVICE</b> ..... | 3 |
| Components.....        | 2 | Wiring Diagram .....                   | 3 |

# REAR AXLE

## Components

### DRUM BRAKE TYPE


#### SEC. 430

TB48 engine

105 - 135 (11 - 13, 78 - 99)

Except TB48 engine

54 - 74 (5.5 - 7.5, 40 - 54)



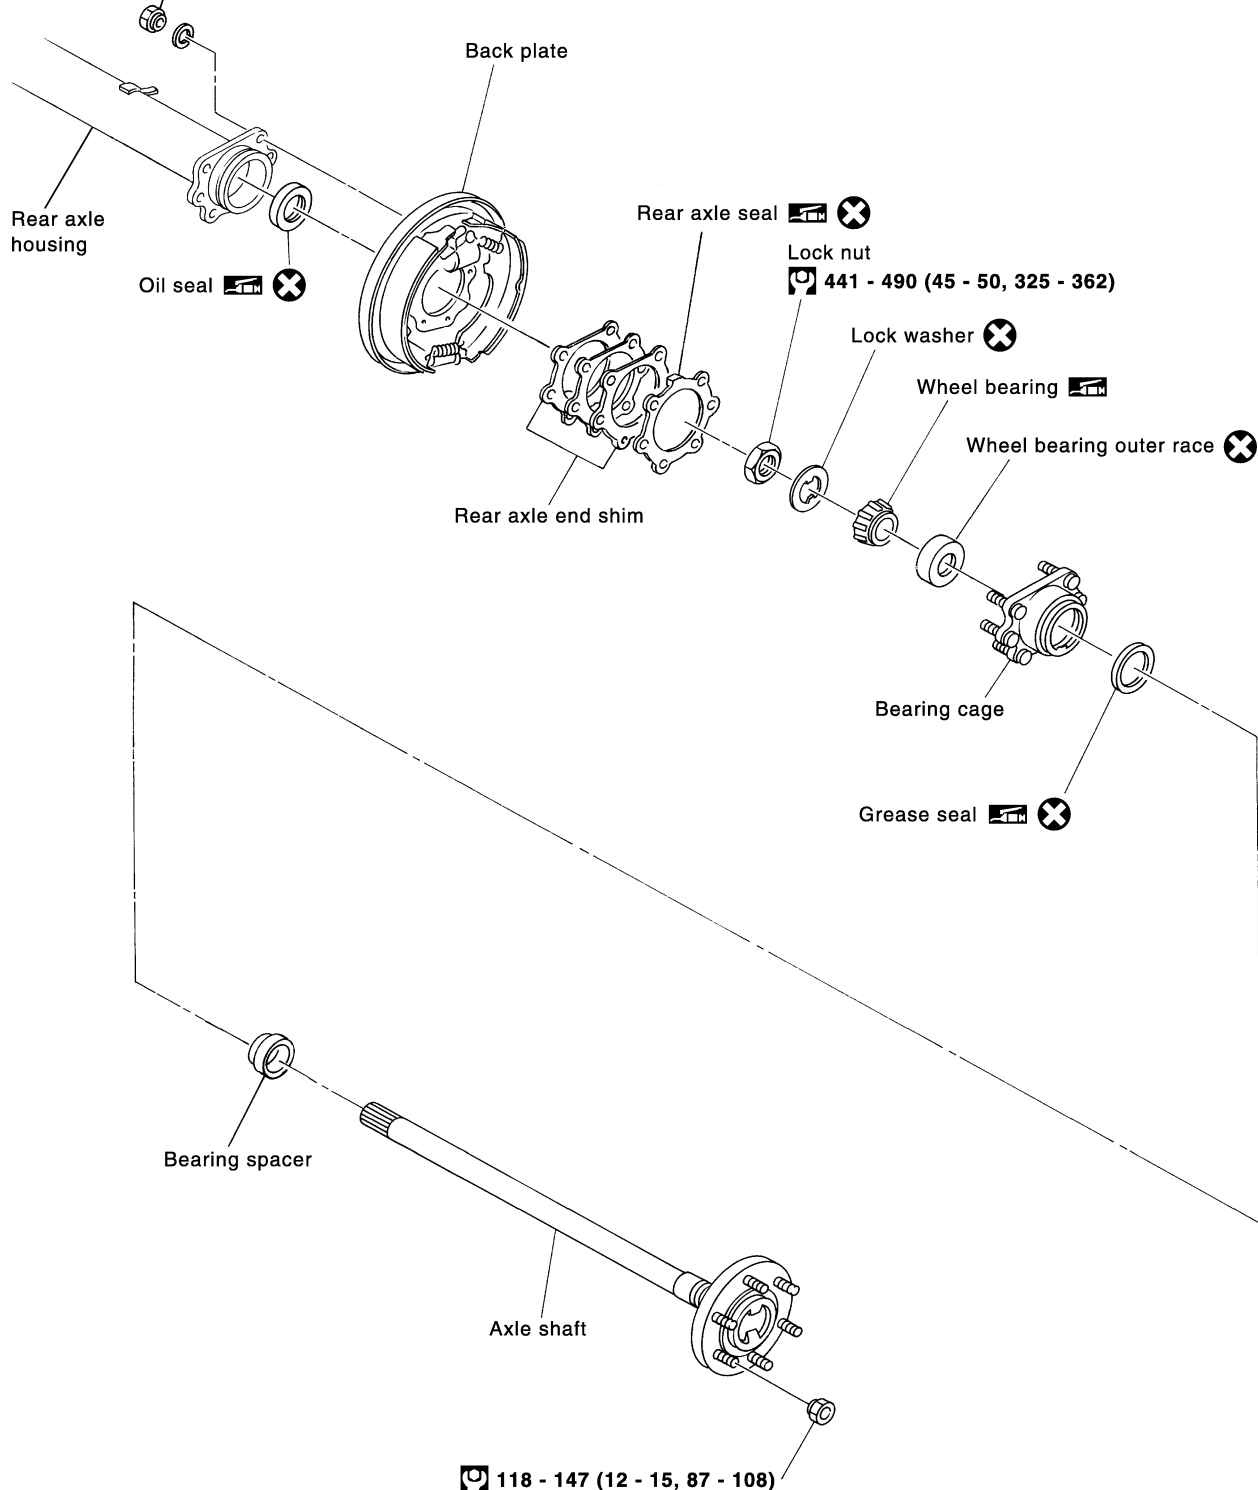


: N·m (kg-m, ft-lb)

# STABILIZER RELEASE DEVICE
  
## Wiring Diagram

RA-STAB-01

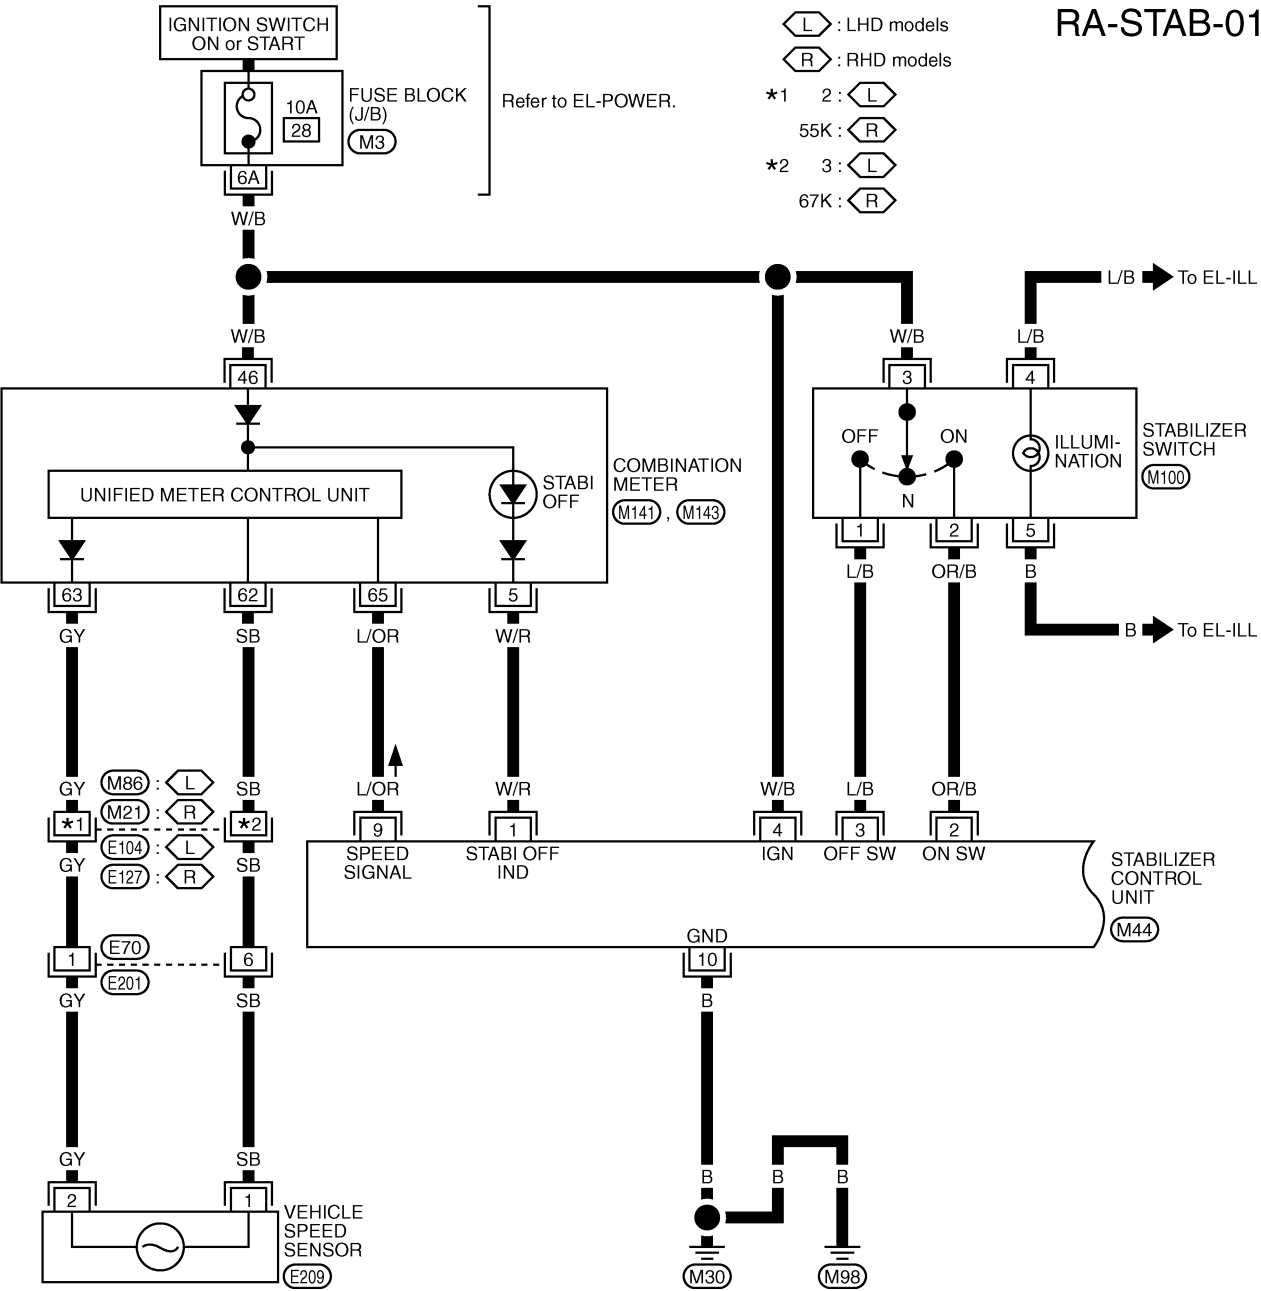

Refer to last page (Foldout page).



M21, E127  
M3

STABILIZER RELEASE DEVICE  
Wiring Diagram (Cont'd)

RA-STAB-02

- ⬡ : LHD models  
⬡ : RHD models  
⬡ : TB48 engine models  
⬡ : ZD engine models

- \*1 4M: ⬡  
10: ⬡  
\*2 3M: ⬡  
13: ⬡  
\*3 17M: ⬡  
11: ⬡

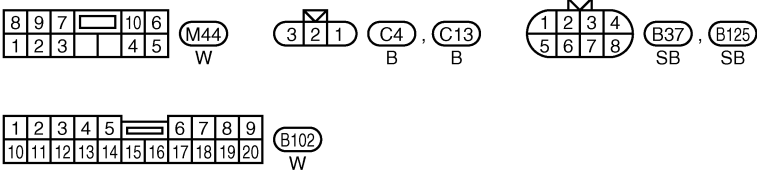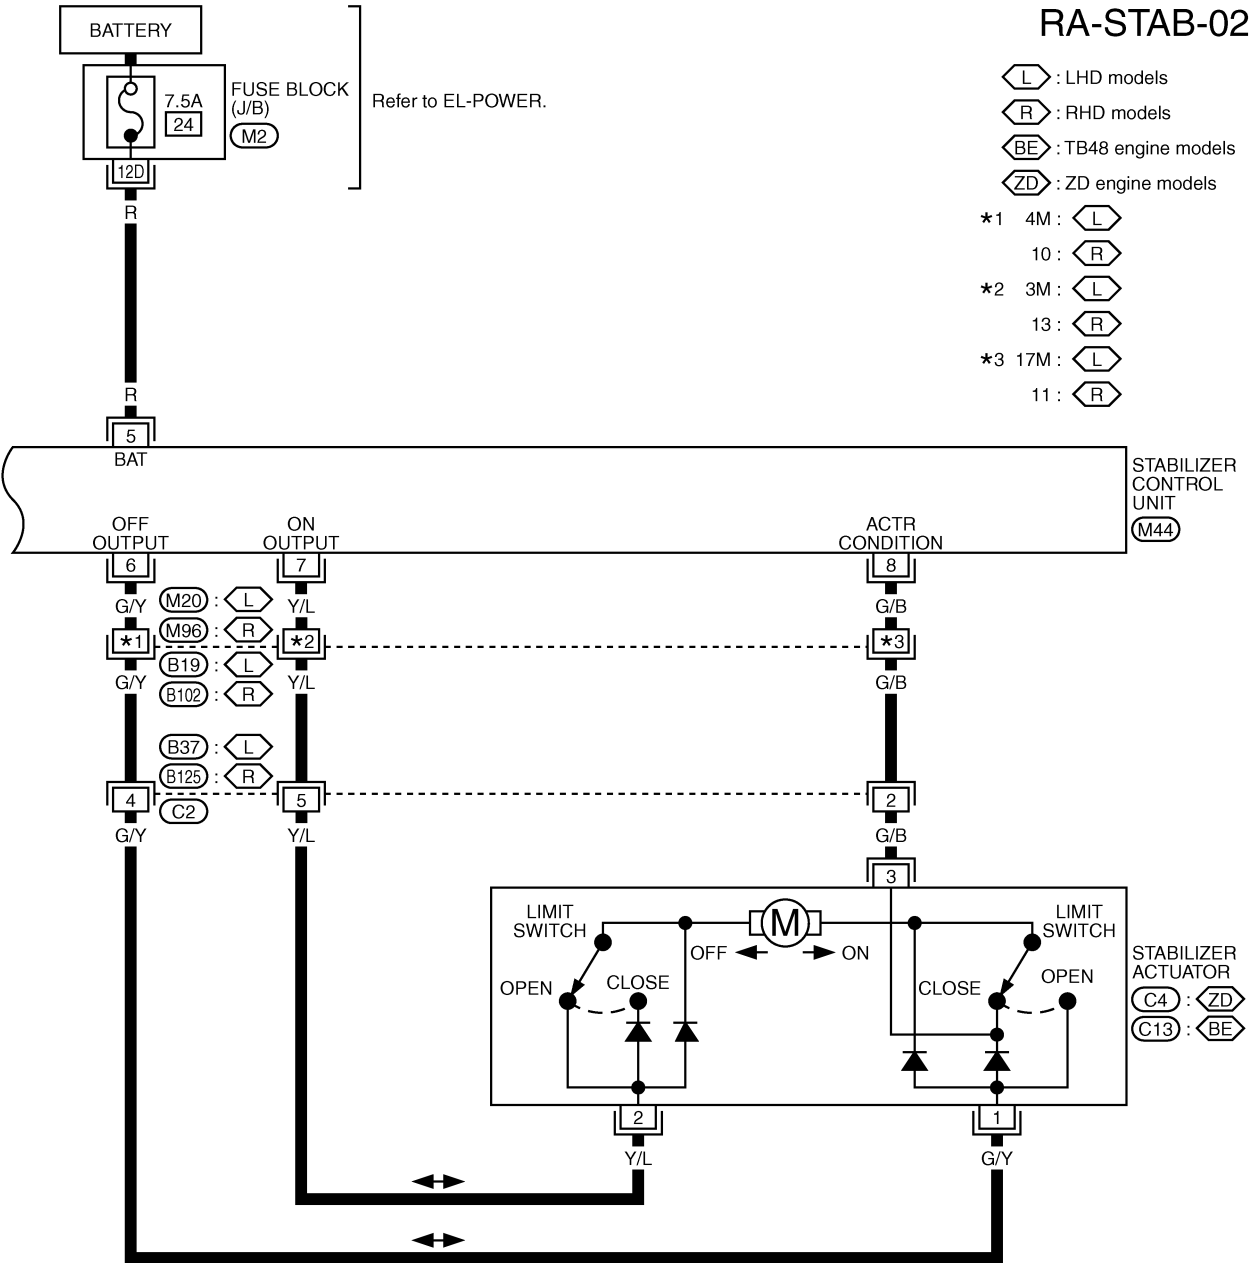

Refer to last page (Foldout page).  
M20, B19  
M2