


MODIFICATION NOTICE:

Air bag system wiring diagram has been changed.



CONTENTS

TROUBLE DIAGNOSES - Supplemental		
Restraint System (SRS)	2	Wiring Diagram - SRS -/LHD Models..... 3
Schematic	2	Wiring Diagram - SRS -/RHD Models..... 7

Schematic

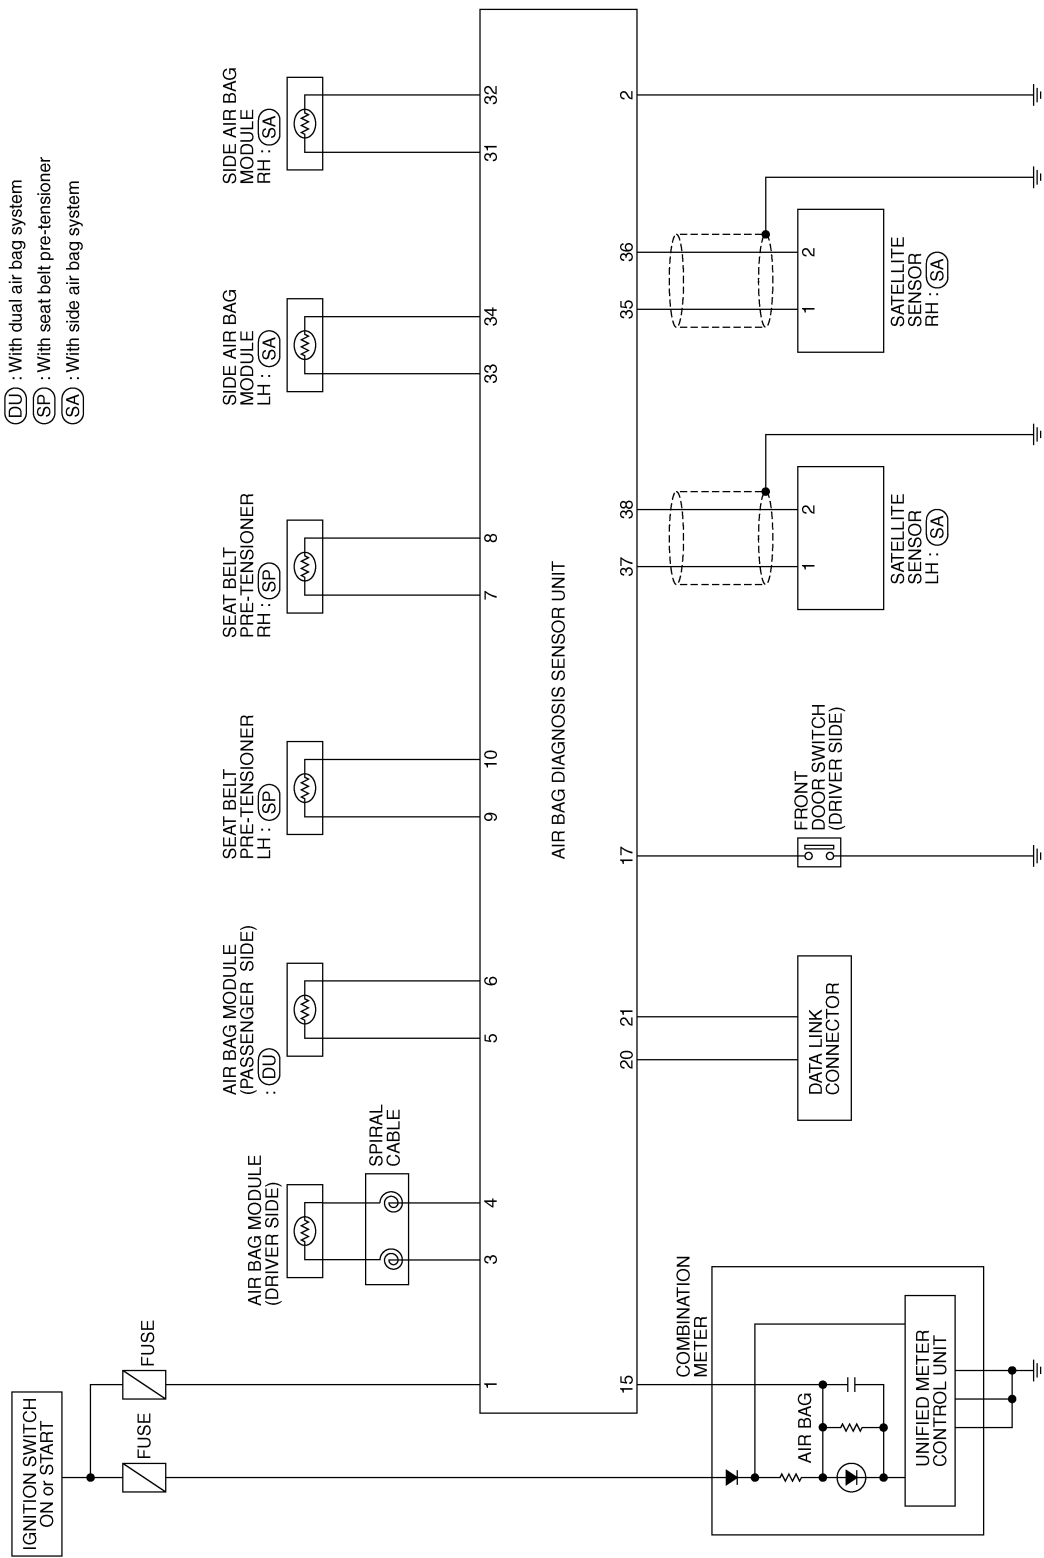

RS-SRS-02

  



RS-4

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)

Wiring Diagram — SRS —/LHD Models (Cont'd)

LHD MODELS WITH CONSULT-II (EXCEPT FOR TD ENGINE MODELS WITH NATS)

RS-SRS-04


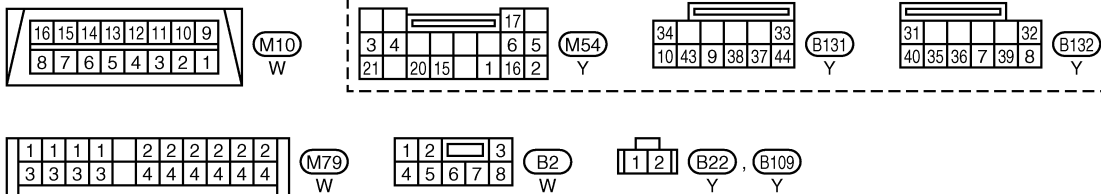
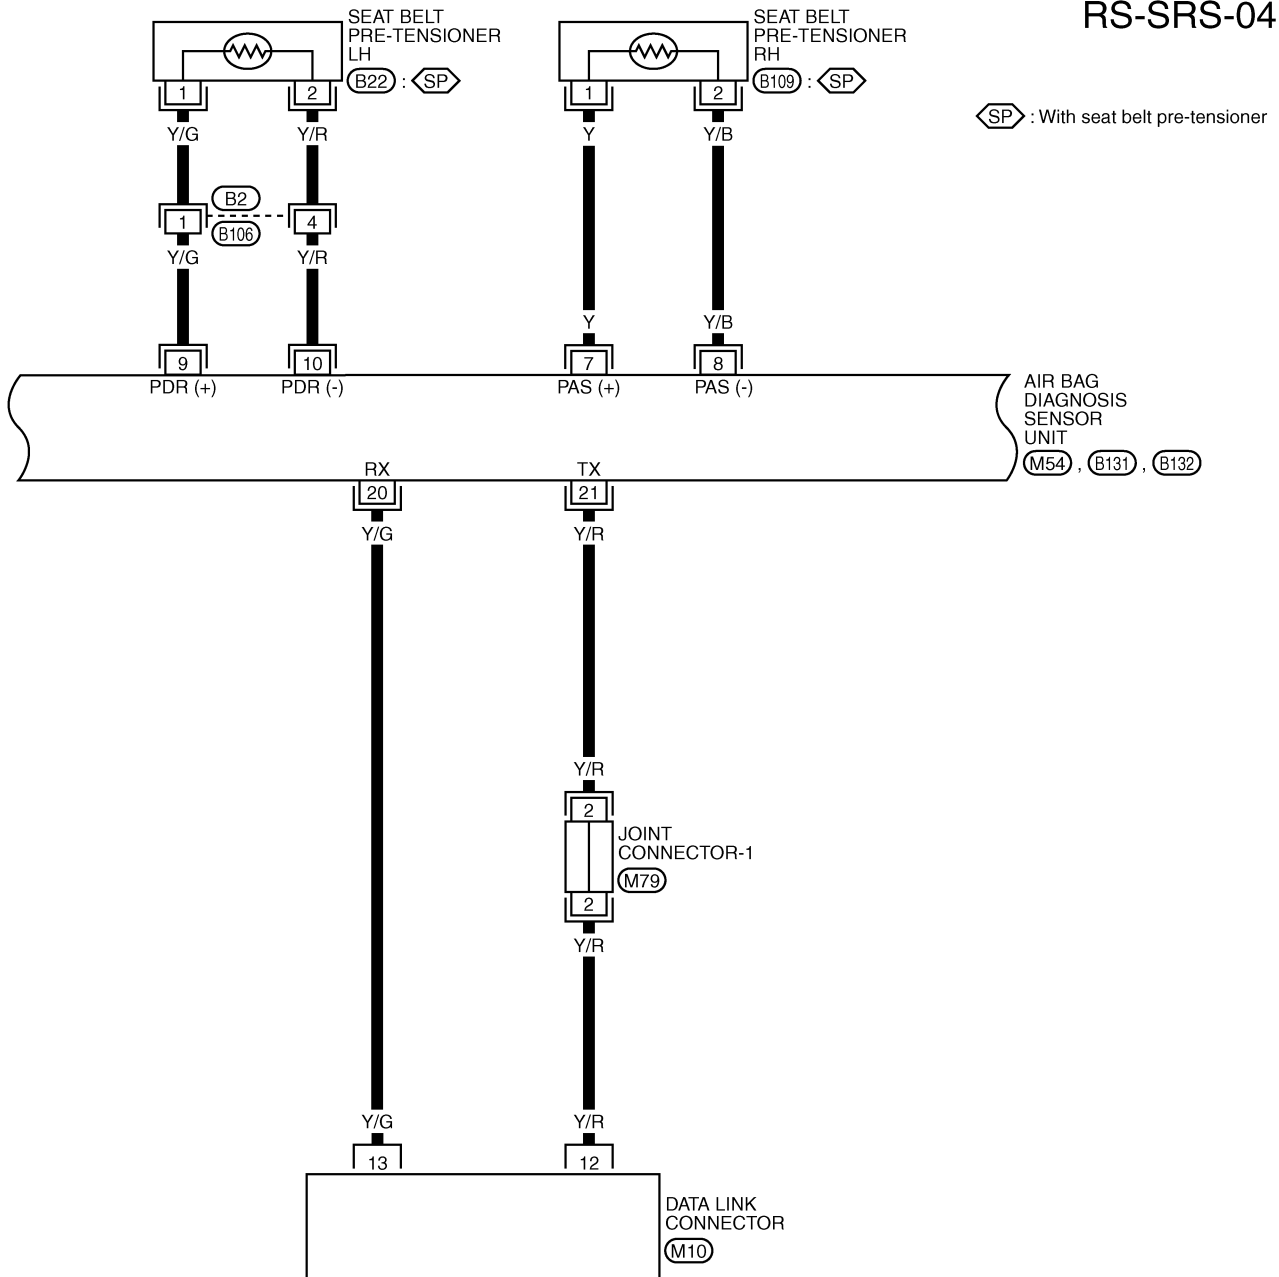


TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)

Wiring Diagram — SRS —/LHD Models (Cont'd)

RS-SRS-05

 
 

◻ SA : With side air bag system

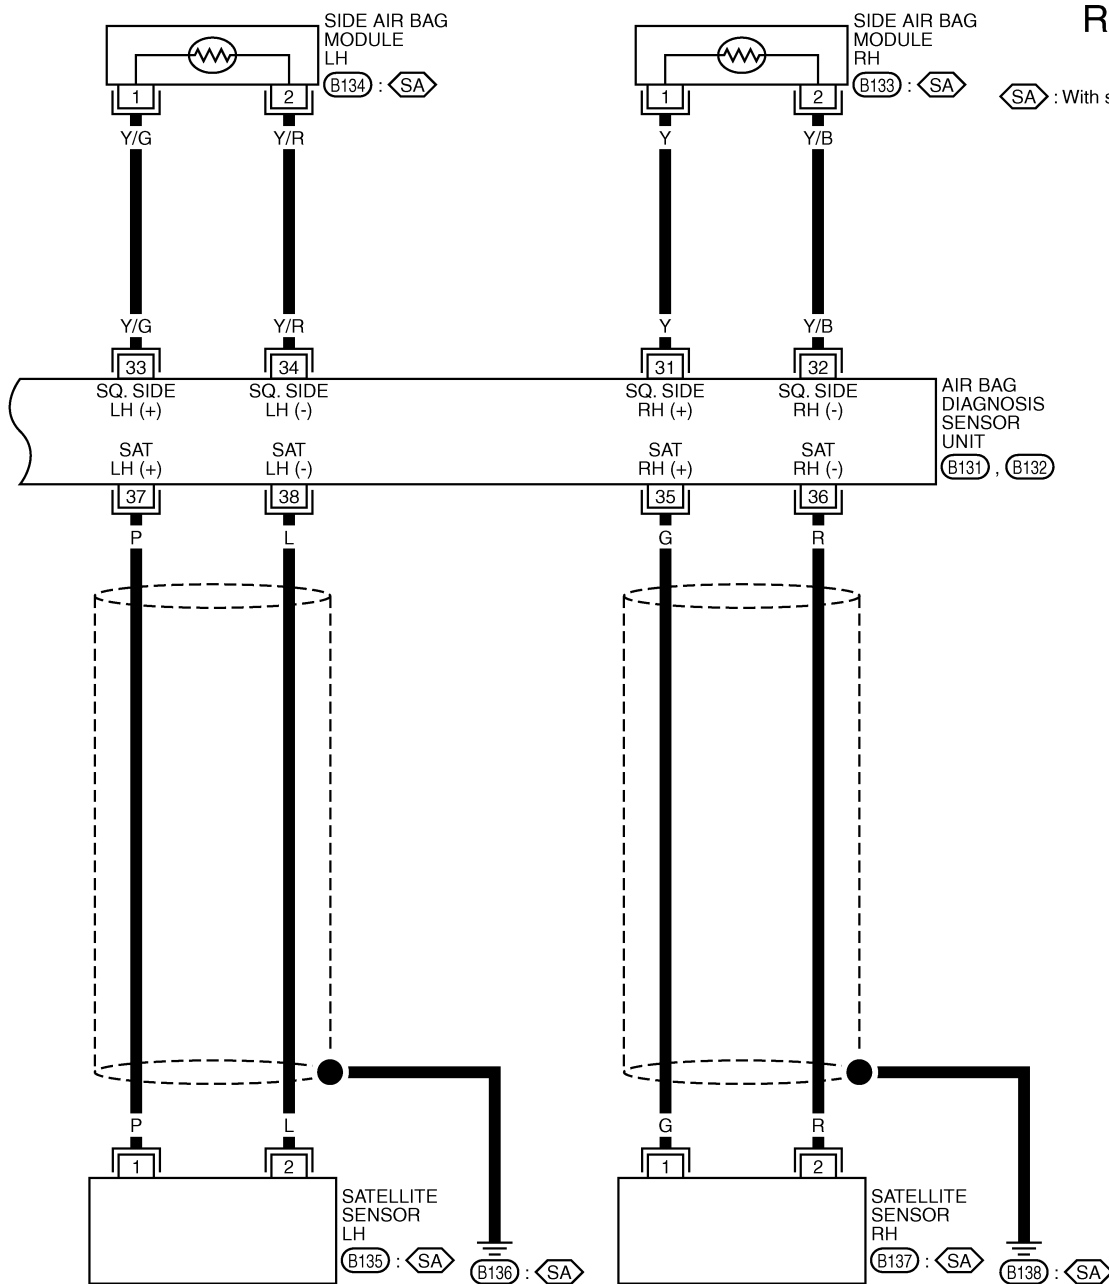

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)

Wiring Diagram — SRS —/RHD Models (Cont'd)

  RS-SRS-07

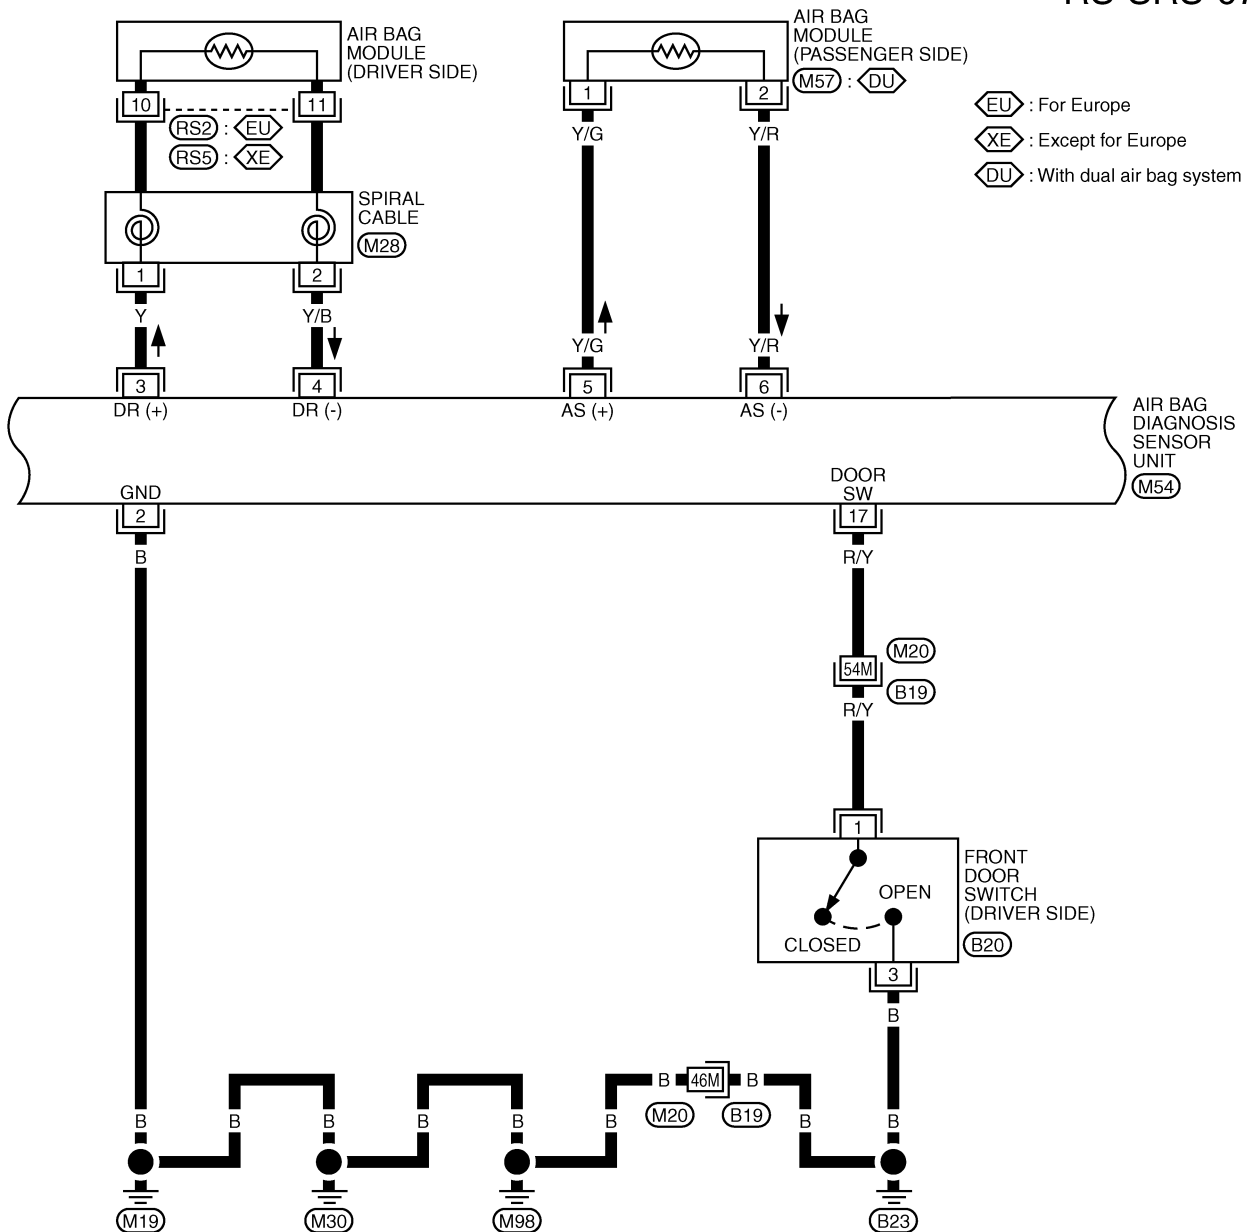

Refer to last page (Foldout page).

(M20), (B19)

 
 
 

★: This connector is not shown in "HARNESS LAYOUT", EL section.

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)

Wiring Diagram — SRS —/RHD Models (Cont'd)

RHD MODELS WITH CONSULT-II (EXCEPT FOR TD ENGINE MODELS WITH NATS)

RS-SRS-09

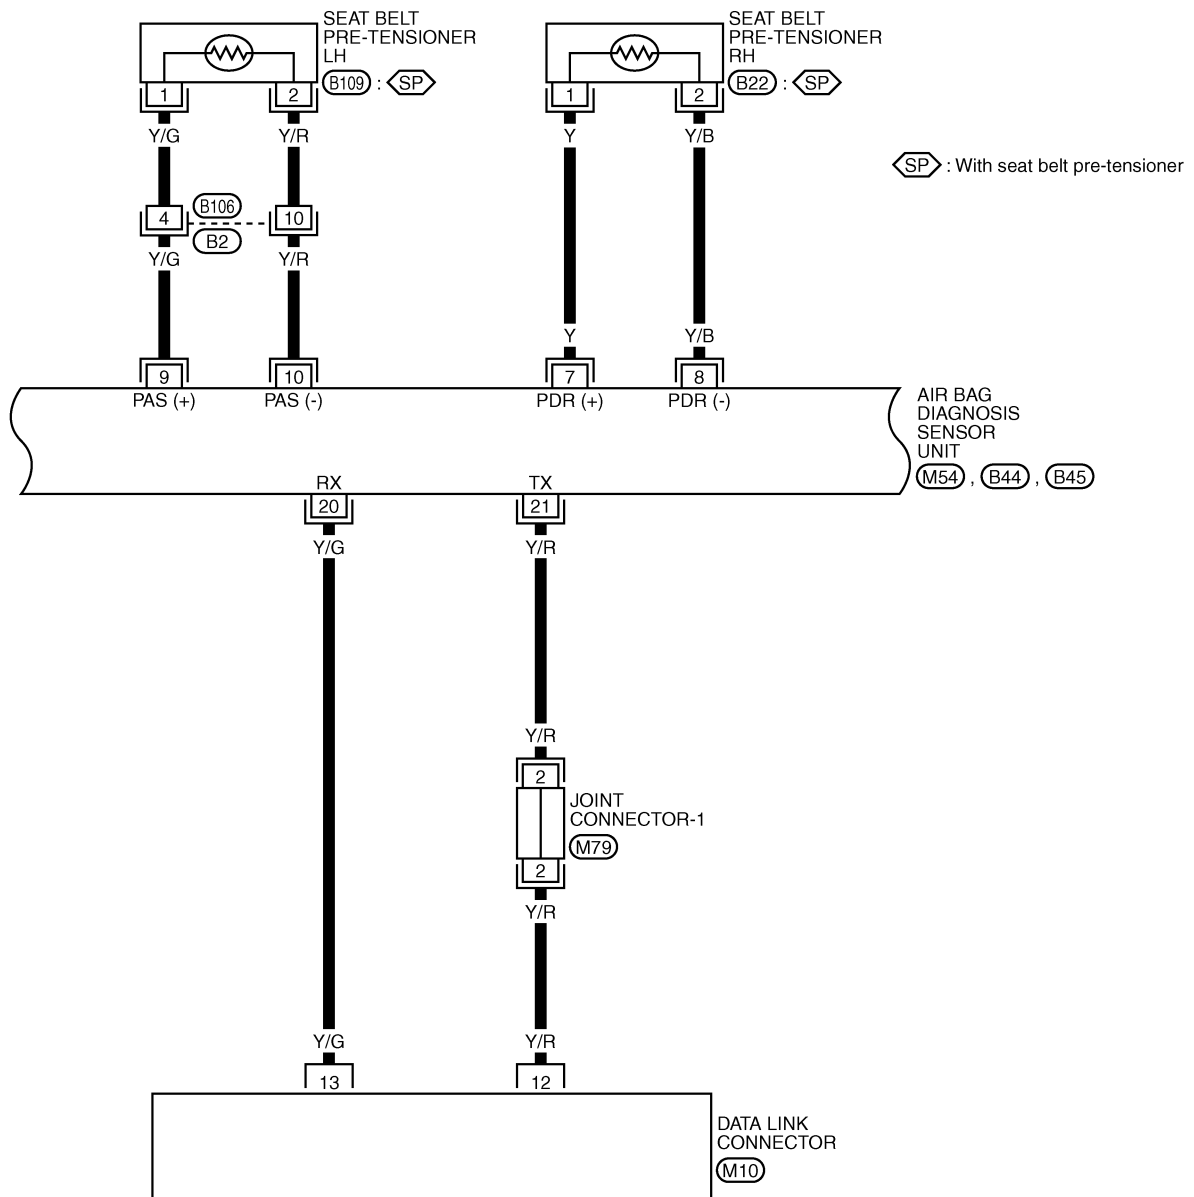

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)

Wiring Diagram — SRS —/RHD Models (Cont'd)

RS-SRS-10

 : With side air bag system

