


## SUPER MULTIPLE JUNCTION (SMJ)

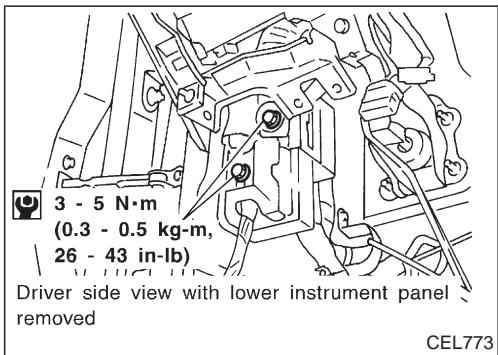

### LHD MODELS

#### Installation




To install SMJ, tighten bolts until orange "fulltight" mark appears and then retighten to specified torque as required.

: 3 - 5 N·m

(0.3 - 0.5 kg-m, 26 - 43 in-lb)

#### CAUTION:

Do not overtighten bolts, otherwise, they may be damaged.

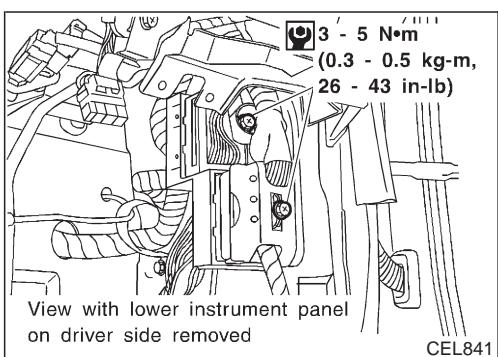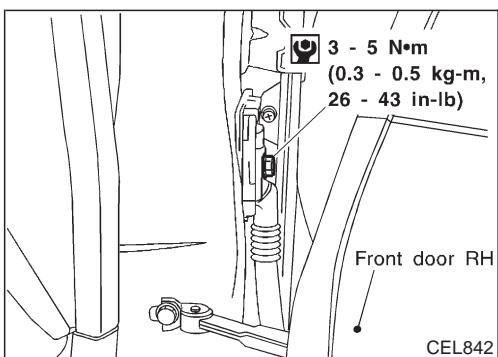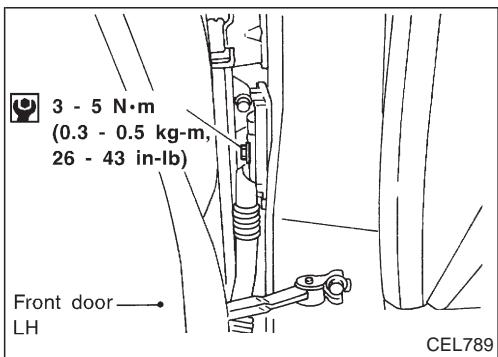

### RHD MODELS

#### Installation

To install SMJ, tighten bolts until orange "fulltight" mark appears and then retighten to specified torque as required.

: 3 - 5 N·m


(0.3 - 0.5 kg-m, 26 - 43 in-lb)

#### CAUTION:


Do not overtighten bolts, otherwise, they may be damaged.

# SUPER MULTIPLE JUNCTION (SMJ)

## Terminal Arrangement

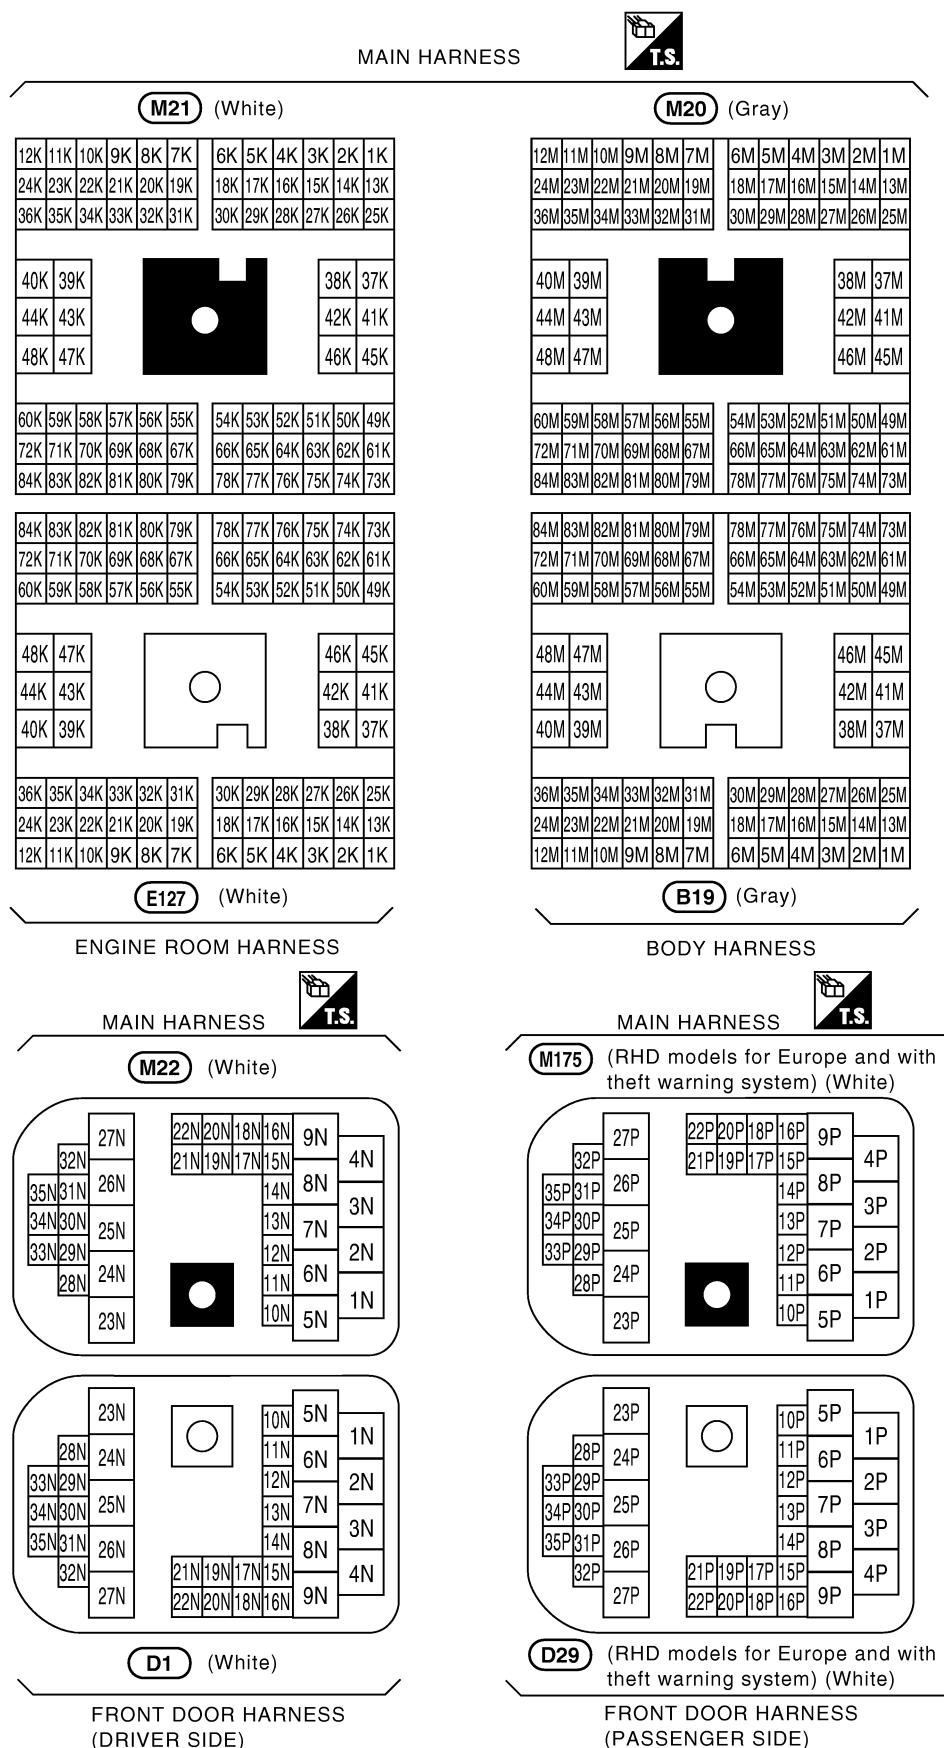

## Terminal Arrangement

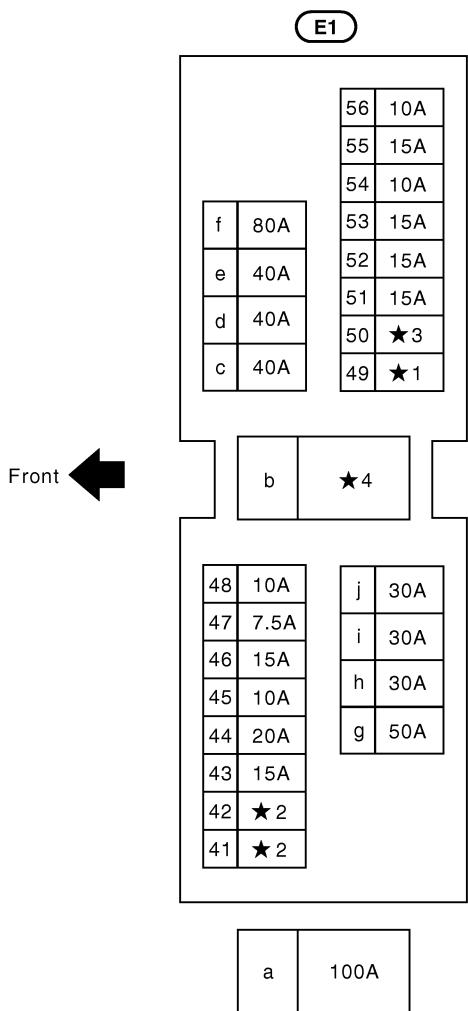

No. 41 - 56: FUSE  
a - j: FUSIBLE LINK

- ★1 7.5A: TB45E engine models  
15A: TB48 engine models  
20A: TD engine models with NATS and ZD engine models
- ★2 20A: With xenon headlamp  
7.5A: LHD models for Europe
- ★3 7.5A: TB45E engine models  
10A: TB48 and ZD engine models
- ★4 120A: Gasoline engine models  
100A: Diesel engine models
- ★5 10A: LHD models  
15A: RHD models

