

<SUPPLEMENT-IV>

ALPHABETICAL INDEX

SECTION **IDX**

ALPHABETICAL INDEX

A

A/C operational checkHA-4032
A/C self-diagnoses (auto A/C).....HA-4025
A/C, A - Wiring diagramHA-4009
A/CCUT - Wiring diagramEC-4058
Air cleaner filter replacement.....MA-4003
Air flow meter - See Mass air flow
sensorEC-4047
Air mix. door motor.....HA-4036
Antenna.....EL-4164
ASCD (automatic speed control
device).....EL-4233
ASCD - Wiring diagramEL-4234
A/T - Wiring diagramAT-4003
A/T trouble diagnosesAT-4011
A/T Wiring diagram AT - NONDTCAT-4012
AudioEL-4136
AUDIO - Wiring diagramEL-4137
Audio and A/C control removal and
installation - See Instrument panelBT-4006
Auto air conditioner - Wiring diagramHA-4009
Automatic speed control system - See
ASCDEL-4233
AV and NAVI control unitEL-4164

B

Back-up lampEL-4055
BACK/L - Wiring diagram.....EL-4055
Blower motorHA-4038
Bumper, frontBT-4002
Bumper, rearBT-4005

C

Camshaft.....EM-4003
CHIME - Wiring diagramEL-4113
Combination meter.....EL-4095
Combination meter removal and instal-
lation - See Instrument panel.....BT-4006
Combination switch.....EL-4034
COMPAS - Wiring diagramEL-4099
Console box - See Instrument panel.....BT-4006
CONSULT-II general information.....GI-4002
Cruise control - See ASCDEL-4233
Cylinder head.....EM-4016

D

Daytime light system.....EL-4047
DEF - Wiring diagramEL-4126
DEICER - Wiring diagram.....EL-4125
DimensionsGI-4008
D/LOCK - Wiring diagramEL-4245

Dome light - See Interior lampEL-4088
DTRL - Wiring diagramEL-4047

E

ECM input/output signalEC-4040
Electrical load signal circuit ...EC-4008, 4016, 4025
Electrical units locationEL-4300
Engine control circuit
diagramEC-4003, 4005, 4013,
4022, 4037, 4059
Exhaust systemFE-4008
Exterior.....BT-4009

F

F/FOG - Wiring diagramEL-4061
FICD - Wiring diagramEC-4036
Fog lamp, front.....EL-4061
Fog lamp, rearEL-4064
Front bumperBT-4002
Front fog lamp.....EL-4061
Front washerEL-4117
Front wiperEL-4117
Fuel gaugeEL-4095
Fuse.....Foldout
Fusible link.....Foldout

G

Gauges.....EL-4095
GLOW - Wiring diagram.....EC-4033
GPS antennaEL-4164
Ground distribution.....EL-4016

H

Harness layout.....EL-4307, 4308
Headlamp.....EL-4040
Headlamp washerEL-4122
Heat up switch.....EC-4054
Heated seat.....EL-4231
HEATUP - Wiring diagramEC-4054
Height (Dimensions)GI-4008
H/LAMP - Wiring diagramEL-4040
HLC - Wiring diagramEL-4122
Hood.....BT-4002
HornEL-4124
HORN - Wiring diagram.....EL-4124
HSEAT - Wiring diagram.....EL-4231

I

ILL - Wiring diagramEL-4080

ALPHABETICAL INDEX

IlluminationEL-4079
Instrument panelBT-4006
Intake door motorHA-4037
Interior lampEL-4088

K

Keyless entry system - See Multi-remote control system.....EL-4264

L

Length (Dimensions)GI-4008
License lamp.....EL-4049
Line pressure test (A/T)AT-4014
LOAD - Wiring diagramEC-4008, 4016, 4025
Location of electrical unitsEL-4300

M

MAFS - Wiring diagram.....EC-4049
Magnet clutch.....HA-4039
Maintenance.....MA-4003
Maintenance (engine)MA-4003
Major overhaul (Transfer)TF-4002, 4003
Mass air flow sensor (MAFS).....EC-4047
MeterEL-4095
METER - Wiring diagram.....EL-4097
MIRROR - Wiring diagram.....EL-4227
Mode door motorHA-4035
Model variationGI-4005
MULTI - Wiring diagramEL-4264, 4266
Multi-remote control system.....EL-4264

N

NATS (Nissan anti-theft system)EL-4293, 4295
NATS - Wiring diagramEL-4293, 4295, 4297
NAVI - Wiring diagramEL-4175
Navigation System.....EL-4162

P

P/ANT - Wiring diagram.....EL-4159
Parking lamp.....EL-4049
POWER - Wiring diagram.....EL-4006
Power door lock.....EL-4244
Power supply routingEL-4005
Power window.....EL-4238
Pressure test (A/T).....AT-4014

Q

Quick-glow systemEC-4031

R

Radio - See Audio.....EL-4136
R/COOL - Wiring diagram (front auto A/C).....HA-4055
R/COOL - Wiring diagram (front manual A/C).....HA-4057
Rear bumperBT-4005
Rear seatBT-4012
Rear seat belt.....RS-4013
Rear window defogger.....EL-4126
REMOTE - Wiring diagram.....EL-4155
R/FOG - Wiring diagram.....EL-4064
R/HEAT - Wiring diagram.....HA-4003
Road wheel sizeGI-4009
Room lamp - See Interior lampEL-4088
ROOM/L - Wiring diagramEL-4089

S

Seat belt, rear.....RS-4013
Seat, rearBT-4012
Seat, second (2nd)BT-4012
Second (2nd) seatBT-4012
Shift schedule.....AT-4014
SMJ (super multiple junction).....Foldout
Speedometer.....EL-4095
SRS - Wiring diagramRS-4003
STAB - Wiring diagramRA-4002
Stabilizer release deviceRA-4002
Stabilizer release device - Wiring diagram.....RA-4002
Stall test (A/T)AT-4014
S/TANK - Wiring diagramFE-4004
Steering switch.....EL-4036
Stop lamp.....EL-4059
STOP/L - Wiring diagram.....EL-4059
Sub fuel tank control systemFE-4002
Super lock.....EL-4290
Supplemental restraint system - Wiring diagram.....RS-4003

T

TachometerEL-4095
Tail lamp.....EL-4049
TAIL/L - Wiring diagramEL-4049
TCM circuit diagram.....AT-4002, 4011
Telephone.....EL-4161
THEFT - Wiring diagramEL-4279, 4284
Theft warning system.....EL-4278

ALPHABETICAL INDEX

Tire sizeGI-4009
Tread-FR&RR (Dimensions).....GI-4008
TRQ/SG - Wiring diagram.....EC-4015, 4024
TURN - Wiring diagramEL-4068
Turn signal lampEL-4067

U

UNIFIED METER CONTROL UNIT
(TIME CONTROL SYSTEM).....EL-4292

V

Valve clearance.....EM-4005
Valve lifterEM-4003
Vehicle identification number.....GI-4007
Vehicle speed sensor (VSS)EC-4004, 4007,
4053, 4060
Viscosity number (SAE).....MA-4002

VSS - Wiring diagramEC-4004, 4053, 4060

W

WARN - Wiring diagramEL-4102
Warning chimeEL-4113
Warning lampsEL-4100
Washer, front.....EL-4117
Water temperature gaugeEL-4095
Wheel sizeGI-4009
Wheelbase (Dimensions)GI-4008
Width (Dimensions)GI-4008
WINDOW - Wiring diagramEL-4239
WIP/R - Wiring diagramEL-4118
WIPER - Wiring diagram.....EL-4117
Wiper deicer.....EL-4125
Wiper, front.....EL-4117
Wiring Diagram (Cell code) list.....EL-4347