

SECTION **RA**

- MODIFICATION NOTICE:**
- Wiring diagrams have been changed.

CONTENTS

 
 
 

STABILIZER RELEASE DEVICE.....4002
Wiring Diagram4002

STABILIZER RELEASE DEVICE

Wiring Diagram

LHD MODELS

RA-STAB-01

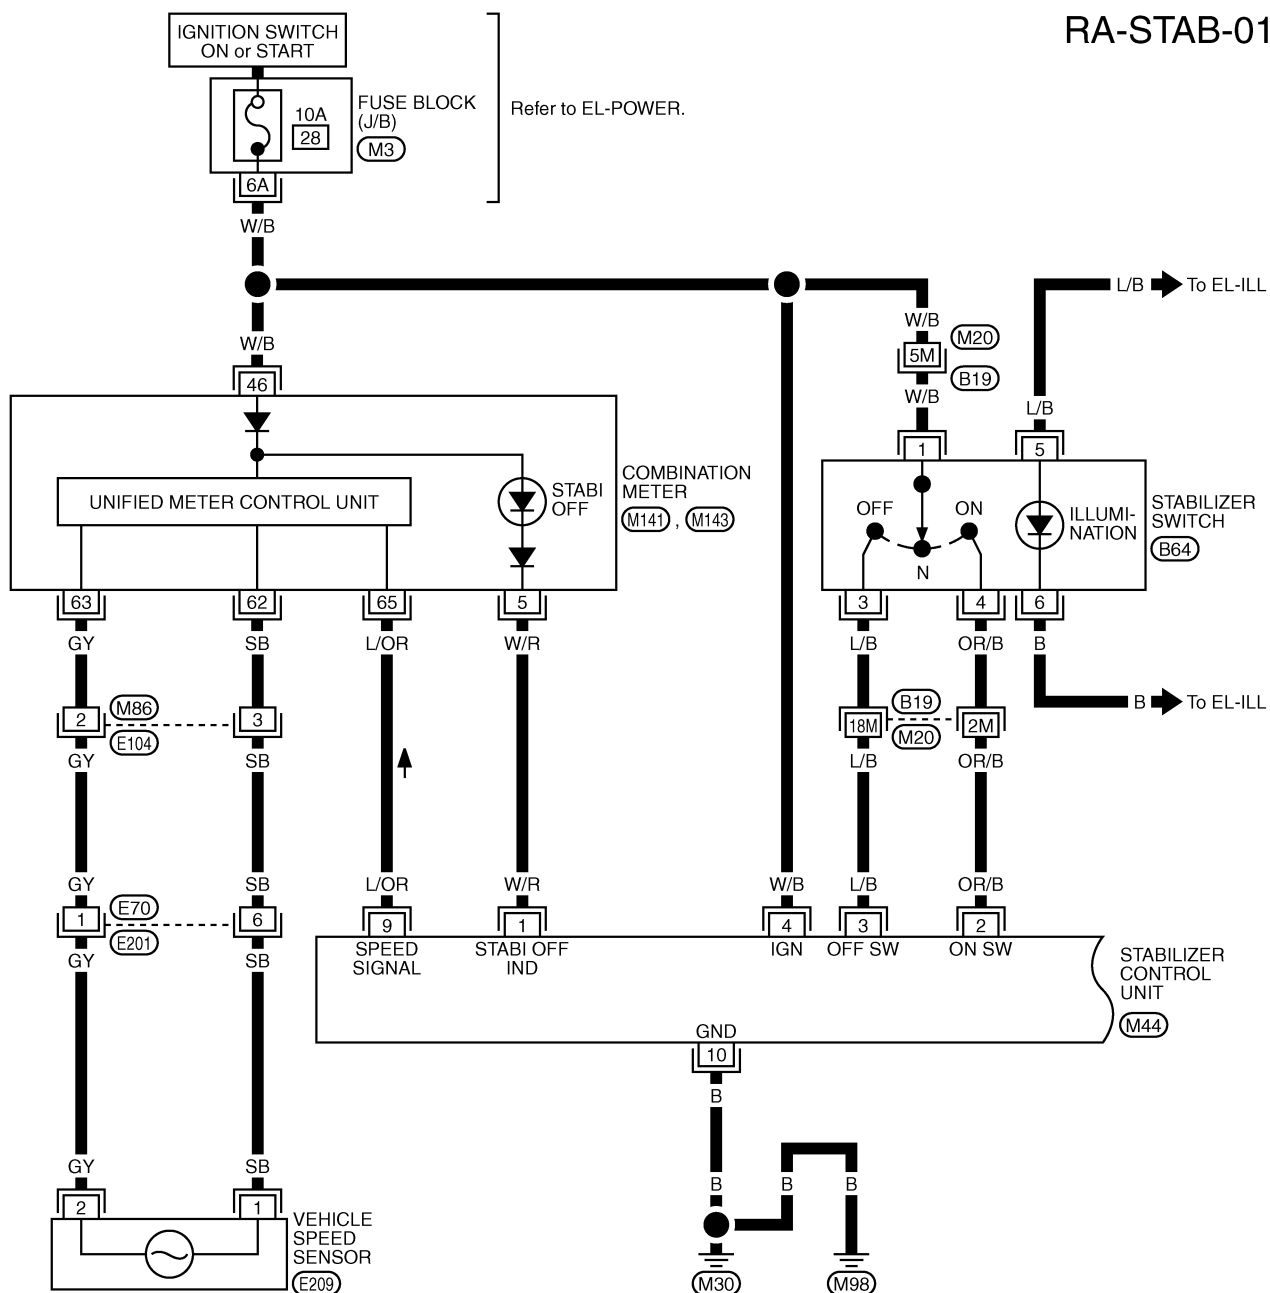

Refer to last page (Foldout page).

(M20), (B19)

M3

STABILIZER RELEASE DEVICE

 

Wiring Diagram (Cont'd)

LHD MODELS

RA-STAB-02

BE : TB48 engine models

ZD : ZD engine models

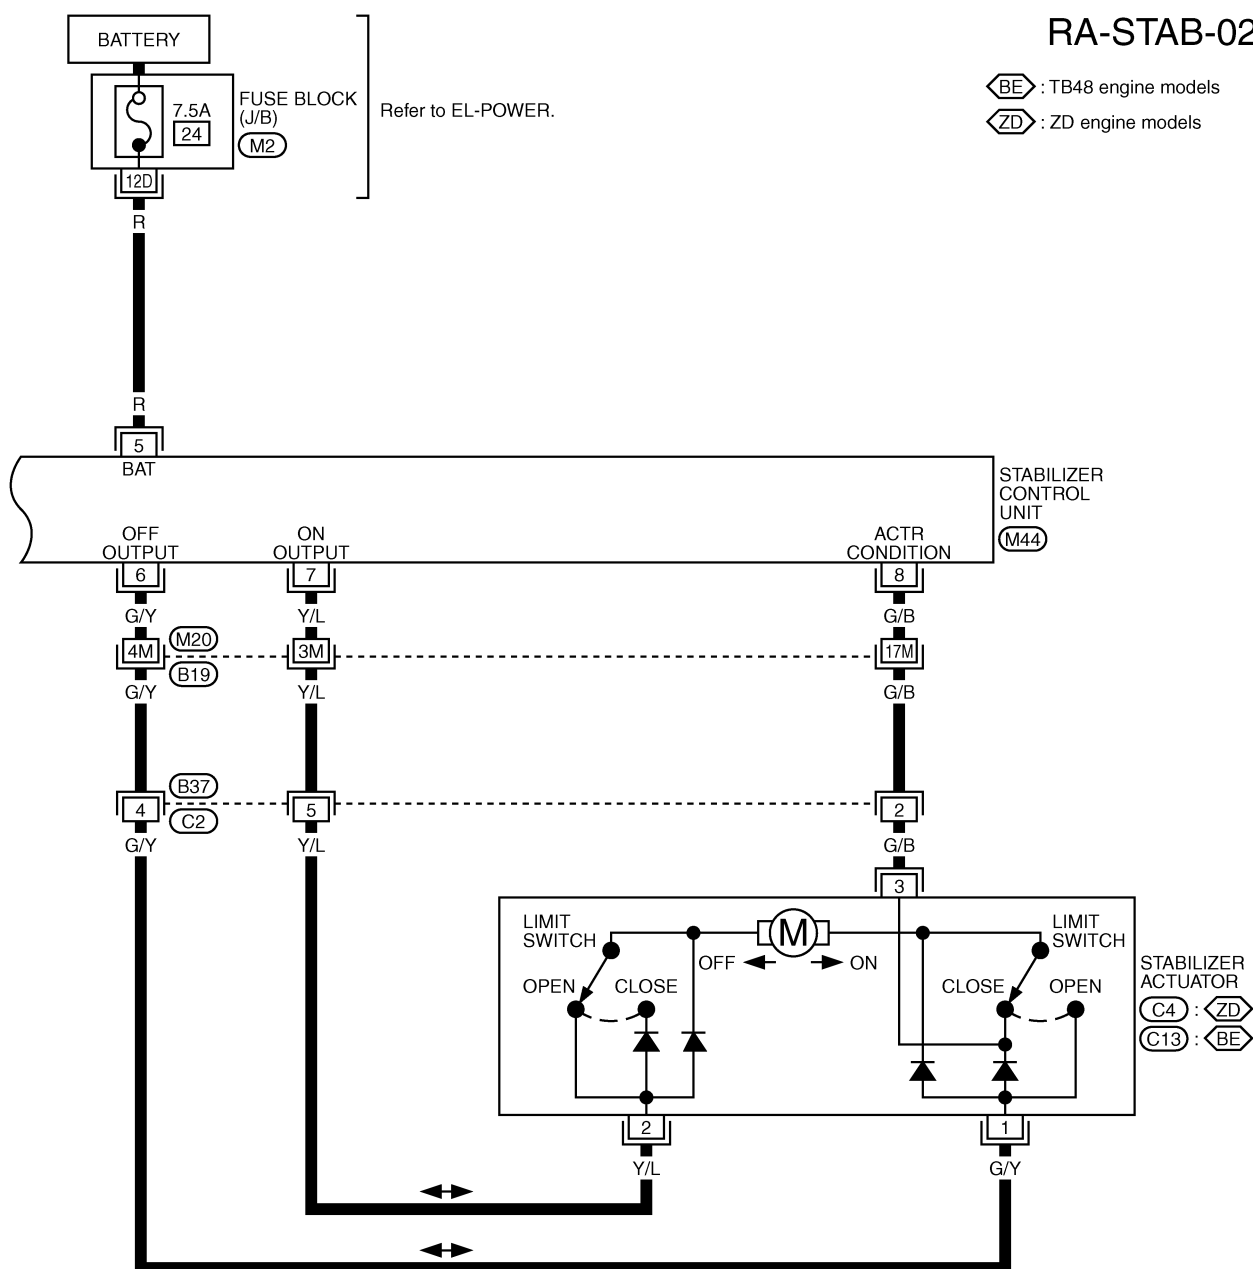

Refer to last page (Foldout page).


M20, B19
M2

STABILIZER RELEASE DEVICE

Wiring Diagram (Cont'd)

RHD MODELS

RA-STAB-03

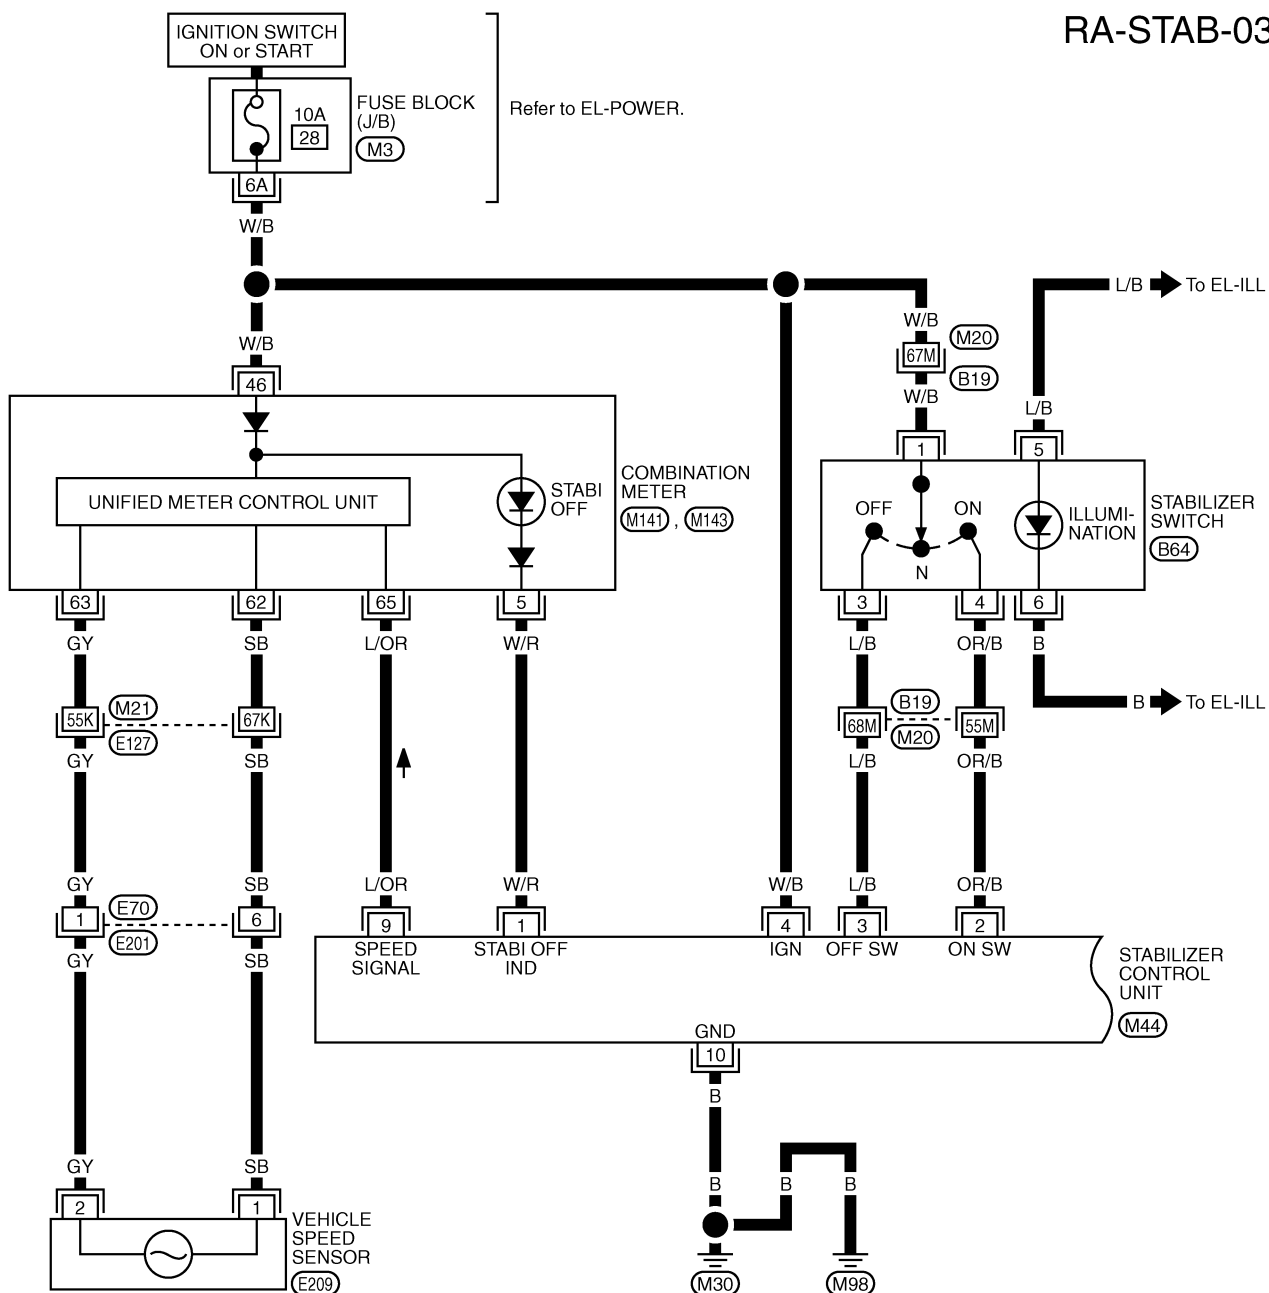

8	9	7		10	6
1	2	3		4	5

(M44)
W

1	2	3	4	5	6			7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22	23	24

(M141)
W

45	46	47	48	49	50			51	52	53	54	55
56	57	58	59	60	61	62	63	64	65	66	67	68

(M143)
BR

1 2 3 4 5 6 7 8 9 10	(E201) GY	2 1 (E209) GY	4 2 1 6 5 3 (B64) W
---	---	---	---

Refer to last page (Foldout page).

(M20), (B19)

(M21), (E127)

(M3)

TRA013M

 

RA-4004

STABILIZER RELEASE DEVICE

Wiring Diagram (Cont'd)

RHD MODELS

RA-STAB-04

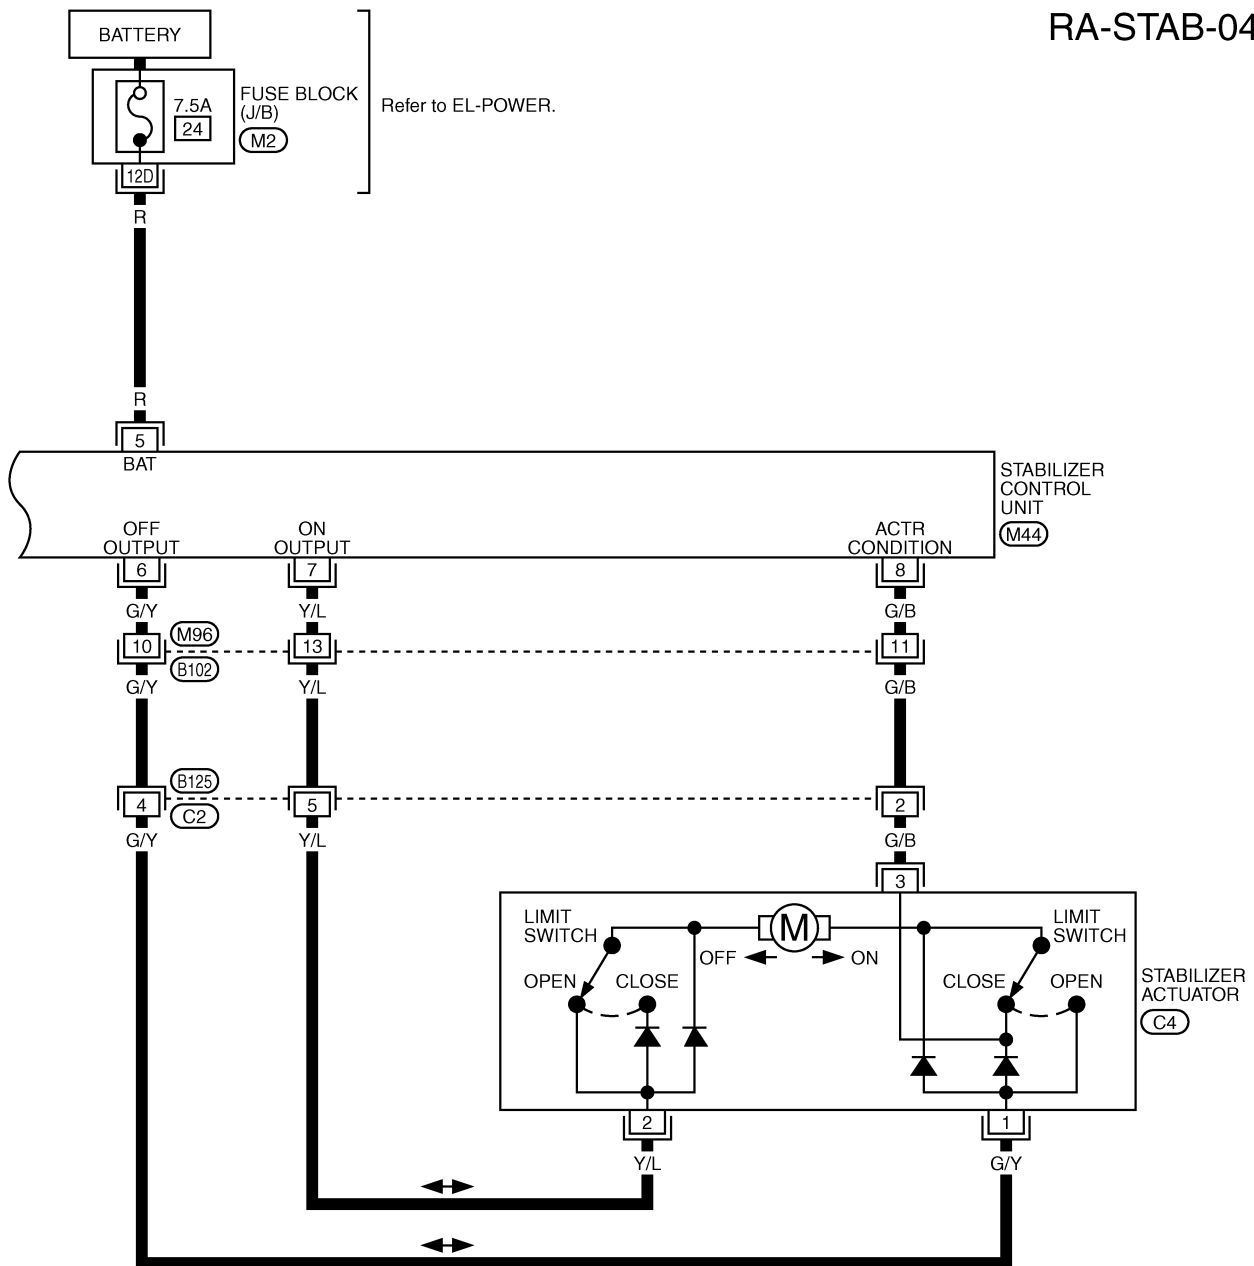

Refer to last page (Foldout page).

M2

TRA014M

RA-4005