

SECTION RS

MODIFICATION NOTICE:


- Air bag system wiring diagrams have been changed.
- Rear seat belt has been changed.

CONTENTS

TROUBLE DIAGNOSES — Supplemental	
Restraint System (SRS)	4002
Schematic	4002
Wiring Diagram — SRS — (LHD Models)	4003
Wiring Diagram — SRS — (RHD Models)	4008
SEAT BELTS	4013
Rear Seat Belt	4013



TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)

Schematic

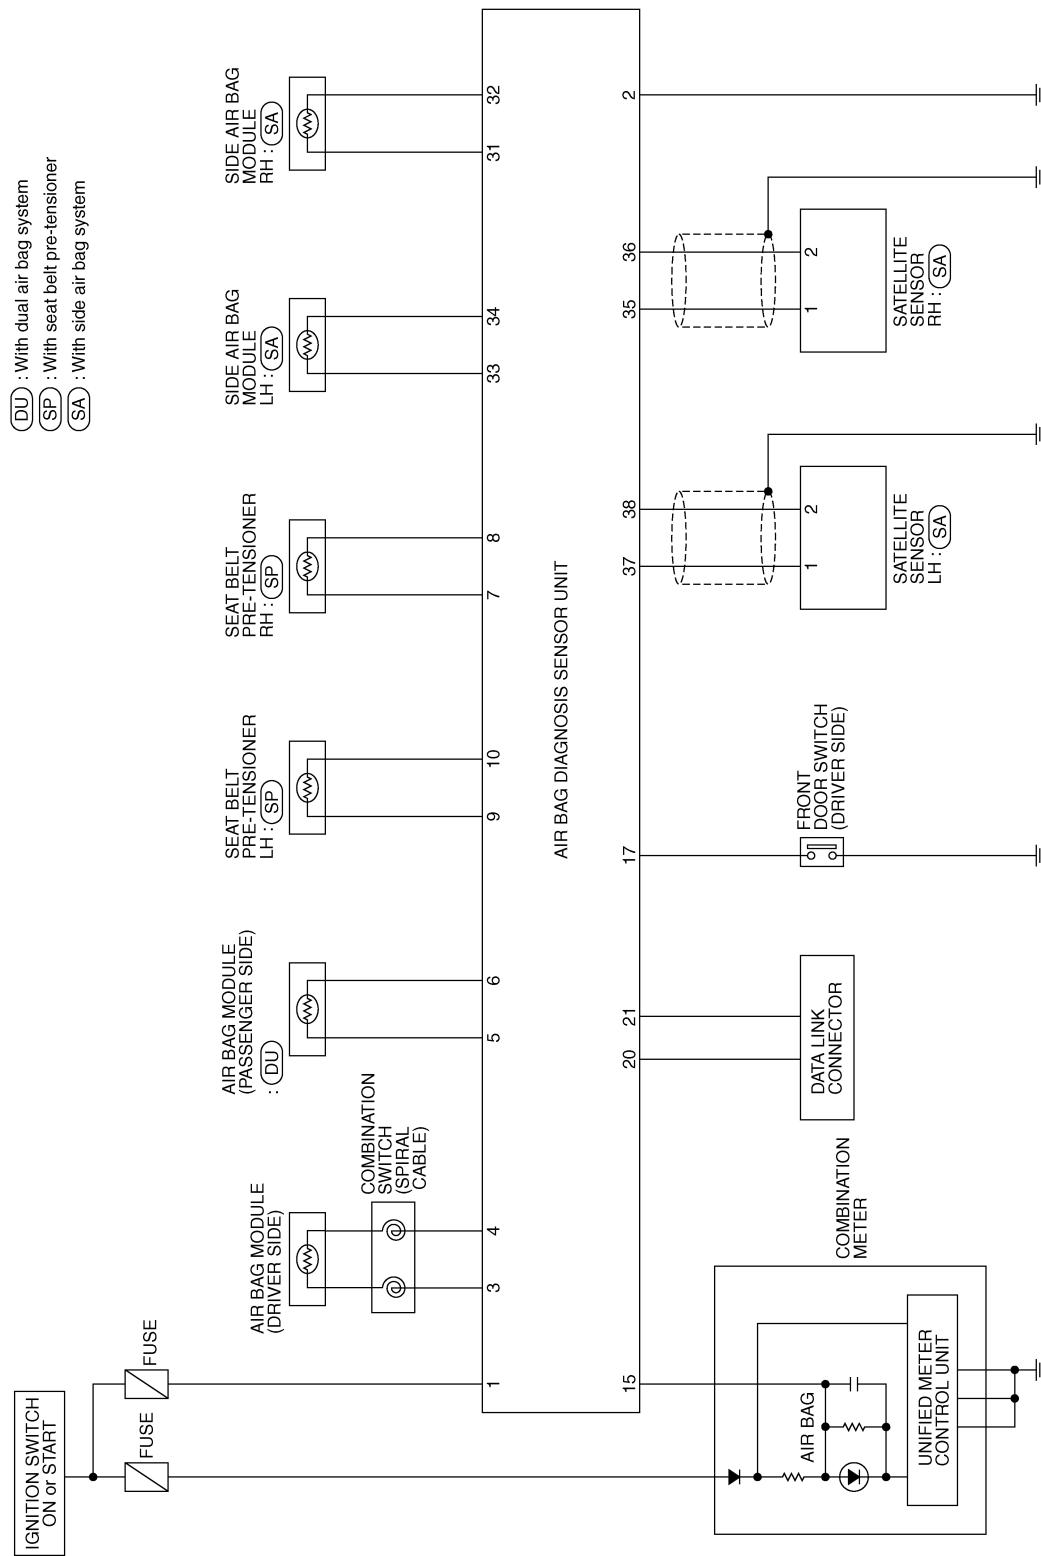


TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)

 Wiring Diagram — SRS — (LHD Models)

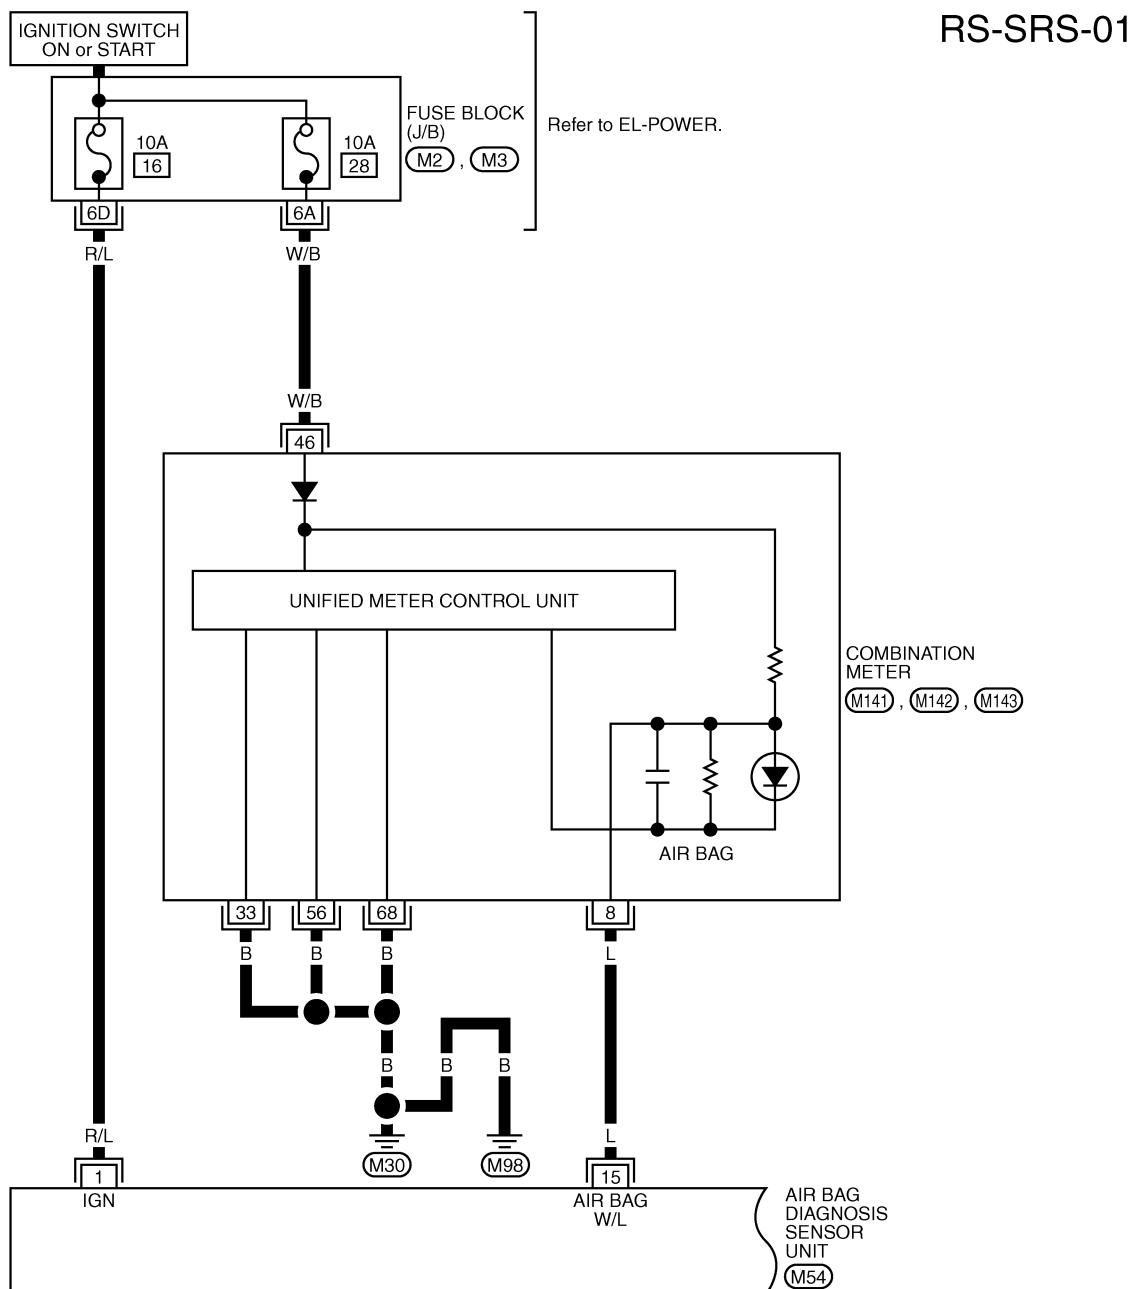






Refer to last page (Foldout page).
M2 , **M3**

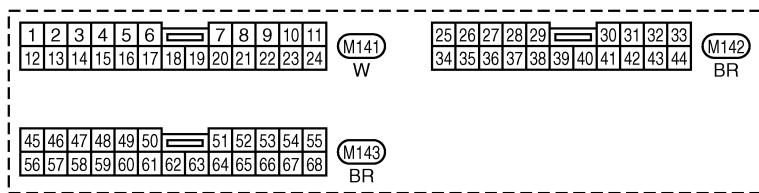

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)

Wiring Diagram — SRS — (LHD Models) (Cont'd)

    RS-SRS-02

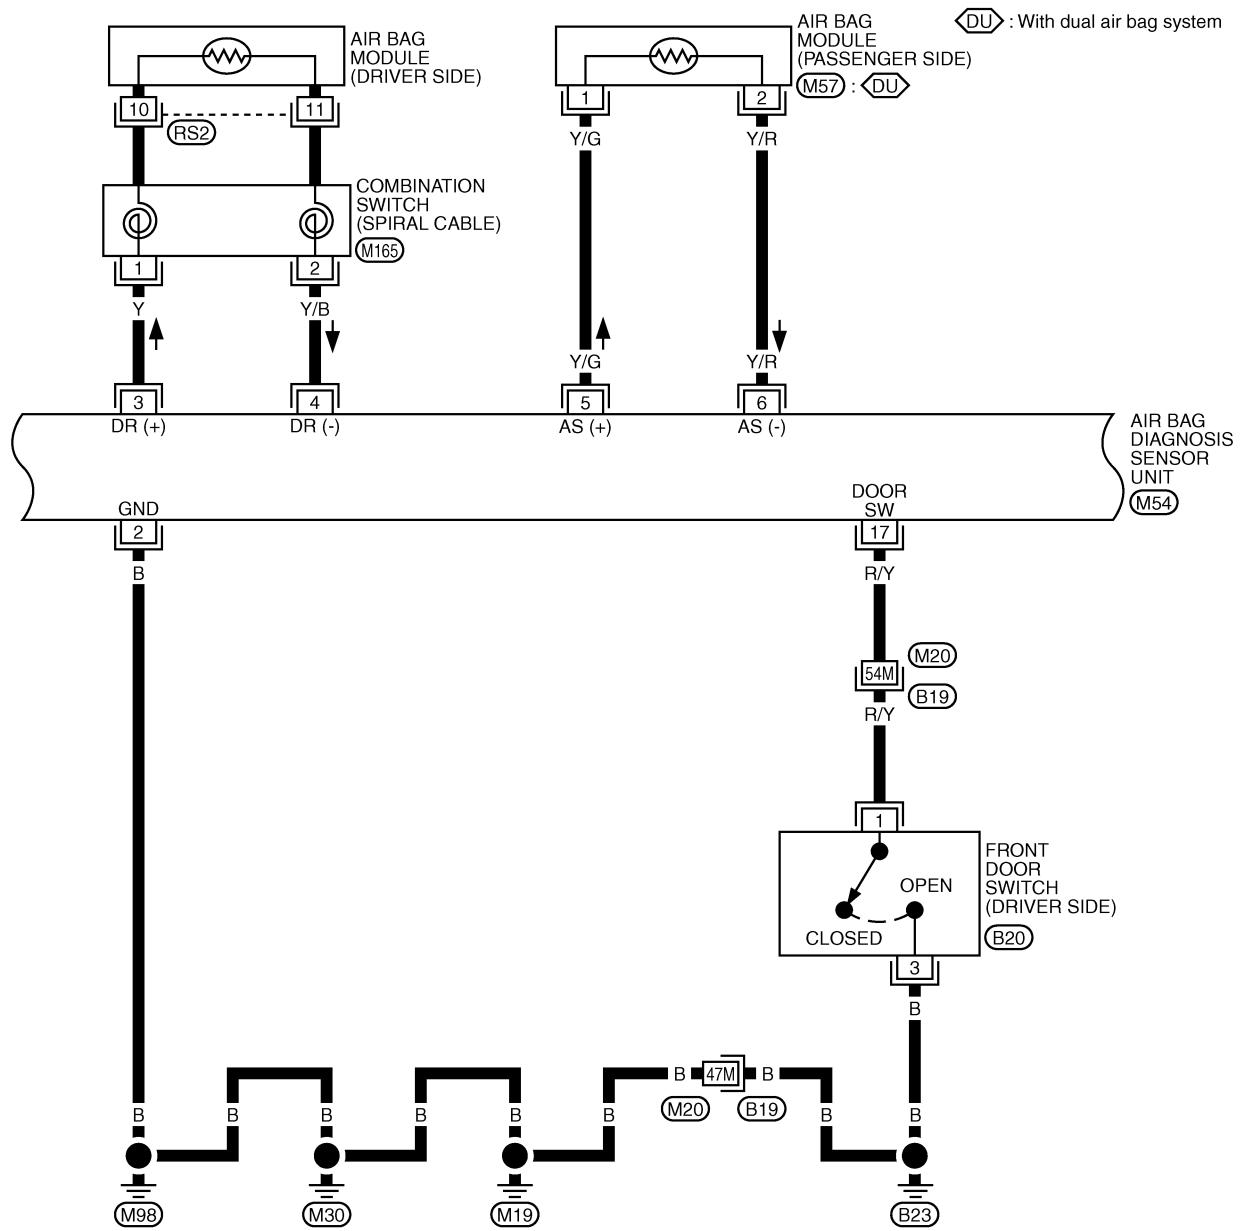


Refer to last page (Foldout page).
M20 , **B19**

*: This connector is not shown in "HARNESS LAYOUT", EL section.

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)

Wiring Diagram — SRS — (LHD Models) (Cont'd)

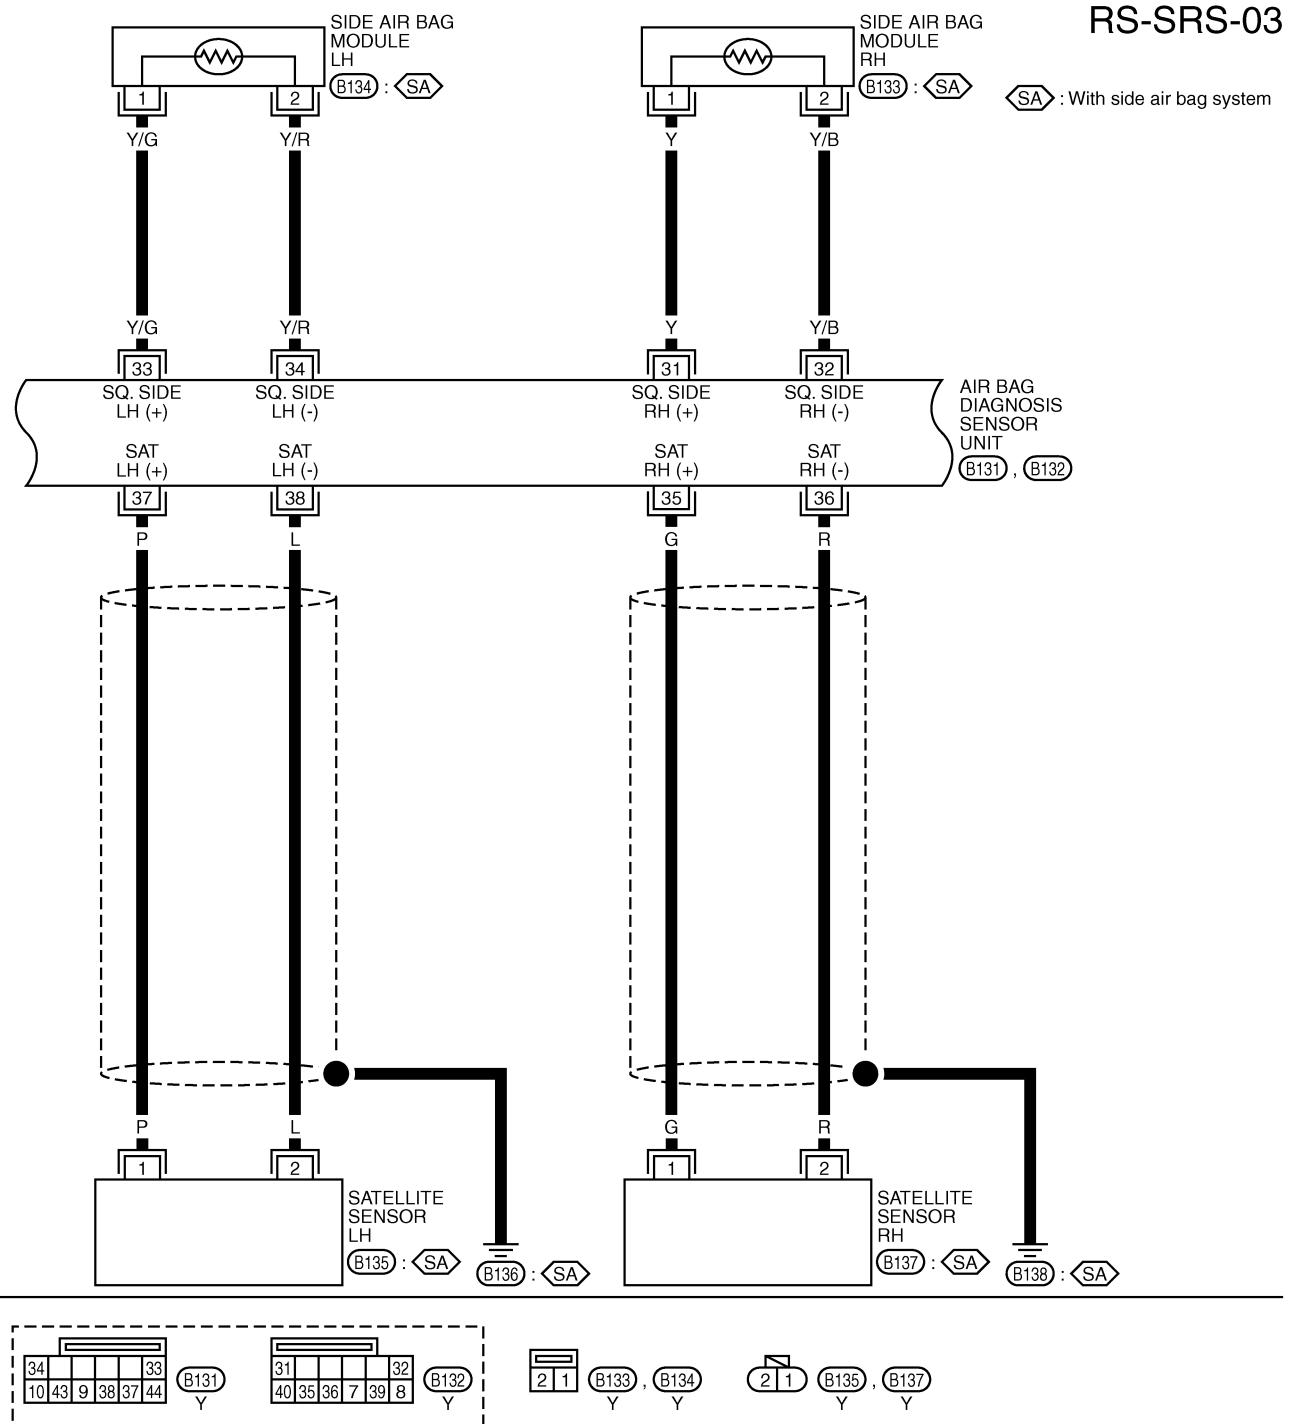

TRS083M

 
 
 
 
 

 
RS-4005

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)

Wiring Diagram — SRS — (LHD Models) (Cont'd)

TD ENGINE MODELS WITH NATS

RS-SRS-04

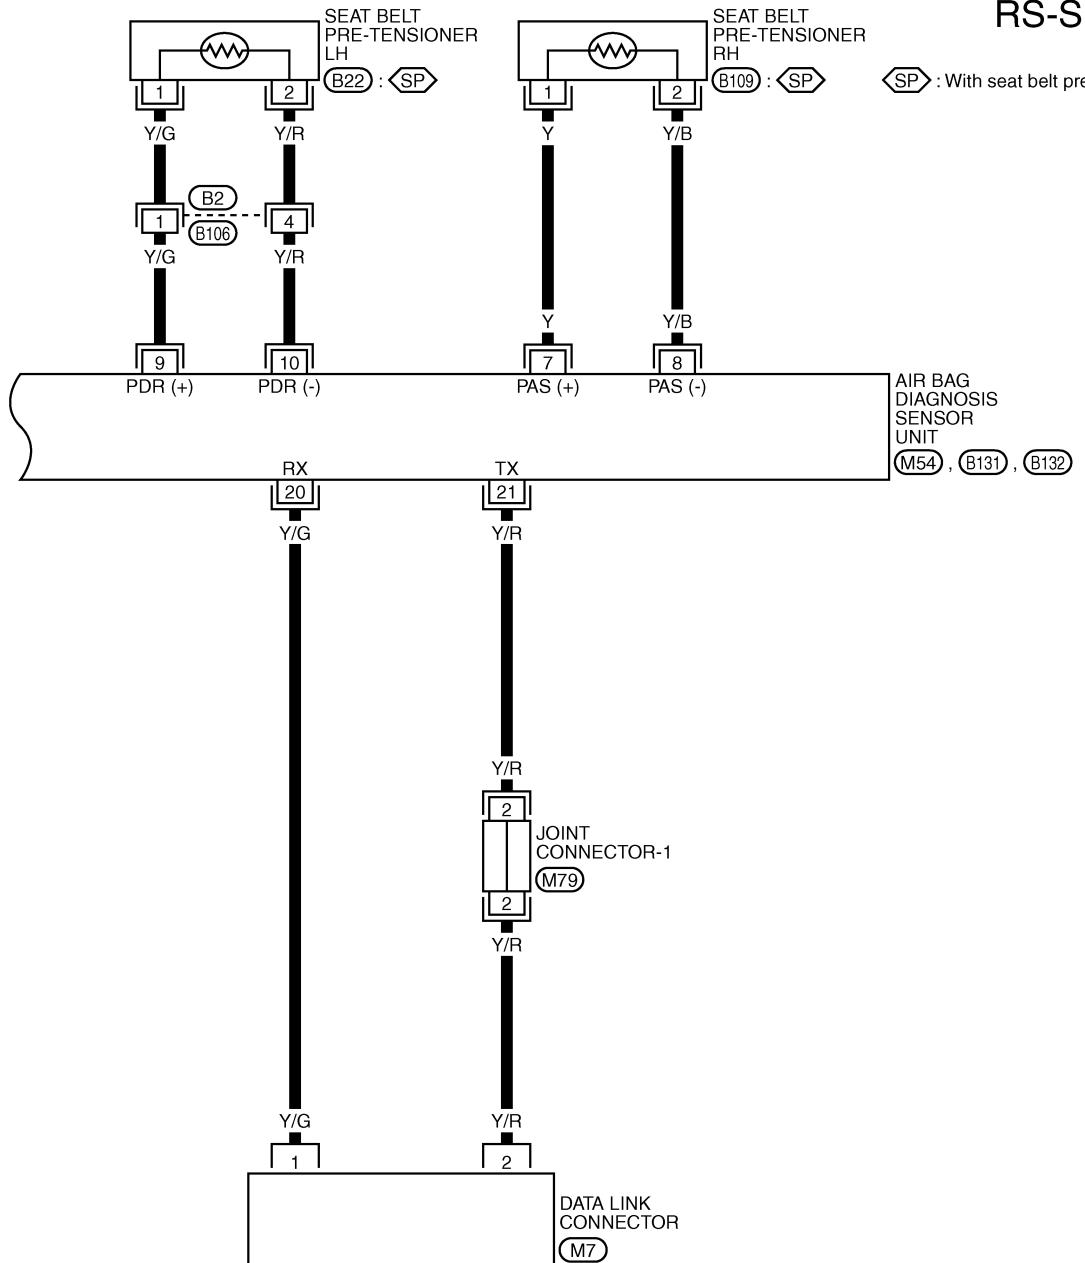

RS-4006

TRS084M


TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)

Wiring Diagram — SRS — (LHD Models) (Cont'd)

EXCEPT FOR TD ENGINE MODELS WITH NATS

RS-SRS-05

◀ SP : With seat belt pre-tensioner

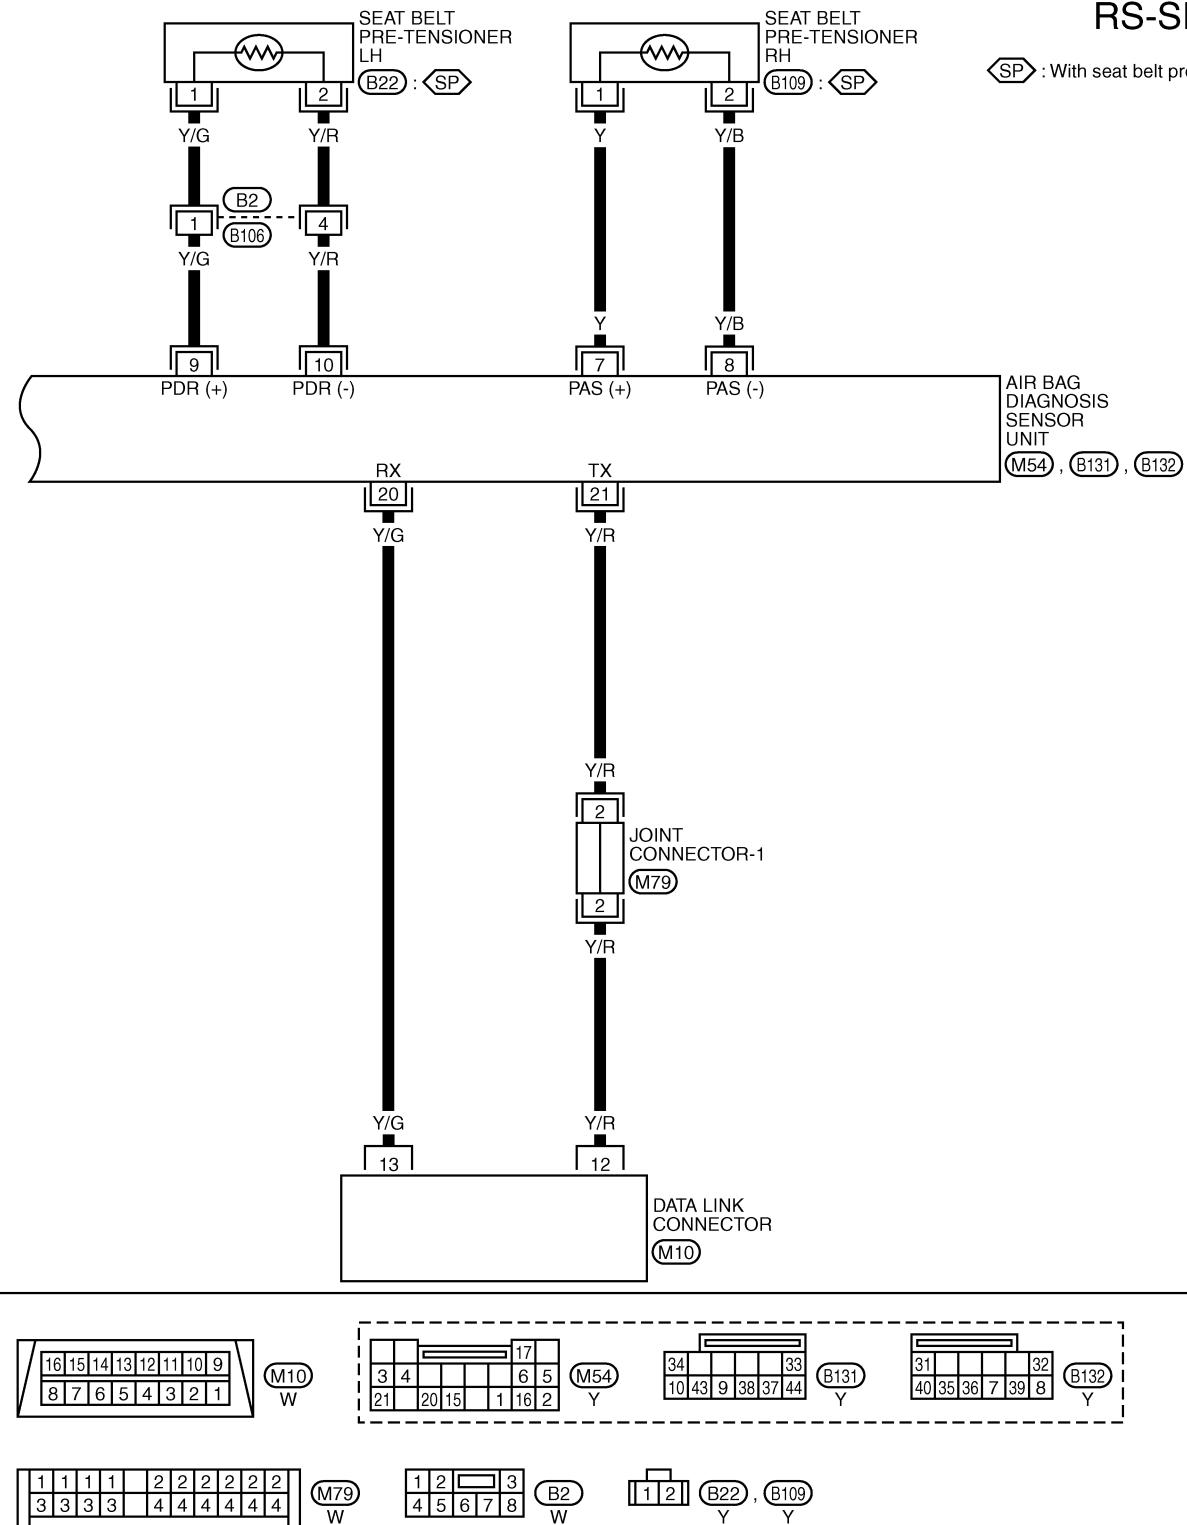


TRS085M

RS-4007

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)

Wiring Diagram — SRS — (RHD Models)

RS-SRS-06

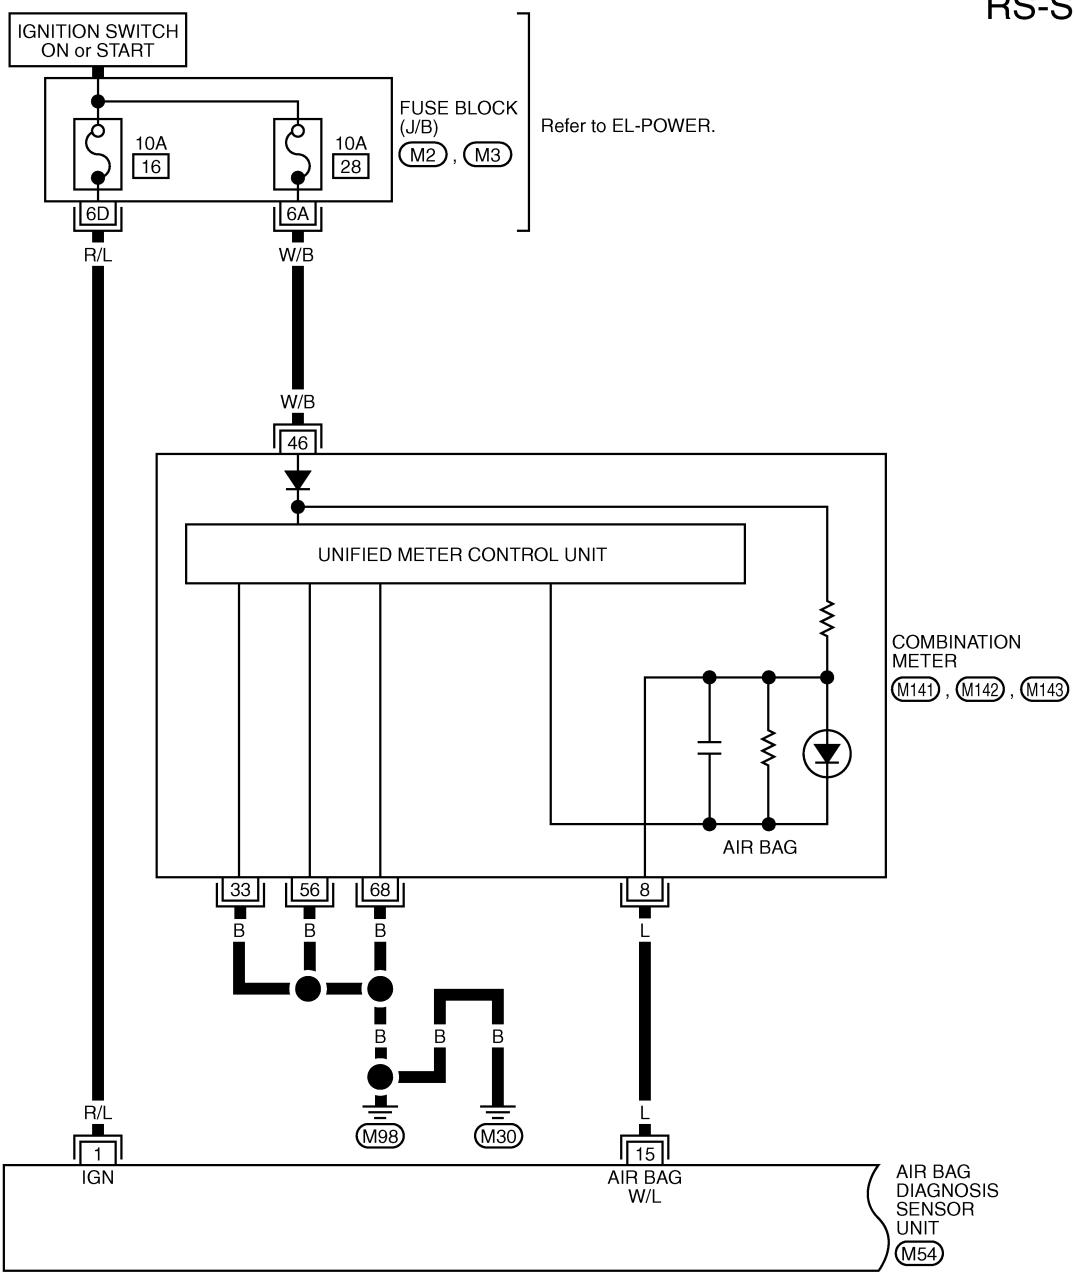

Refer to last page (Foldout page).
(M2), (M3)







TRS072M

RS-4008

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)

Wiring Diagram — SRS — (RHD Models) (Cont'd)

     RS-SRS-07

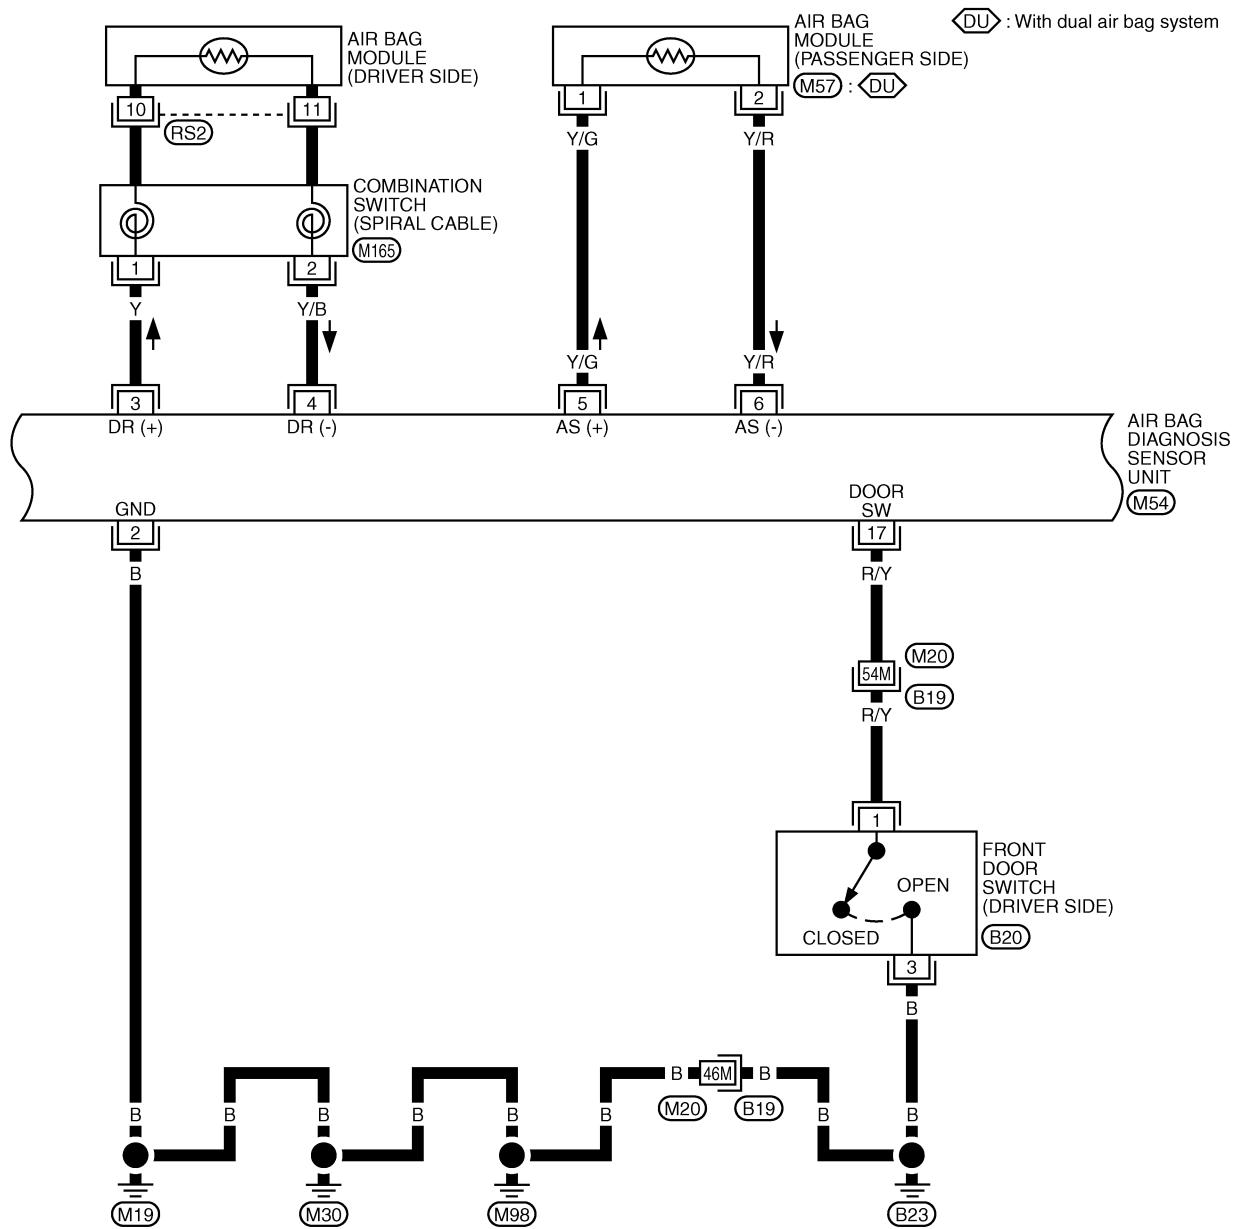

Refer to last page (Foldout page).
(M20), (B19)

*: This connector is not shown in "HARNESS LAYOUT", EL section.

TRS086M

 

RS-4009

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)

Wiring Diagram — SRS — (RHD Models) (Cont'd)

RS-SRS-08

SA : With side air bag system

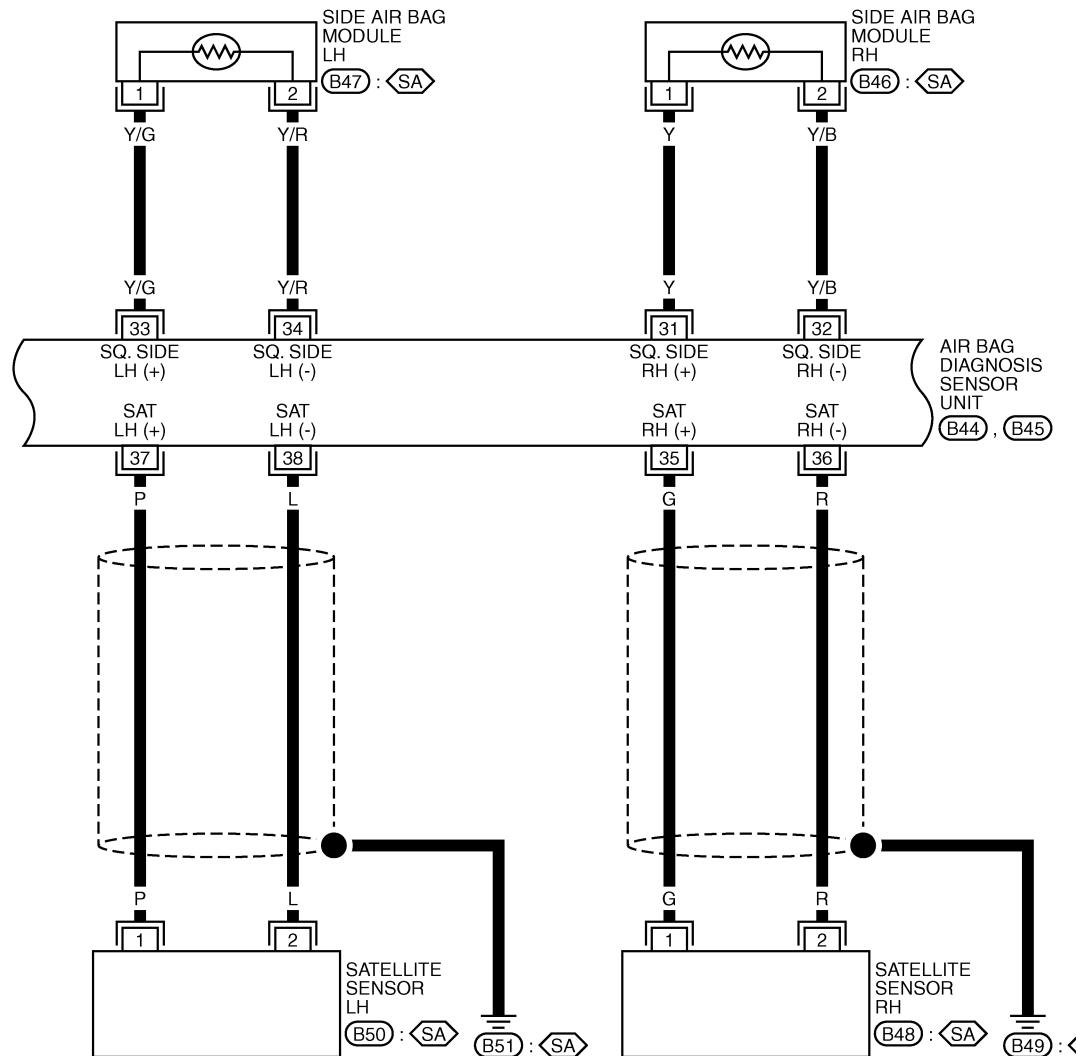

TRS087M

 
 
 

RS-4010

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)

Wiring Diagram — SRS — (RHD Models) (Cont'd)

TD ENGINE MODELS WITH NATS

RS-SRS-09

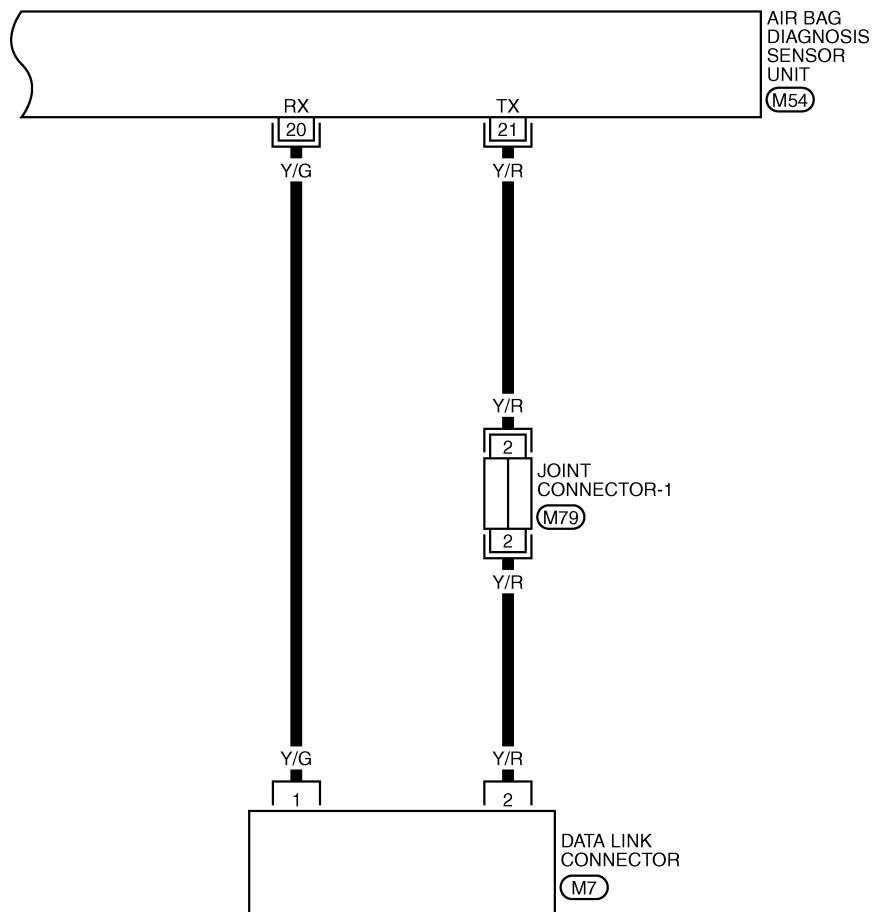

TRS088M


RS-4011

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)

Wiring Diagram — SRS — (RHD Models) (Cont'd)

EXCEPT FOR TD ENGINE MODELS WITH NATS

RS-SRS-10

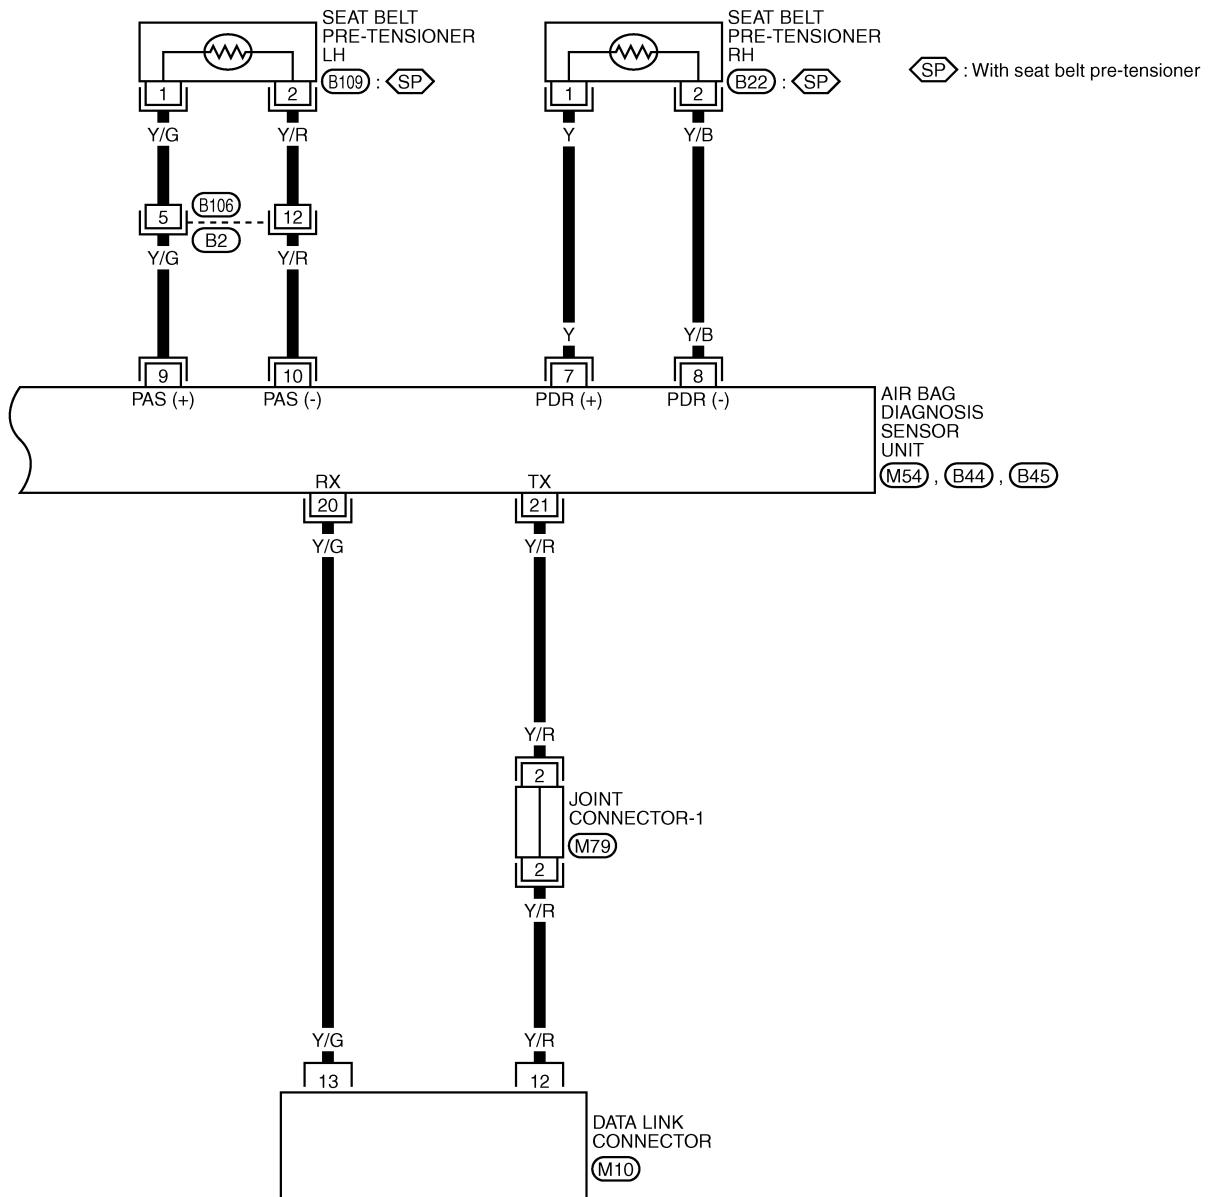

TRS089M

RS-4012


SEAT BELTS

Rear Seat Belt






REMOVAL (WAGON)

- ① Remove rear seat. Refer to "SEAT" in BT section for details.
- ② Remove 3rd seat. Refer to BT-38 in Service Manual (Pub. No. SM7E-2Y61G1).
- ③ Slide side seat belt anchor cover. **A**
- ④ Remove side seat belt anchor bolt. **A**
- ⑤ Remove luggage upper and lower finishers. Refer to BT-17 in Service Manual (Pub. No. SM7E-2Y61G1).
- ⑥ Remove shoulder anchor bolt. **B**
- ⑦ Remove headlining. Refer to BT-21 in Service Manual (Pub. No. SM7E-2Y61G1).
- ⑧ Remove the bolt and anchor bolt securing side seat belt retractor, then remove side seat belt and side seat belt retractor. **C**
- ⑨ Remove the bolt and anchor bolt securing center seat belt retractor, then remove center seat belt and center seat belt retractor.

SEC. 869

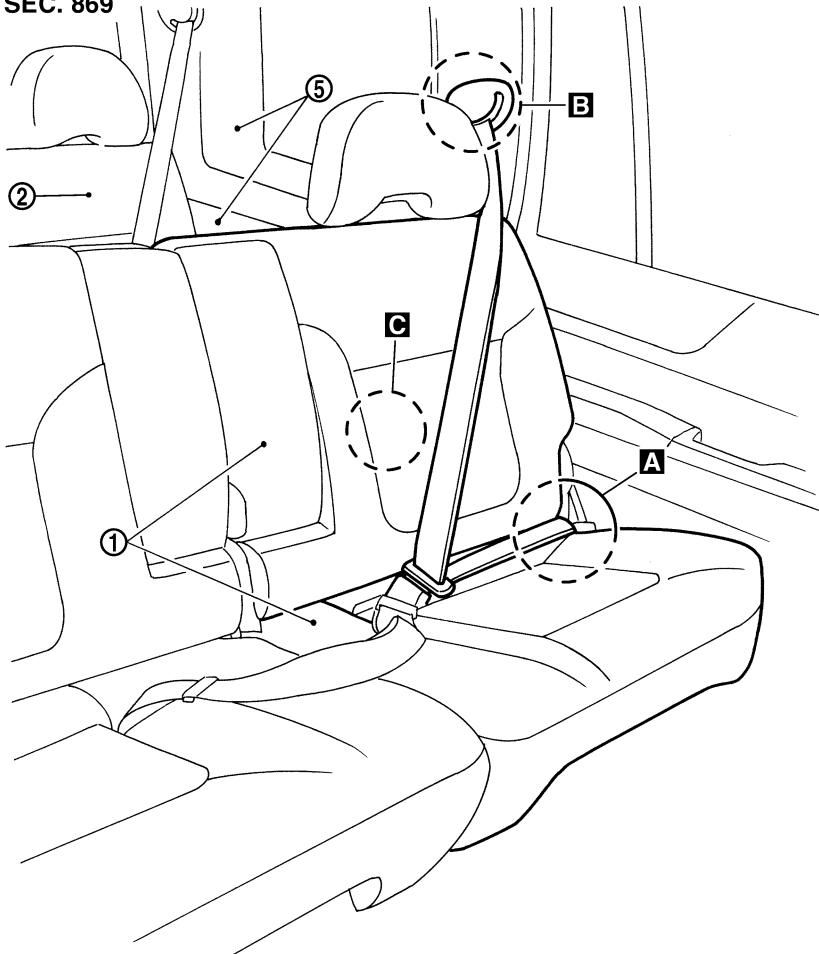

: N·m (kg·m, ft·lb)

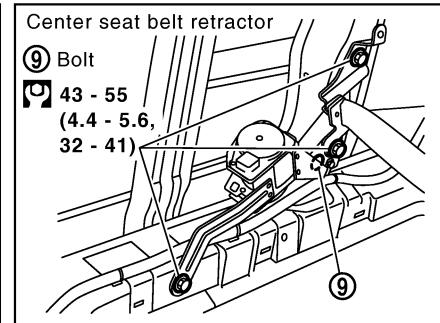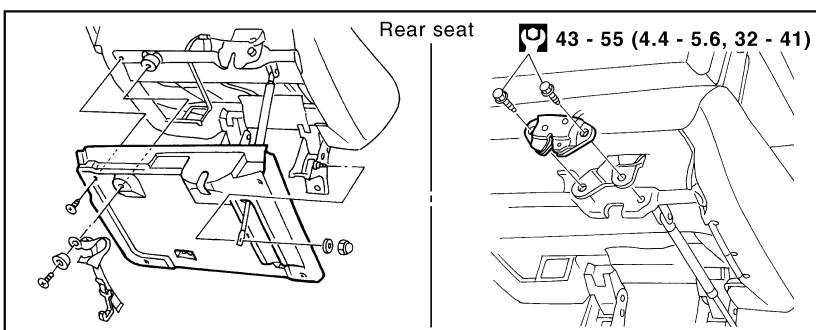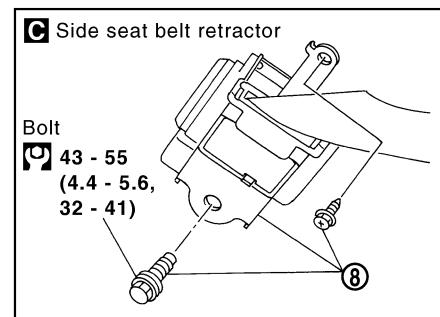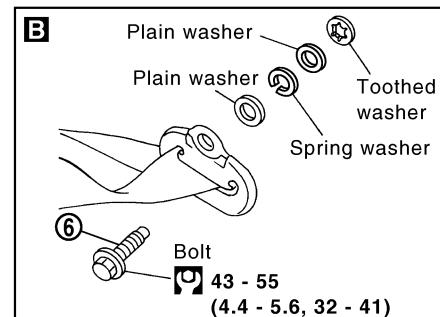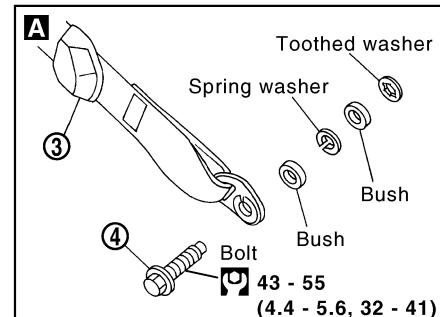

PIIB1985E









SEAT BELTS

Rear Seat Belt (Cont'd)

REMOVAL (HARDTOP)

- ① Fold the rear seat forward.
- ② Slide anchor cover.
- ③ Remove shoulder anchor cover.
- ④ Remove anchor bolt. **A**
- ⑤ Remove shoulder anchor bolt. **B**
- ⑥ Remove luggage upper and lower finishers. Refer to BT-17 in Service Manual. (Pub. No. SM7E-2Y61G1).
- ⑦ Remove headlining. Refer to BT-23 in Service Manual (Pub. No. SM7E-2Y61G1).
- ⑧ Remove anchor bolt securing side seat belt retractor, then remove side seat belt and side seat belt retractor. **C**
- ⑨ Remove anchor bolt securing center seat belt retractor, then remove center seat belt and center seat belt retractor.

SEC. 869

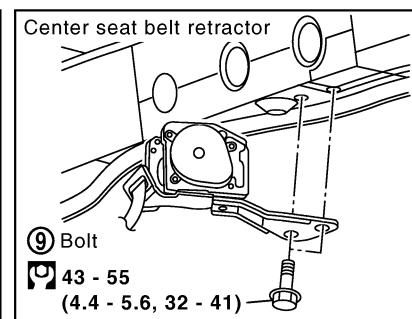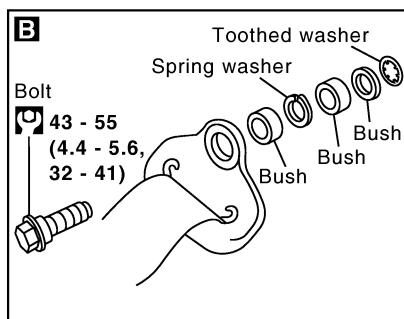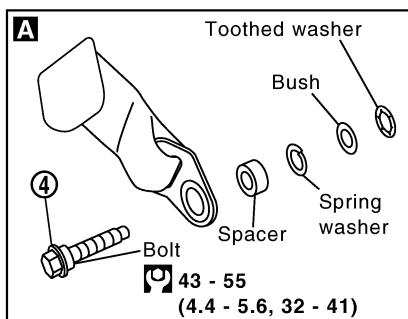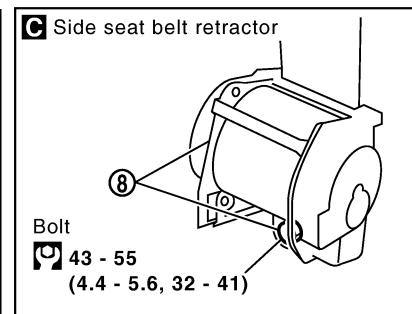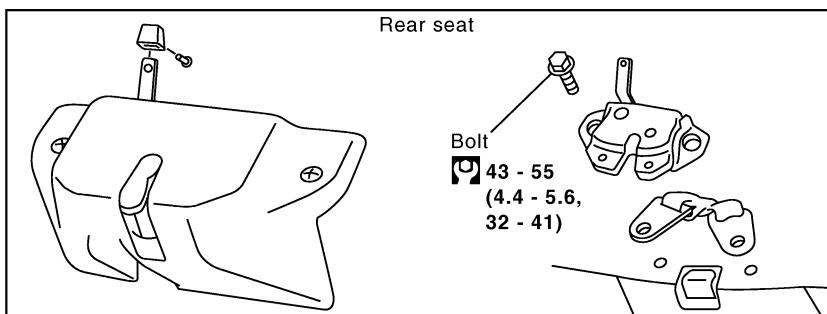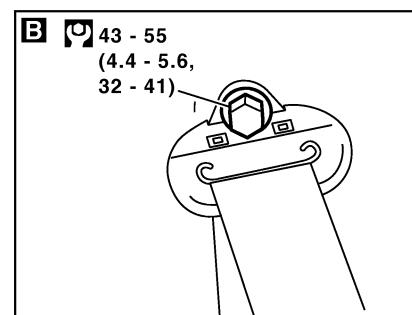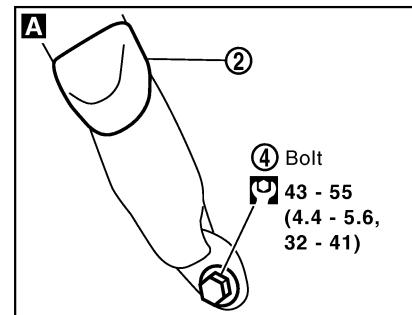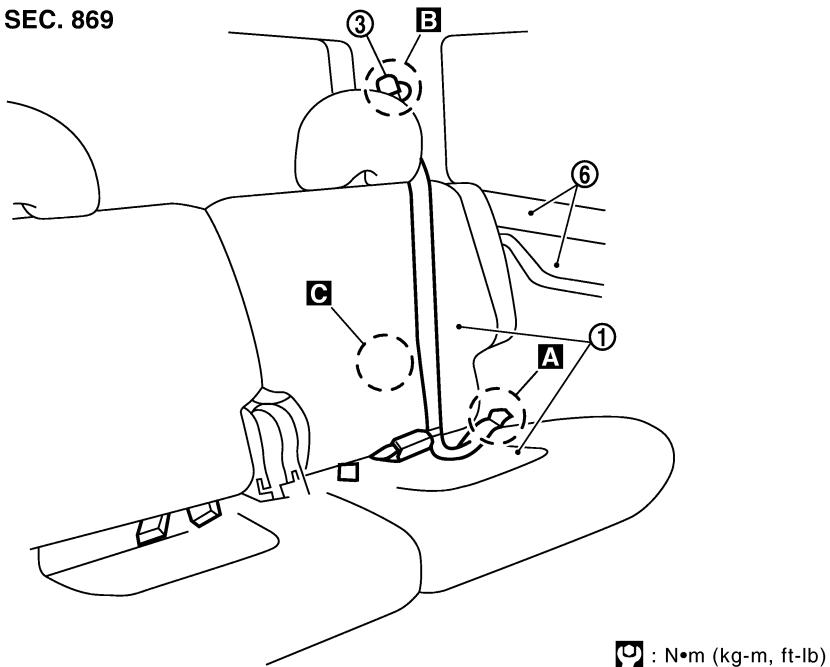

PIIB1986E