

MANUAL TRANSMISSION

SECTION **MT**

CONTENTS

FS5W71C & FS5R30A

PREPARATION	MT- 2
ON-VEHICLE SERVICE	MT- 7
REMOVAL AND INSTALLATION	MT- 8

FS5W71C

MAJOR OVERHAUL	MT- 9
DISASSEMBLY	MT-12
INSPECTION	MT-17
ASSEMBLY	MT-19

FS5R30A





 





MAJOR OVERHAUL	MT-29
DISASSEMBLY	MT-33
INSPECTION	MT-40
ASSEMBLY	MT-42

FS5W71C & FS5R30A

SERVICE DATA AND SPECIFICATIONS (S D.S)	MT-54
---	-------





MT

SPECIAL SERVICE TOOLS – for FS5W71C

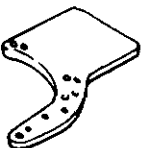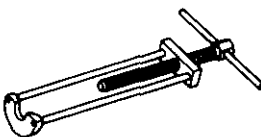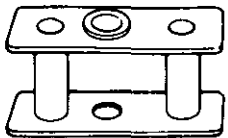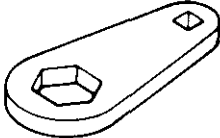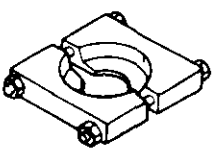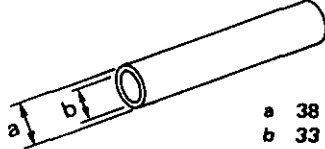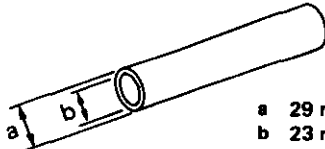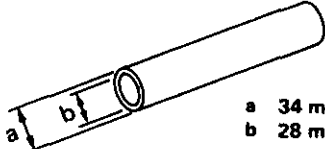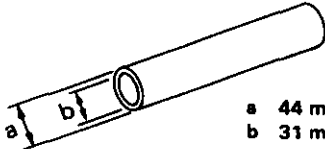
Tool number (Kent-Moore No) Tool name	Description
ST23810001 (–) Adapter setting plate	 Fixing adapter plate with gear assembly
KV32101330 (See J26349-A) Puller	 Removing overdrive mainshaft bearing
KV31100401 (–) Transmission press stand	 Pressing counter gear and mainshaft
ST22520000 (J26348) Wrench	 Tightening mainshaft lock nut
ST23540000 (J25689-A) Pin punch	 Removing and installing fork rod retaining pin
ST30031000 (J22912-01) Puller	 Removing and installing 1st gear bushing Removing main drive gear bearing
ST23860000 (–) Drift	 Installing counter drive gear a 38 mm (1 50 in) dia b 33 mm (1 30 in) dia
ST22360002 (J25679-01) Drift	 Installing counter gear front and rear end bearings a 29 mm (1 14 in) dia b 23 mm (0 91 in) dia
ST22350000 (J25678-01) Drift	 Installing O D gear bushing a 34 mm (1 34 in) dia b 28 mm (1 10 in) dia
ST23800000 (J25691-01) Drift	 Installing front cover oil seal a 44 mm (1 73 in) dia b 31 mm (1 22 in) dia

PREPARATION







 

FS5W71C





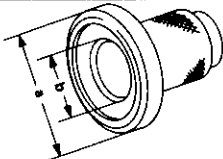
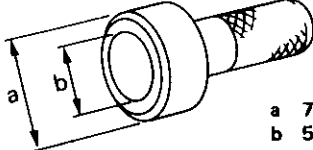

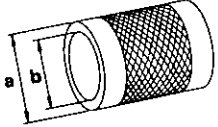
Tool number (Kent-Moore No) Tool name	Description
ST33400001 (J26082) Drift	 a 60 mm (2 36 in) dia b 47 mm (1 85 in) dia Installing rear oil seal
ST33290001 (J25810-A) Puller	 Removing rear oil seal
ST30720000 (-) Drift	 a 77 mm (3 03 in) dia b 55 5 mm (2 185 in) dia Installing mainshaft ball bearing
ST30613000 (J25742-3) Drift	 a 71 5 mm (2 815 in) dia b 47 5 mm (1 870 in) dia Installing main drive gear bearing
ST33200000 (J26082) Drift	 a 60 mm (2 36 in) dia b 44 5 mm (1 752 in) dia Installing counter rear bearing Installing 3rd & 4th synchronizer assembly

COMMERCIAL SERVICE TOOL – for FS5W71C

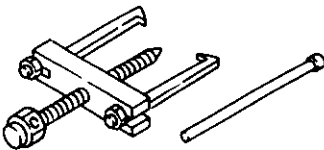Tool name	Description
Puller	 Removing counter bearings, counter drive and O D gears

 SPECIAL SERVICE TOOLS – for FS5R30A

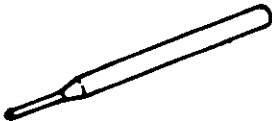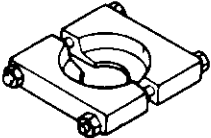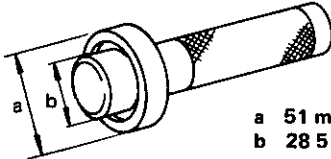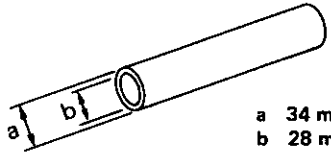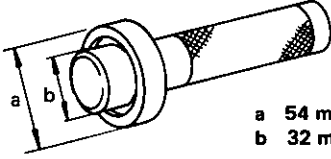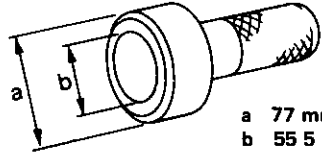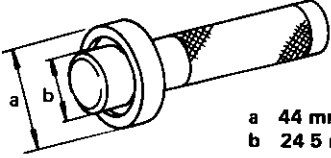Tool number (Kent-Moore No) Tool name	Description
ST23540000 (J25689-A) Pin punch	 Removing and installing retaining pin
ST30031000 (J22912-01) Puller	 Removing 1st & 2nd synchronizer assembly Removing counter gear rear thrust bearing Removing main drive bearing
ST33290001 (J25810-A) Puller	 Removing rear oil seal
ST33230000 (-) Drift	 a 51 mm (2 01 in) dia b 28 5 mm (1 122 in) dia Removing mainshaft and counter gear
ST22350000 (J25678-01) Drift	 a 34 mm (1 34 in) dia b 28 mm (1 10 in) dia Removing counter gear front bearing (Use with KV38100300)
KV38100300 (J25523) Drift	 a 54 mm (2 13 in) dia b 32 mm (1 26 in) dia Removing counter gear front bearing (Use with ST22350000) Installing counter gear rear bearing
ST30720000 ① (J34286) ② (J34331) Drift	 a 77 mm (3 03 in) dia b 55 5 mm (2 185 in) dia ① Removing mainshaft front bearing ② Installing mainshaft front bearing
ST33210000 ① (J25523) ② (J25803-01) Drift	 a 44 mm (1 73 in) dia b 24 5 mm (0 94 in) dia ① Installing counter gear front bearing ② Installing front cover oil seal
ST30613000 (J25742-3) Drift	 a 72 mm (2 83 in) dia b 48 mm (1 89 in) dia Installing main drive gear bearing

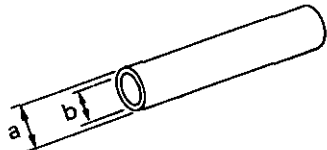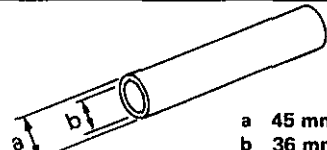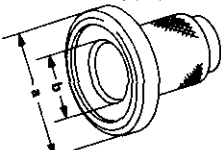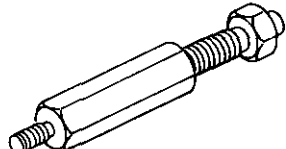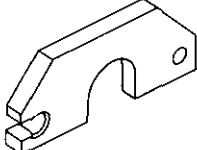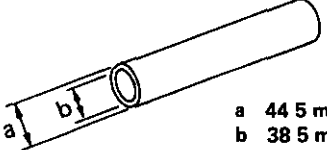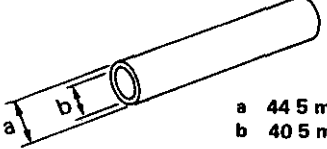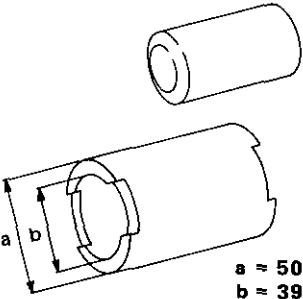
Tool number (Kent-Moore No) Tool name	Description
ST37750000 ① (J34286) ② (J34332) ③ (J34334) ④ (J25679-01) Drift	 ① Removing counter gear rear bearing ② Installing O D gear bushing ② Installing reverse cone ③ Installing reverse counter gear ④ Installing counter gear rear end bearing a 40 mm (1 57 in) dia b 31 mm (1 22 in) dia
ST22452000 (J34337) Drift	 Installing reverse hub Installing mainshaft rear bearing a 45 mm (1 77 in) dia b 36 mm (1 42 in) dia
ST33400001 (J26082) Drift	 Installing rear oil seal a 60 mm (2 36 in) dia b 47 mm (1 85 in) dia
(J26349-3) Puller leg	 Installing mainshaft and counter gear (Use with J34328)
(J34328) Puller	 Installing mainshaft and counter gear (Use with J26349-3)
(J26092) Drift	 Installing sub-gear snap ring a 44 5 mm (1 752 in) dia b 38 5 mm (1 516 in) dia
(J34342) Drift	 Installing O D main gear Installing reverse gear bushing a 44 5 mm (1 752 in) dia b 40 5 mm (1 594 in) dia
ST36730000 (—) Drift	 Installing sub-gear on reverse idler gear a ≈ 50 mm (1 97 in) dia b ≈ 39 mm (1 54 in) dia

PREPARATION

FS5R30A


COMMERCIAL SERVICE TOOL – FS5R30A

Tool name	Description
Puller	Removing counter gear rear end bearing Removing mainshaft rear bearing Removing reverse synchronizer hub Removing reverse counter gear

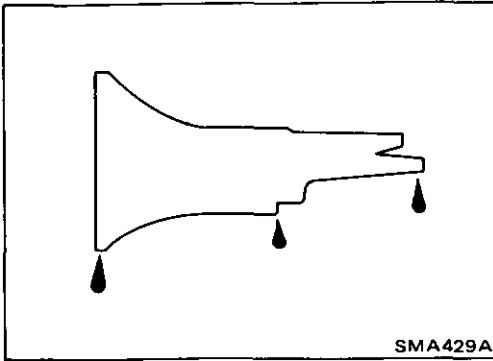



Checking M/T Oil

- Check manual transmission for leakage.

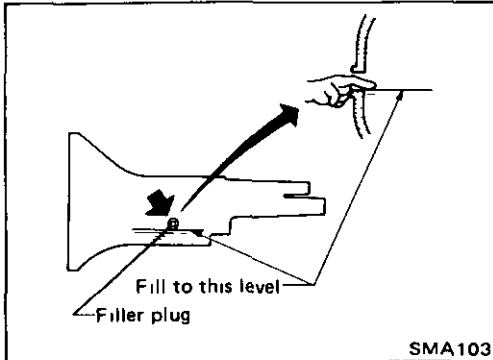


- Check oil level

Replacing Rear Oil Seal

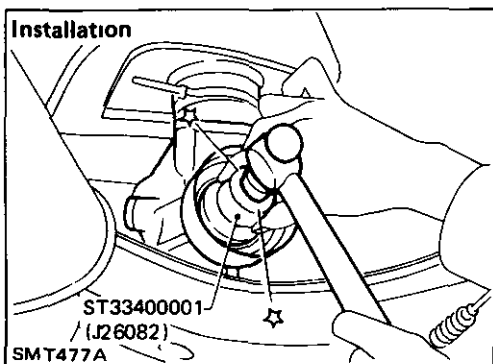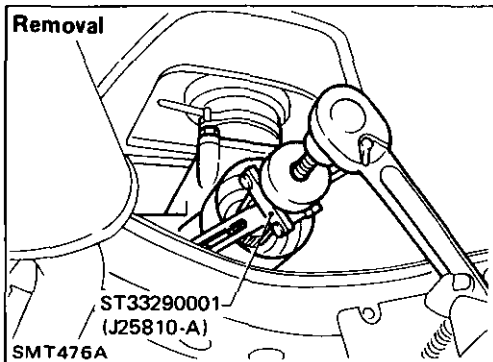

REMOVAL AND INSTALLATION

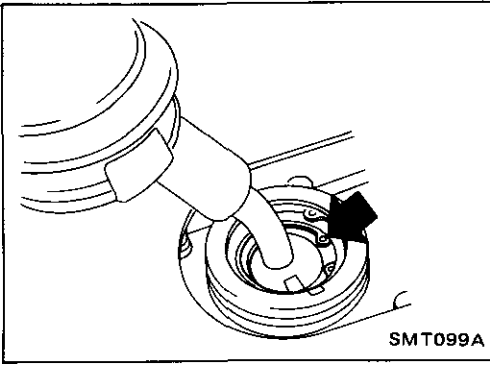

Removal


- Remove exhaust front tube, catalytic converter and exhaust manifold connecting tube
Refer to section EM.
- Remove propeller shaft.
Refer to section PD

Insert plug into rear oil seal after removing propeller shaft.

- Support engine by placing a jack under oil pan

CAUTION:


- Be careful not to damage spline, sleeve yoke and rear oil seal, when removing propeller shaft.
- Do not place jack under the oil pan drain plug.
- Remove shift lever (FS5W71C).

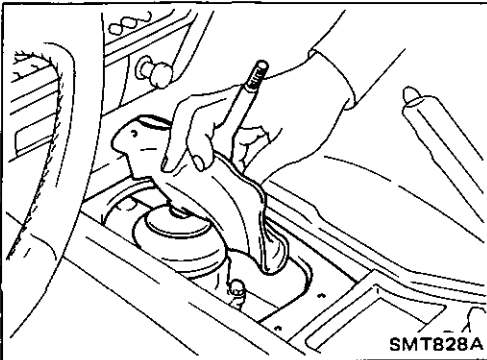

WARNING:

Support Manual Transmission, while removing it.

- Remove shift knob and console boot finisher (FS5R30A).
Dust cover must not be removed from shift lever.

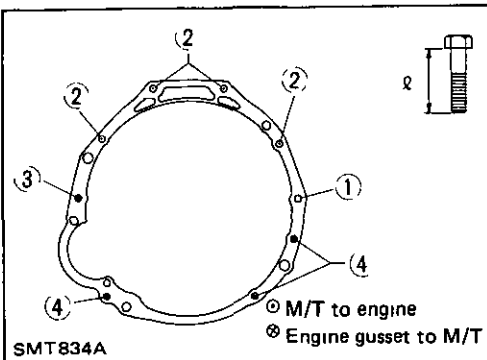


Installation

- Tighten bolt securing transmission.


Bolt No	Tightening torque N m (kg-m, ft-lb)	L mm (in)
1	39 - 49 (4.0 - 5.0, 29 - 36)	65 (2.56)
2	39 - 49 (4.0 - 5.0, 29 - 36)	60 (2.36)
3	29 - 39 (3.0 - 4.0, 22 - 29)	55 (2.17)
4	29 - 39 (3.0 - 4.0, 22 - 29)	25 (0.98)

Case Components — FS5W71C

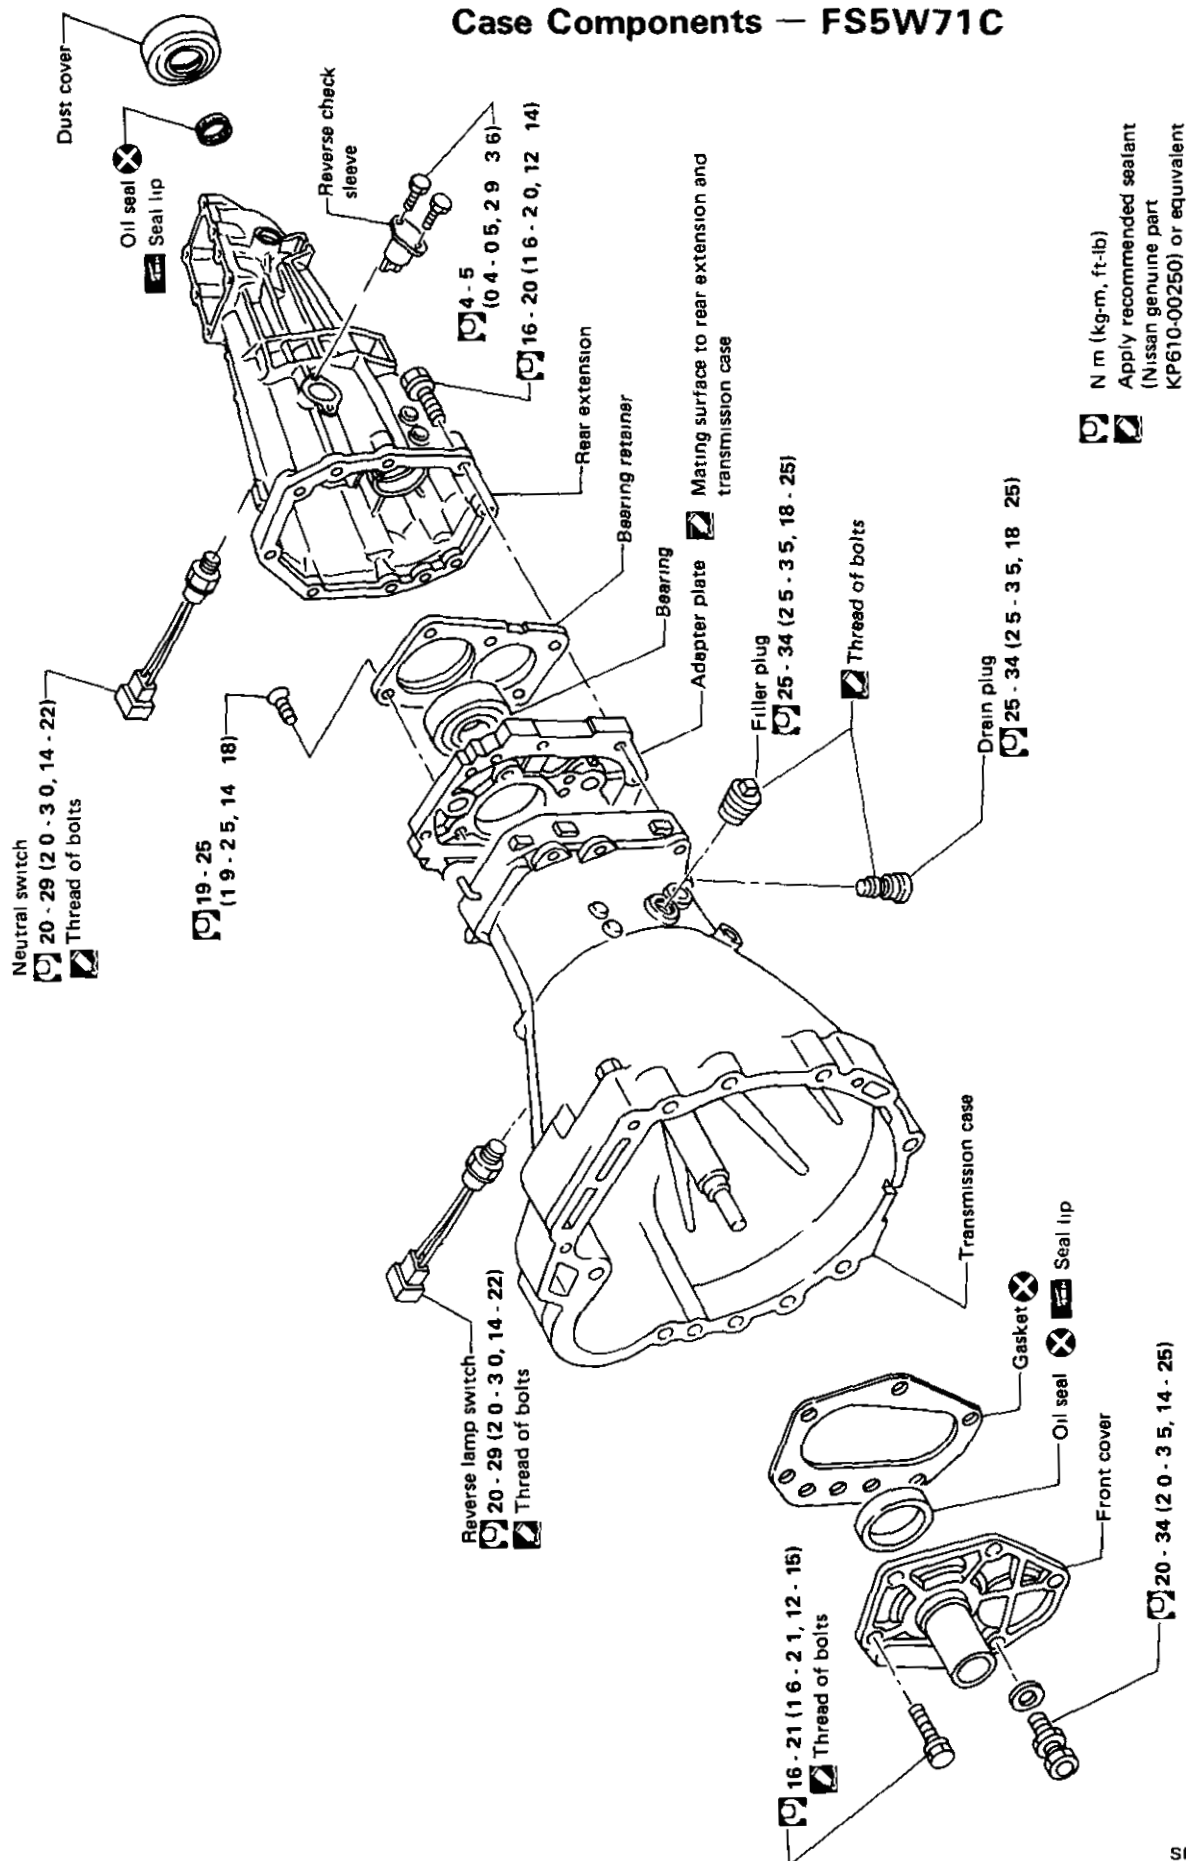

N·m (kg-m, ft-lb)
 Apply recommended sealant (Nissan genuine part KP610-00250) or equivalent


Gear Components — FS5W71C

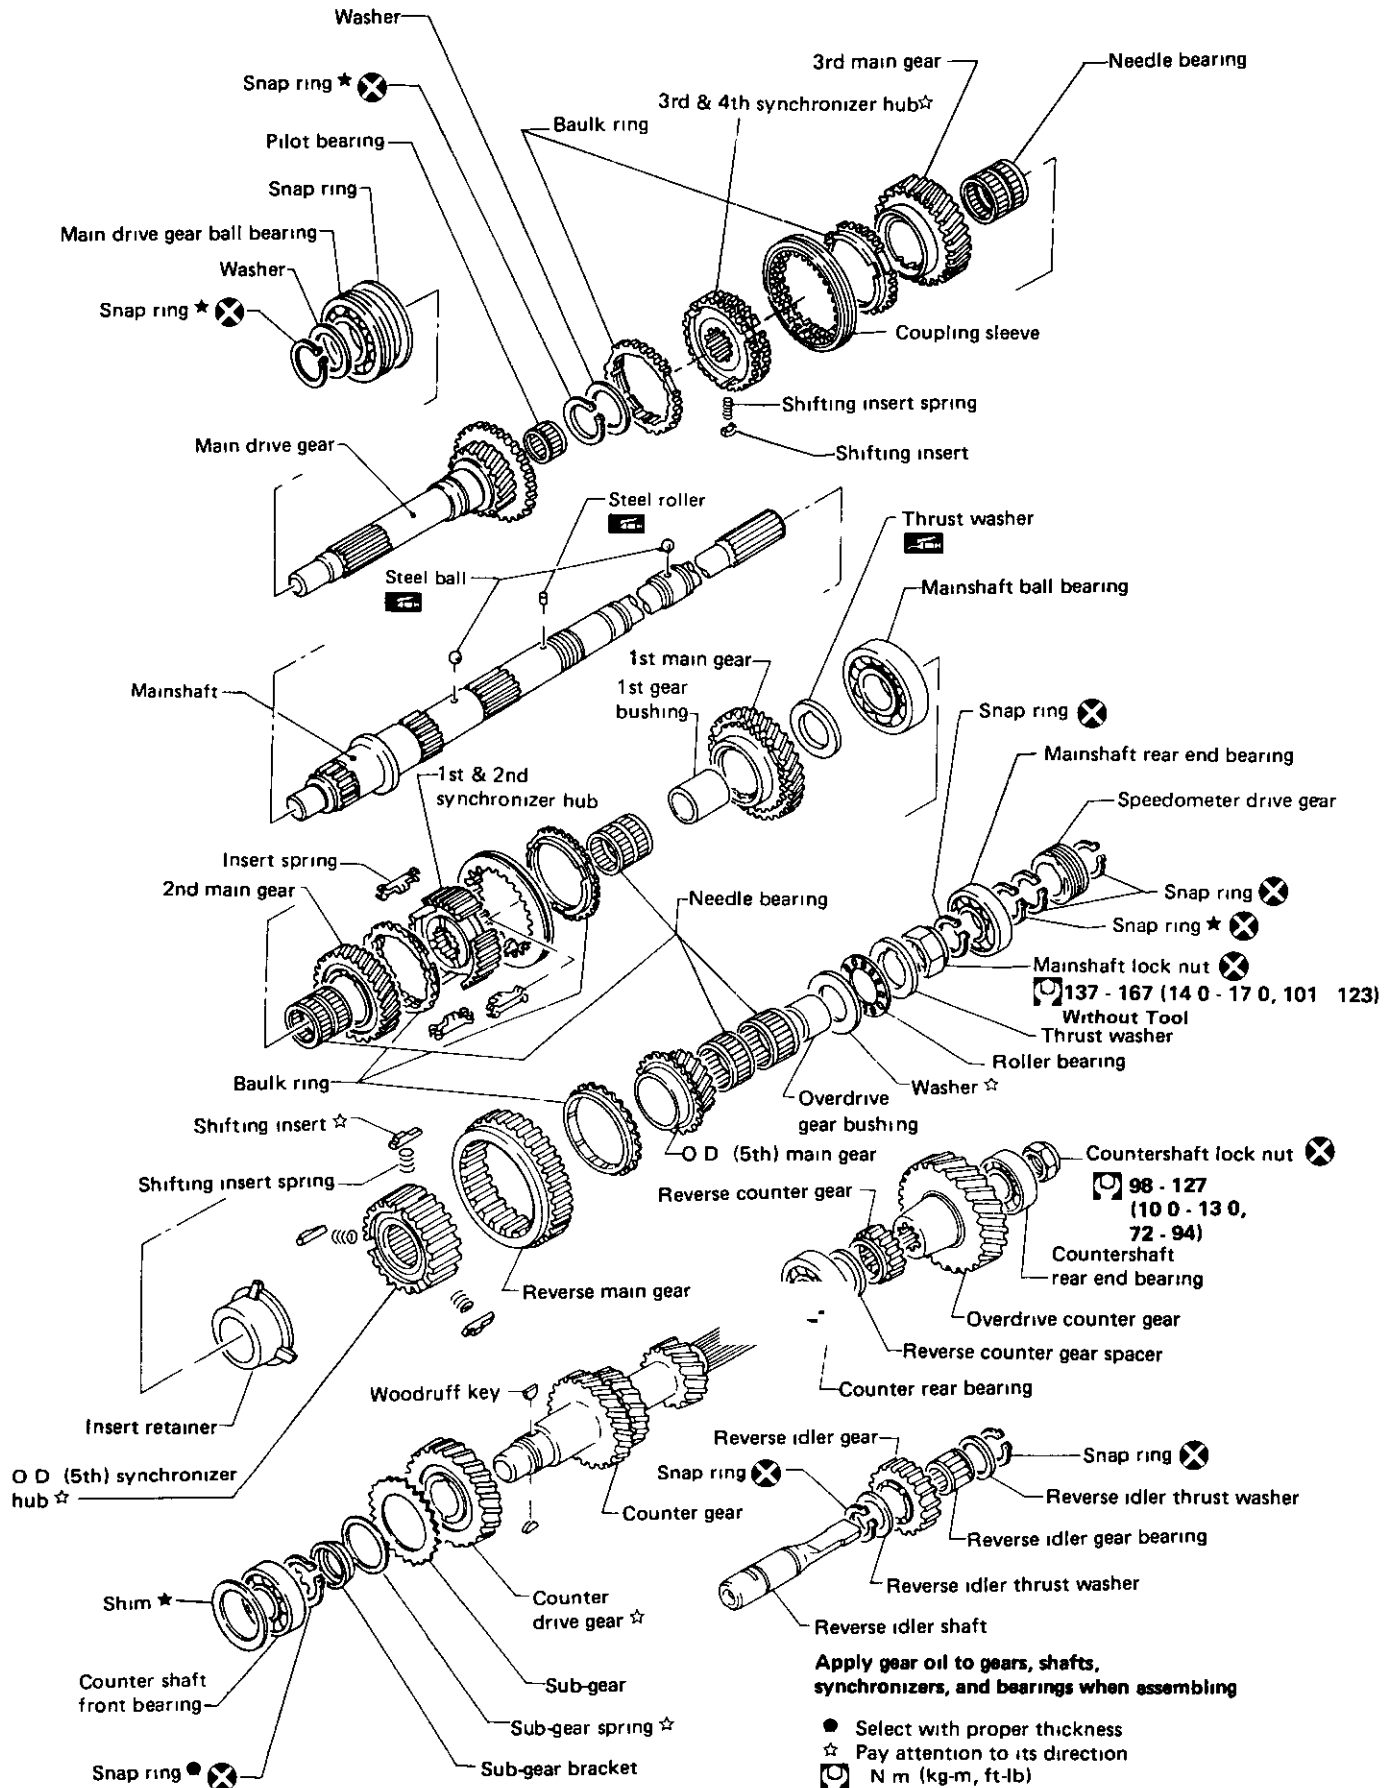


This diagram illustrates the exploded view of a manual transmission assembly, showing the relationship between various components and their assembly sequence. The components are labeled as follows:

- Shift knob
- Control lever
- Upper boot retainer
- Boot
- Lower boot retainer
- Control housing
- Gasket
- M12 bolt
- M8 bolt
- Spring
- Socket
- Mating surface to housing and control lever
- Rubber seat
- Washer
- Snap ring
- Return spring plug
- Thread of bolts
- 20 - 29 (20 - 30, 14 - 22)
- Bushing
- Mating surface to control lever
- Return spring
- Check ball
- Check ball plug
- Thread of bolts
- 19 - 25 (19 - 25, 14 - 18)
- Return spring
- Check ball
- Check spring
- Striking arm
- Lock pin
- Select check plunger
- Retaining pin
- 1st & 2nd fork rod
- Retaining pin
- 1st & 2nd shift fork
- Interlock plunger
- Check spring
- Retaining pin
- 3rd & 4th fork rod
- Check ball
- 3rd & 4th shift fork
- Check spring
- O D & reverse shift fork
- O D & reverse fork rod
- Check ball
- Interlock ball
- Retaining pin


  N m (kg-m, ft-lb)
Apply recommended sealant (Nissan
genuine part KP610-00250) or
equivalent

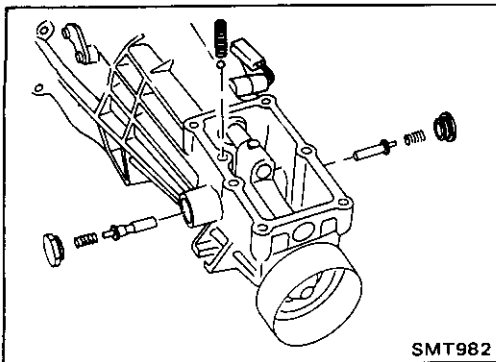**Case Components**


- 1 Remove rear extension
 - a Remove control housing, check ball, return spring plug, select check plunger and return springs

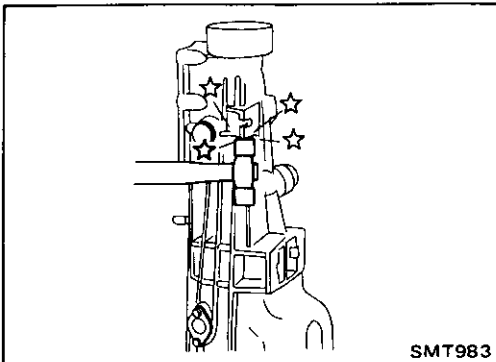


- b. Remove rear extension by lightly tapping it

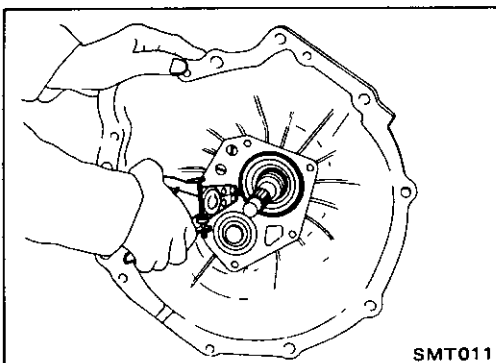

- 2 Remove front cover, gasket, shim of countershaft front bearing, and snap ring of main drive gear ball bearing

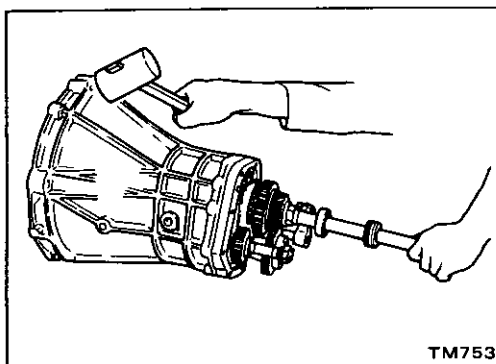


3. Separate transmission case from adapter plate

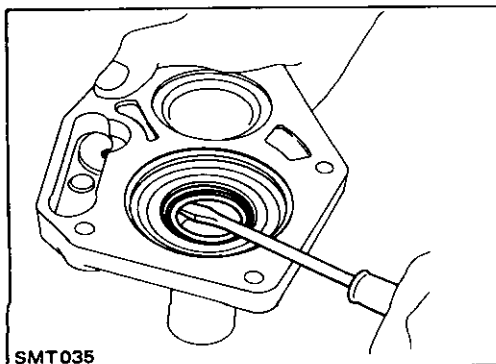


- 4 Remove oil seal of front cover
Be careful not to damage mating surface of front cover.

Shift Control Components


- 1 Set up Tool on adapter plate.
- 2 Remove check ball plugs, check springs, and check balls

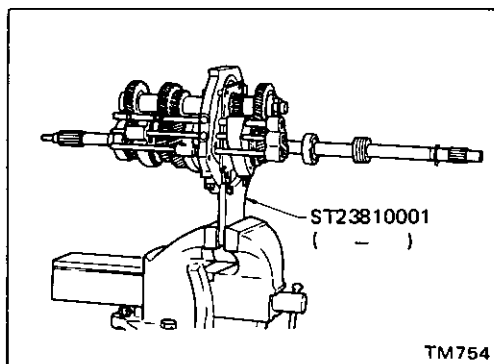


- 3 Drive out retaining pins. Then drive out fork rods and remove interlock balls

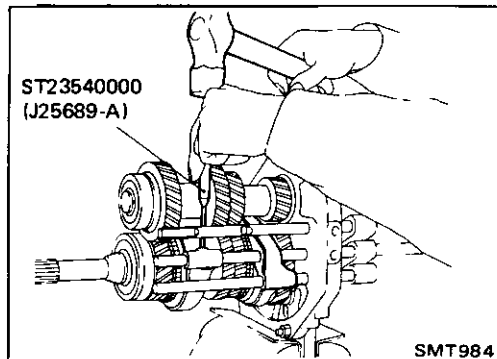


- 4 Remove lever bracket securing bolt.

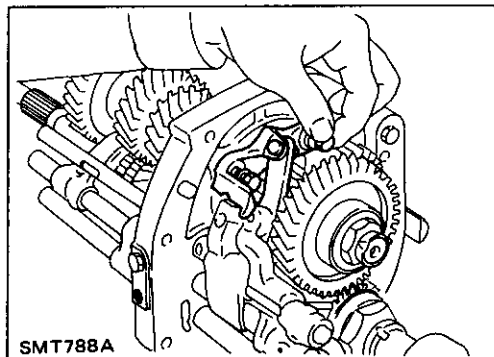

5. Draw out 3rd-4th fork rod.


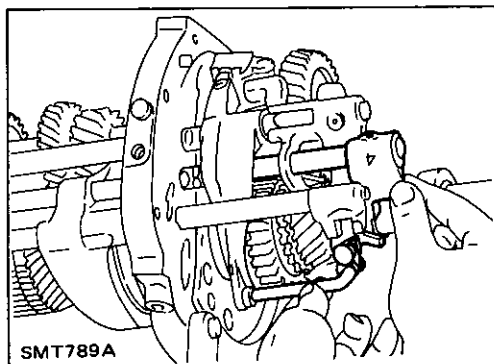


6. Remove E-ring from O.D.-rev. fork rod.

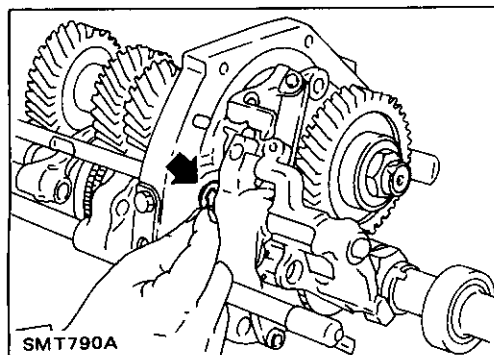


Shift Control Components (Cont'd)

7. Draw out O D.-rev. fork shaft by rotating O.D.-rev bracket counterclockwise.

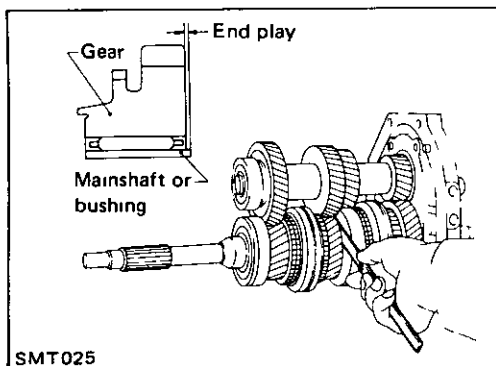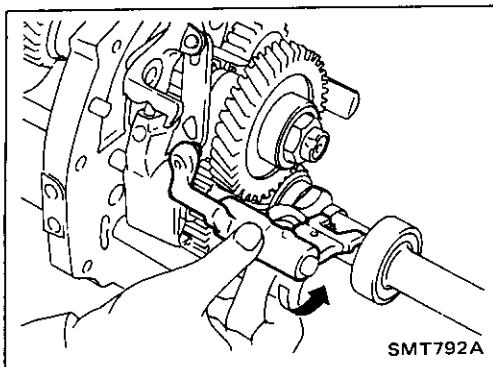
**Gear Components**

- 1 Before disassembly, measure each gear end play
 - If end play is not within the specified limit, disassemble and check the parts
 - Replace any part which is worn or damaged

Gear	End play mm (in)
1st	0.31 - 0.41 (0.0122 - 0.0161)
2nd	0.11 - 0.21 (0.0043 - 0.0083)
3rd	0.11 - 0.21 (0.0043 - 0.0083)
O D	0.32 - 0.39 (0.0126 - 0.0154)

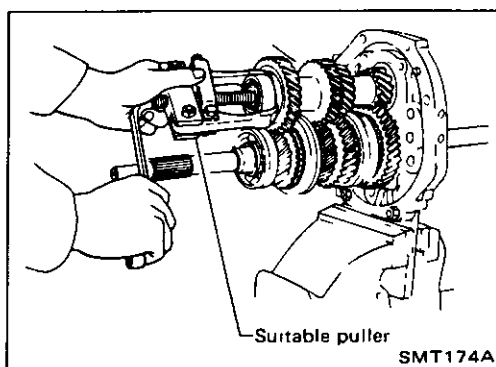

- 2 Mesh 2nd and reverse gear, then draw out counter front bearing with suitable puller.
- 3 Remove snap ring and then remove sub-gear bracket, sub-gear spring and sub-gear

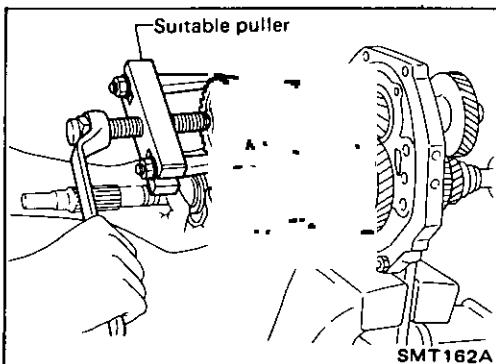



- 4 Draw out counter drive gear with main drive gear assembly with suitable puller
 - When drawing out main drive gear assembly, be careful not to drop pilot bearing and baulk ring.

Gear Components (Cont'd)


5 Disassemble parts at rear of adapter plate as follows

- a Release staking on countershaft nut and mainshaft nut and loosen these nuts


Mainshaft nut: Left-hand thread

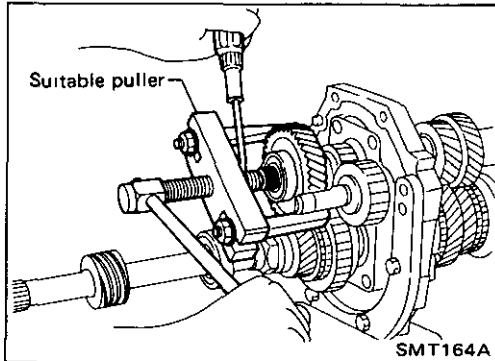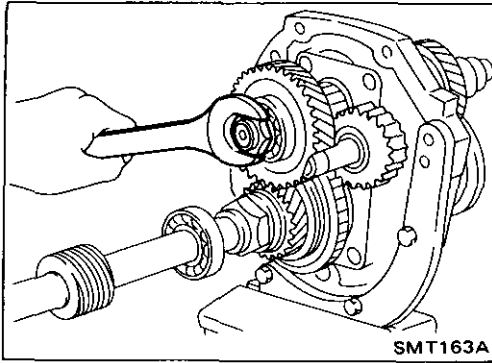


- b. Pull out O.D. counter gear with bearing with suitable puller
- c Draw out reverse counter gear and spacer
- d Remove snap rings from reverse idler shaft, and draw out reverse idler gear, thrust washers and reverse idler gear bearing
- e Remove speedometer drive gear and steel ball.

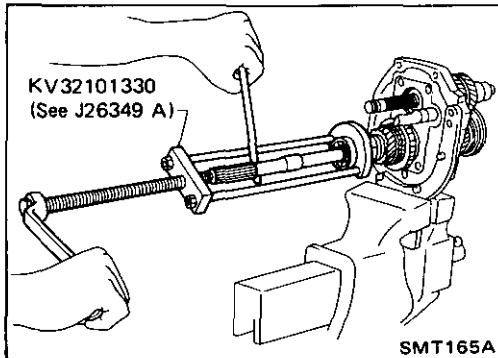

- f Remove snap ring and pull out overdrive mainshaft bearing, then remove snap ring
- g Remove mainshaft nut
- h. Remove thrust washer, steel roller, roller bearing and washer
- i Remove O D main gear, needle bearing and baulk ring (O D)
- j Remove O D coupling sleeve, shifting inserts and shifting insert springs

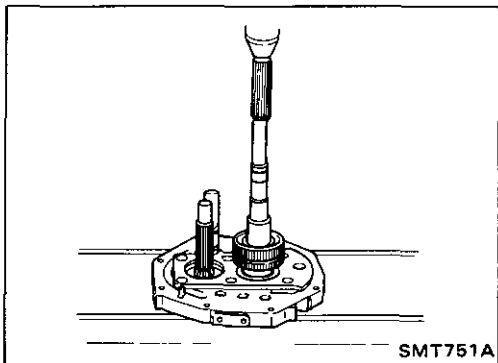

- k. Press out mainshaft and counter gear alternately
Make sure to alternate pressing of mainshaft and counter gear so as not to allow the front surface of one to contact the rear surface of the other.


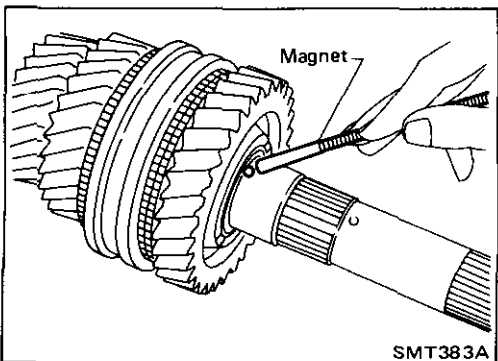


6 Remove front side components on mainshaft


- a Remove 1st gear washer and steel ball
- b. Remove 1st main gear and 1st gear needle bearing

Gear Components (Cont'd)


- c Press out 2nd main gear together with 1st gear bushing and 1st & 2nd synchronizer assembly
- d Remove mainshaft front snap ring

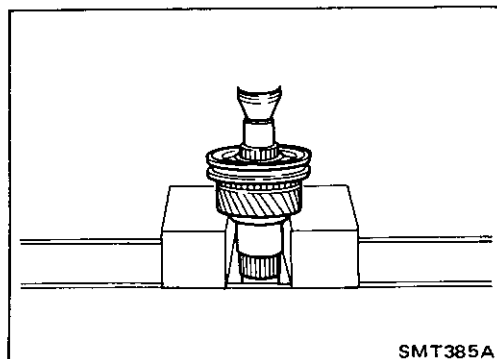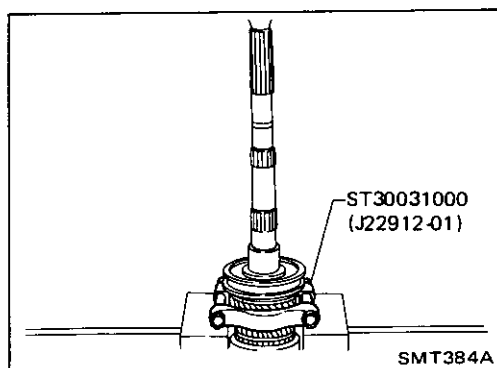

- e Press out 3rd main gear together with 3rd & 4th synchronizer assembly and 3rd gear needle bearing

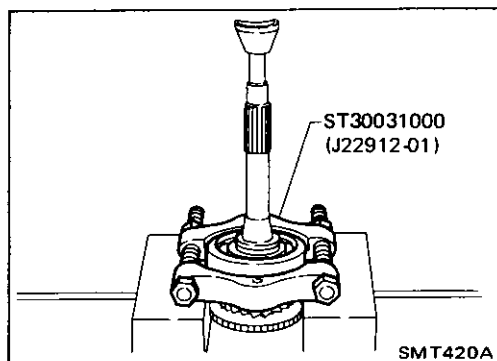


- 7. Remove main drive gear bearing
 - a Remove snap ring and washer
 - b Remove main drive gear bearing

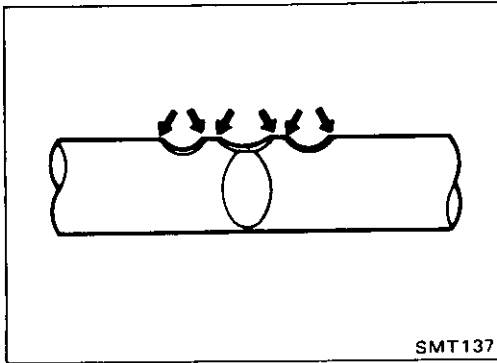

Shift Control Components



- Check contact surface and sliding surface of fork rods for wear, scratches, projections or other damage

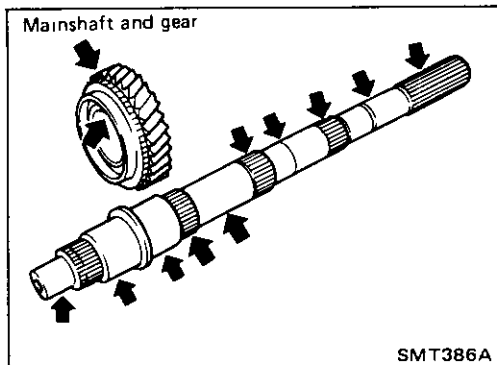

Gear Components


GEARS AND SHAFTS


- Check shafts for cracks, wear or bending
- Check gears for excessive wear, chips or cracks

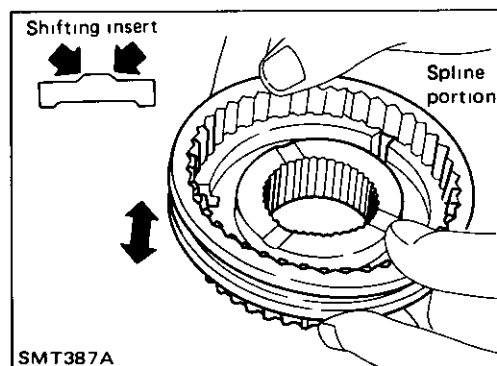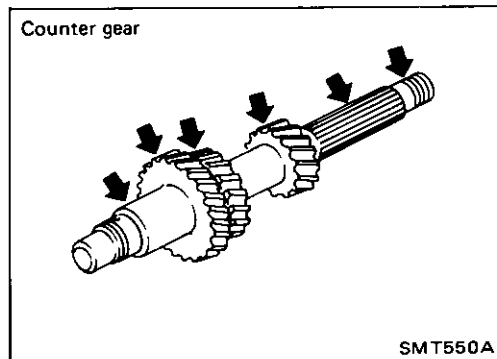

SYNCHRONIZERS

- Check spline portion of coupling sleeves, hubs and gears for wear or cracks
- Check baulk rings for cracks or deformation.
- Check shifting inserts for wear or deformation
- Check insert springs for deformation

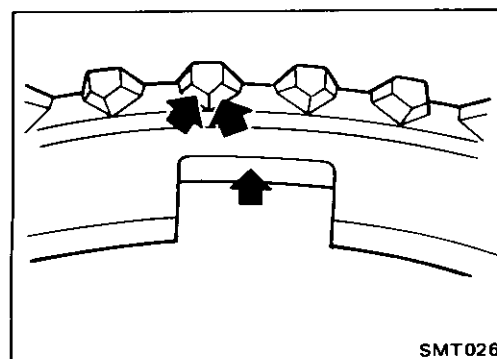

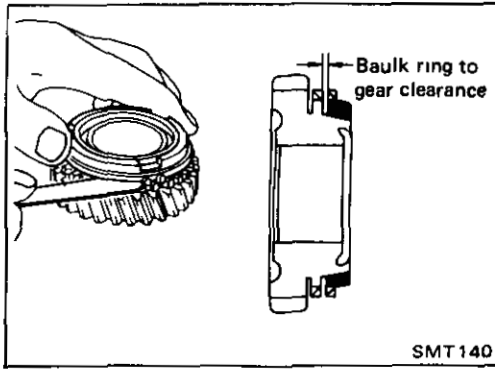
**Gear Components (Cont'd)**

- Measure clearance between baulk ring and gear


Clearance between baulk ring and gear

Unit mm (in)

	Standard	Wear limit
1st & 2nd	1.20 - 1.60 (0.0472 - 0.0630)	0.8 (0.031)
3rd & main drive	1.20 - 1.60 (0.0472 - 0.0630)	0.8 (0.031)
O.D.	1.00 - 1.40 (0.0394 - 0.0551)	0.5 (0.020)

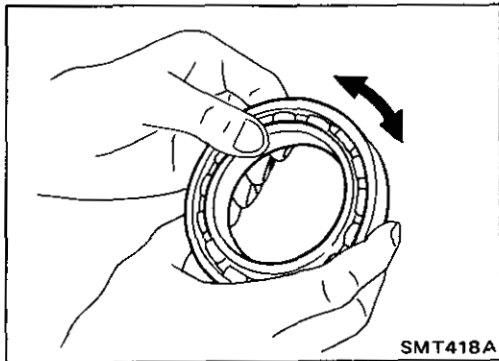
**BEARINGS**

- Make sure bearings roll freely and are free from noise, cracks, pitting or wear

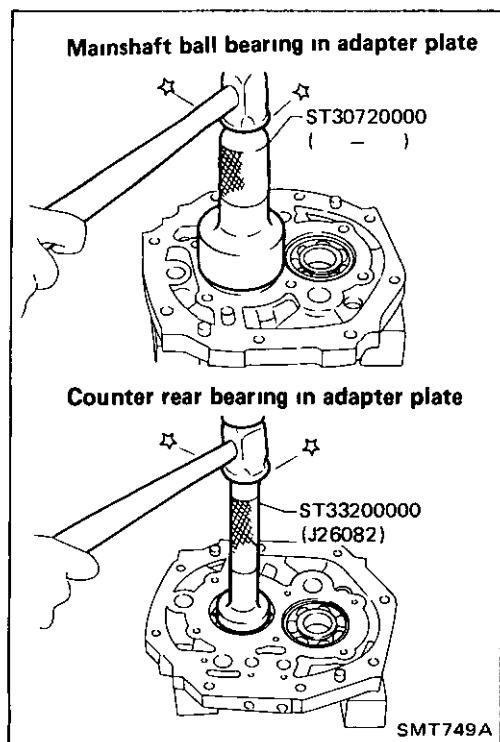


Gear Components

- 1 Install bearings into case components

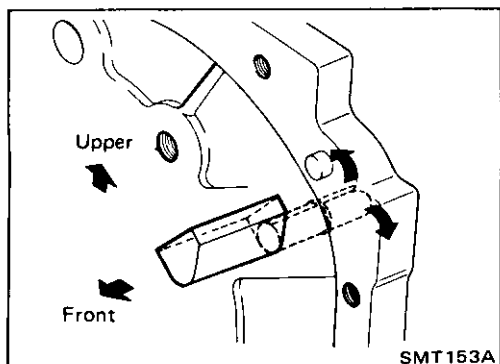



- 2 Assemble adapter plate parts
 - Install oil gutter on adapter plate and expand on rear side

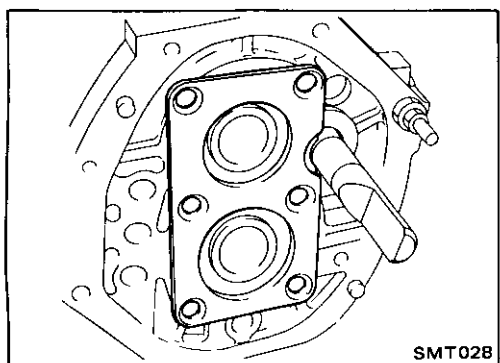


- Install bearing retainer
 - a Insert reverse shaft, then install bearing retainer

Gear Components (Cont'd)

- b Tighten each screw, then stake it at two points

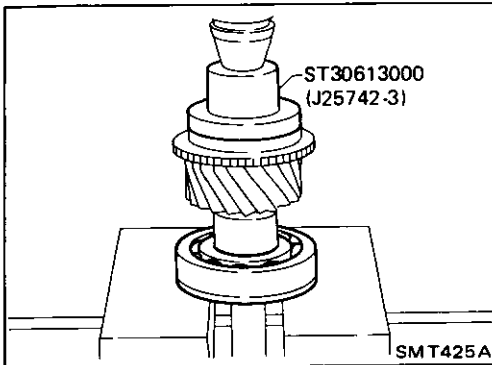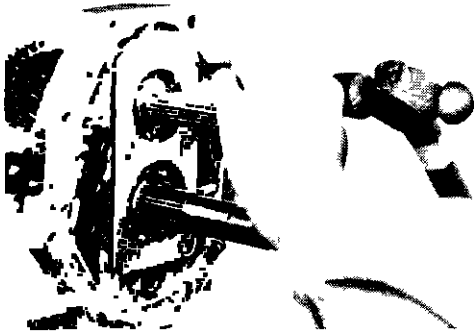

- 3 Install main drive gear bearing
 - a. Press in main drive gear bearing
 - b. Install main drive gear spacer

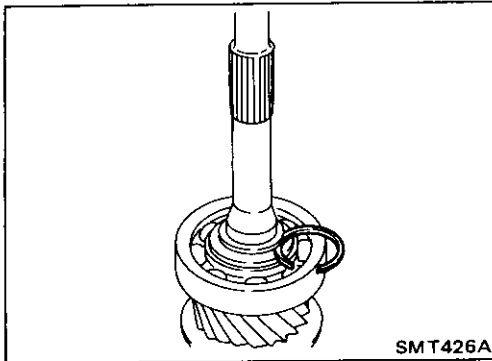

- c Select proper main drive gear snap ring to minimize clearance of groove


Allowable clearance of groove

0 - 0.13 mm (0 - 0.0051 in)

Main drive gear snap ring






Thickness mm (in)	Part number
1.73 (0.0681)	32204-78005
1.80 (0.0709)	32204-78000
1.87 (0.0736)	32204-78001
1.94 (0.0764)	32204-78002
2.01 (0.0791)	32204-78003
2.08 (0.0819)	32204-78004

- d. Install selected snap ring on main drive gear

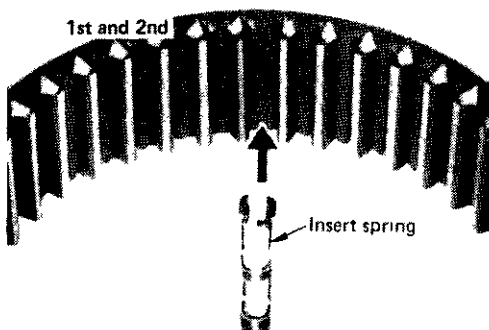

4. Assemble synchronizers

Gear Components (Cont'd)

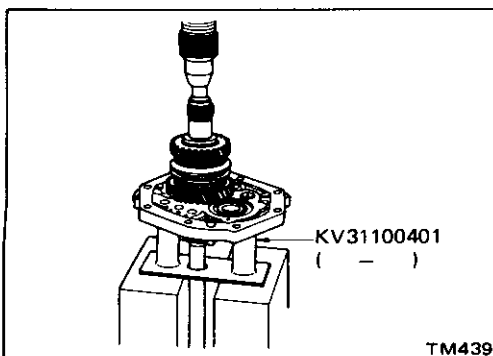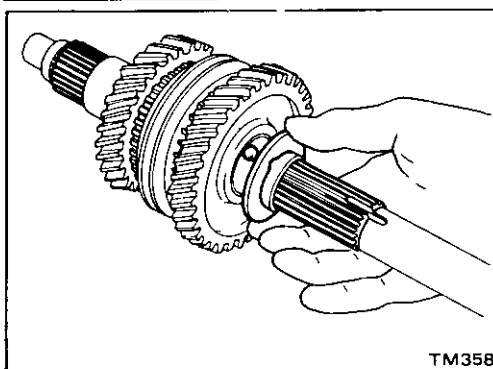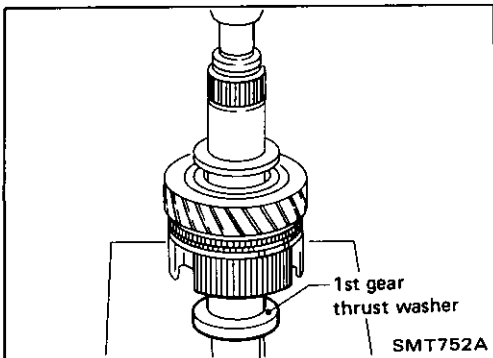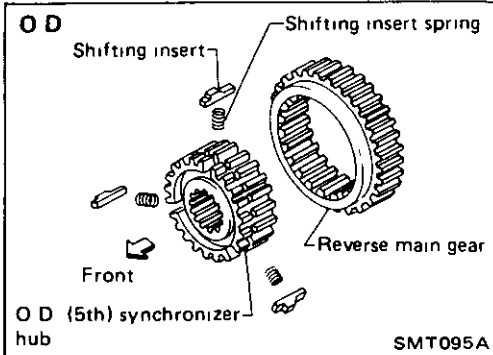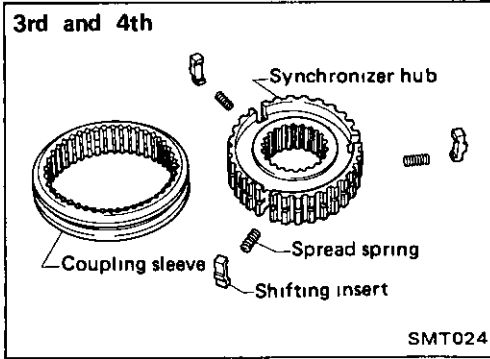

- 5 Assemble 2nd main gear, needle bearing and 1st & 2nd synchronizer assembly, then press 1st gear bushing on mainshaft
6. Install 1st main gear.


7. Install steel ball and thrust washer
Before installing steel ball and thrust washer, apply grease to them.

- 8 Press mainshaft assembly to adapter plate with Tool



Gear Components (Cont'd)

9 Press counter gear into adapter plate with Tool

10. Install 3rd main gear and then press 3rd & 4th synchronizer assembly

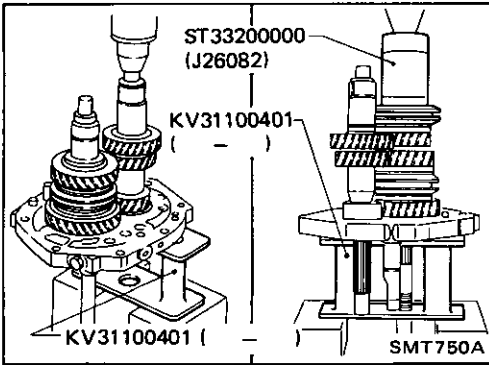

Pay attention to direction of 3rd & 4th synchronizer.

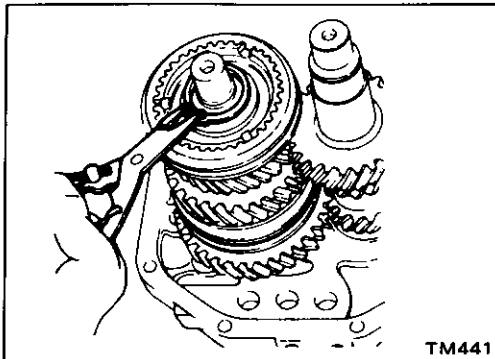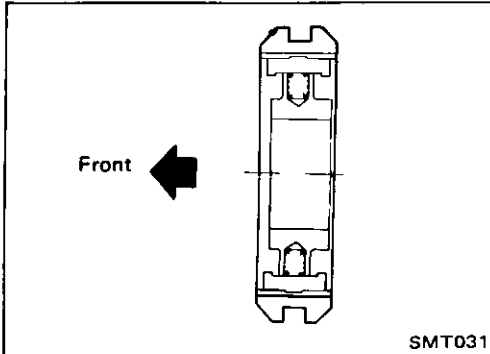

11 Install thrust washer on mainshaft and secure it with mainshaft front snap ring


Select proper snap ring to minimize clearance of groove in mainshaft.

Mainshaft front snap ring:


Refer to S.D.S.

12 Apply gear oil to mainshaft pilot bearing and install it on mainshaft

13 Press counter drive gear with main drive gear with Tool

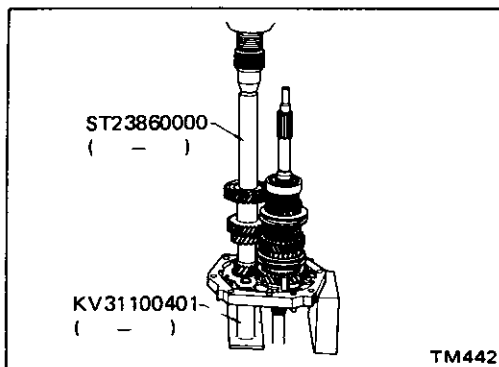

Pay attention to direction of counter drive gear.

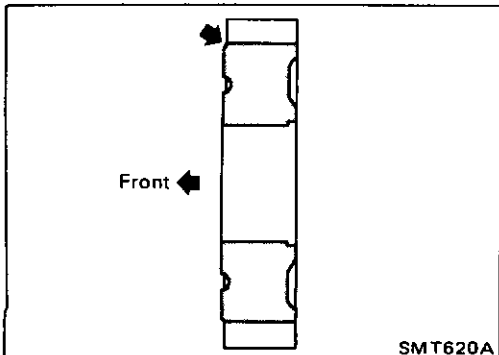

Gear Components (Cont'd)

14 Install sub-gear components


- a Install sub-gear and sub-gear bracket on counter drive gear and then select proper snap ring to minimize clearance of groove in counter gear

Allowable clearance of groove:


0 - 0.18 mm (0 - 0.0071 in)

Counter drive gear snap ring:


Parts number	Thickness mm (in)
32215-E9000	1.4 (0.055)
32215-E9001	1.5 (0.059)
32215-E9002	1.6 (0.063)

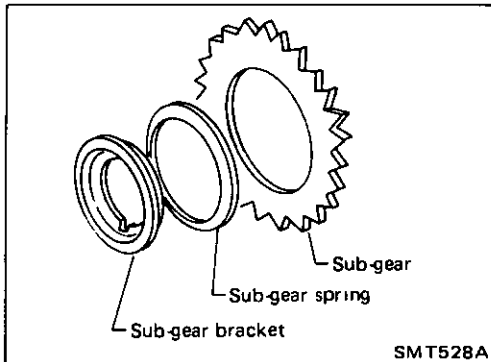


- b Remove snap ring, sub-gear bracket and sub-gear from counter gear
- c Reinstall sub-gear, sub-gear spring and sub-gear bracket

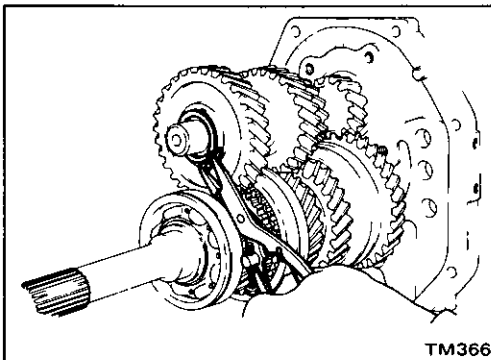

15 Install selected counter drive gear snap ring

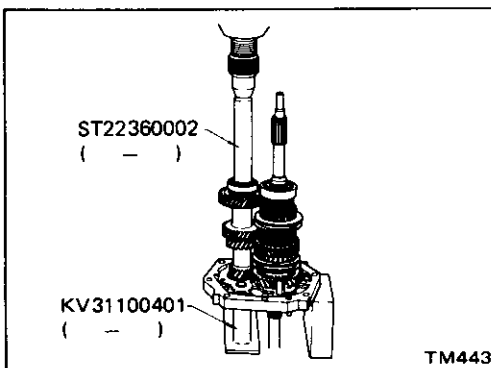

16 Press counter gear front bearing onto counter gear

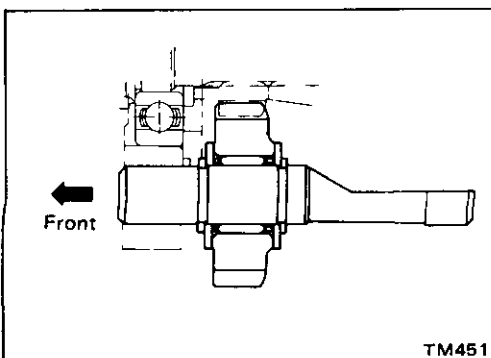


17 Assemble parts at rear of adapter plate as follows


- a. Install reverse idler gear to reverse idler shaft with spacers, snap rings and needle bearing

Gear Components (Cont'd)


- b. Install insert retainer and O.D. synchronizer to mainshaft
Pay attention to direction of hub

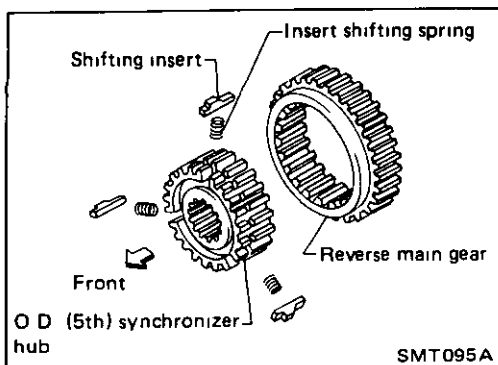


- c. Install O D gear bushing with Tool
d. Install O D main gear and needle bearing
e. Install spacer, reverse counter gear and O D counter gear
O.D. main gear and O D. counter gear should be handled as a matched set
f. Install washer, roller bearing, steel roller and thrust washer
g. Tighten mainshaft lock nut temporarily
Always use new lock nut.

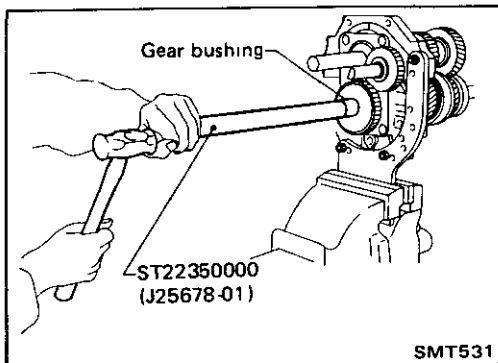

- h. Install countershaft rear end bearing with Tool

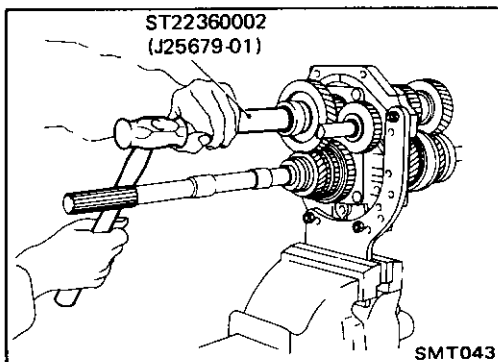


- 18 Mesh 2nd and reverse gears, then tighten mainshaft lock nut with Tool.

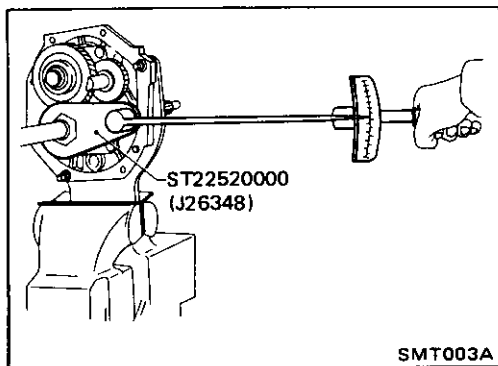


Gear Components (Cont'd)

Use the left chart when deciding the reading torque
(Length of torque wrench vs setting or reading torque)

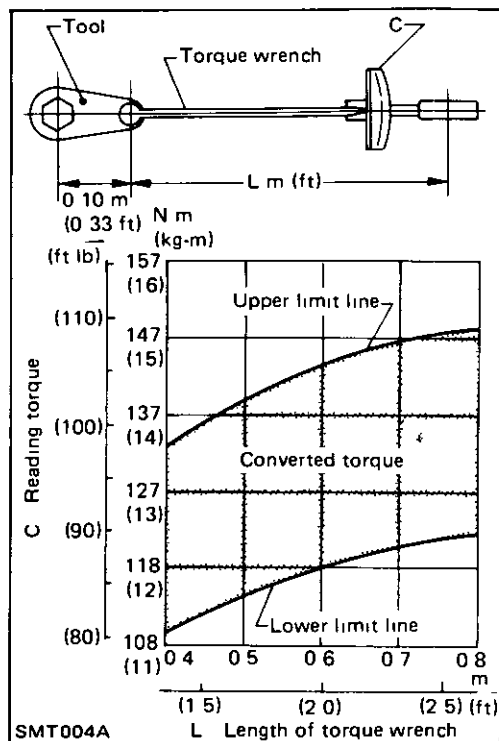

Mainshaft

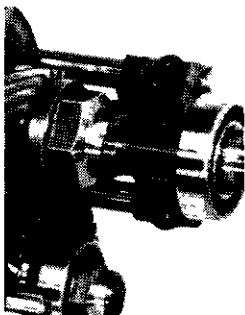

Countershaft



19. Tighten countershaft lock nut


Always use new lock nut

20 Stake mainshaft lock nut and countershaft lock nut with a punch


21 Measure gear end play For the description, refer to Disassembly of Gear Components

Shift Control Components

1 Install shift rods, interlock plunger, interlock balls and check balls

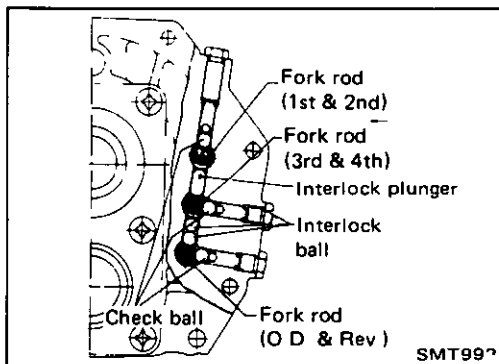


a 1st-2nd shift fork

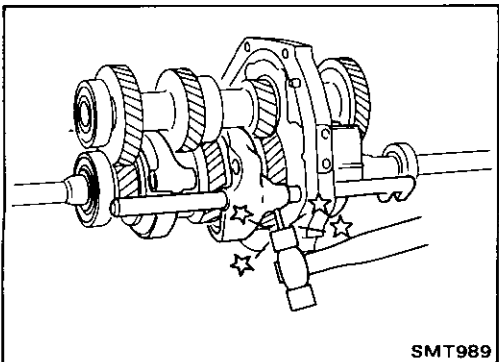


Shift Control Components (Cont'd)


b 3rd-4th shift fork

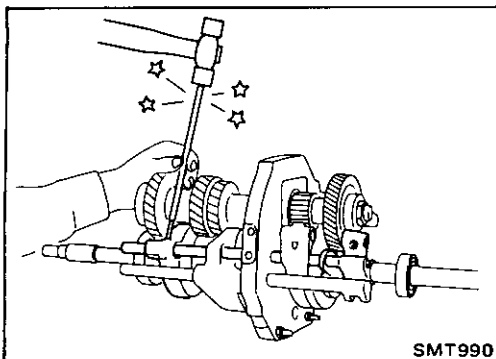


c O D -reverse shift fork

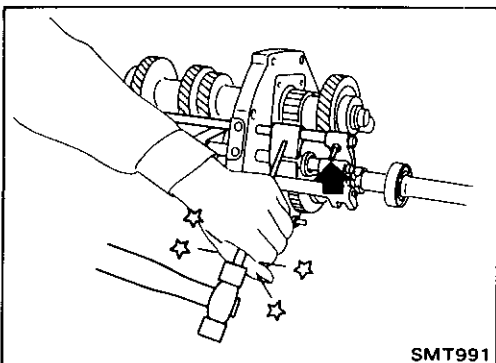


2. Install O.D.-rev. fork shaft by rotating O.D.-rev bracket clockwise.

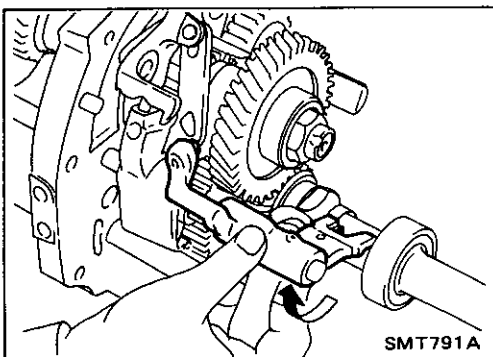


3. Install E-ring on O.D.-rev. fork rod.

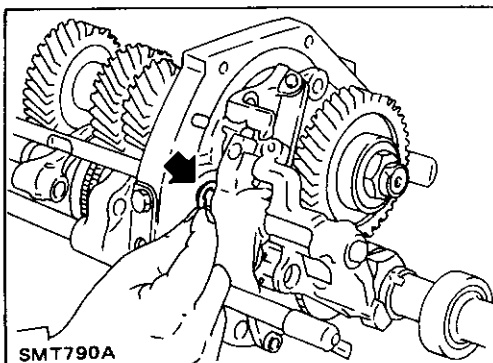

4. Install lever bracket securing bolt


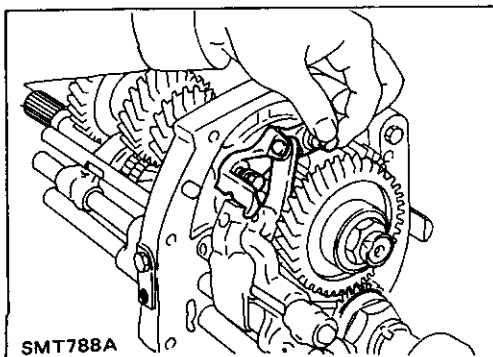


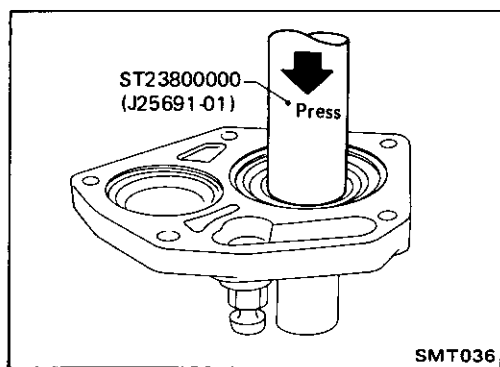

Case Components



- 1 Install front cover oil seal
Apply multi-purpose grease to seal lip.

- 2 Apply sealant to mating surface of transmission case

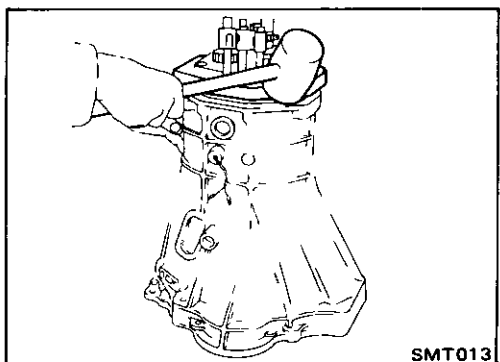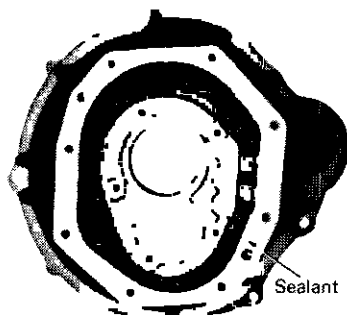


- 3 Slide gear assembly onto adapter plate by lightly tapping with a soft hammer

- 4 Apply sealant to mating surface of adapter plate

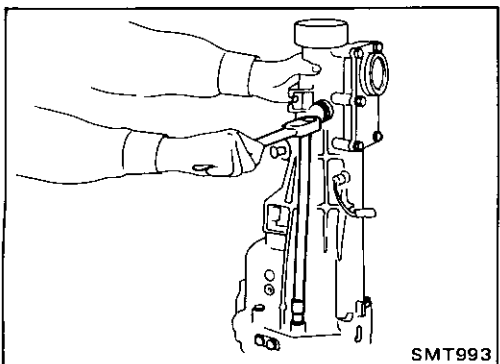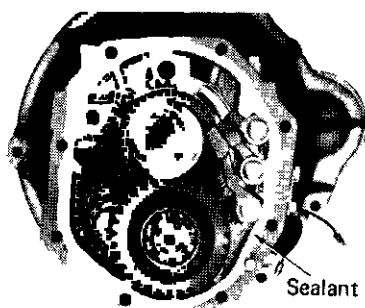

- 5 Install rear extension
- 6 Fit main drive bearing snap ring

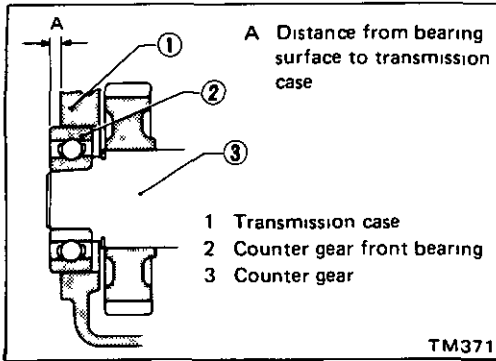

Case Components (Cont'd)

7. Select counter front bearing shim


Unit mm (in)

"A"	Thickness of shim	Part number
4 52 - 4 71 (0 1780 - 0 1854)	Not necessary	
4 42 - 4 51 (0 1740 - 0 1776)	0 1 (0 004)	32218-V5000
4 32 - 4 41 (0 1701 - 0 1736)	0 2 (0 008)	32218-V5001
4 22 - 4 31 (0 1661 - 0 1697)	0 3 (0 012)	32218-V5002
4 12 - 4 21 (0 1622 - 0 1657)	0 4 (0 016)	32218-V5003
4 02 - 4 11 (0 1583 - 0 1618)	0 5 (0 020)	32218-V5004
3 92 - 4 01 (0 1543 - 0 1579)	0 6 (0 024)	32218-V5005


8 Install gasket and front cover

9 Install return spring plugs, check ball, return springs and select check plunger


10 Install control housing and gasket

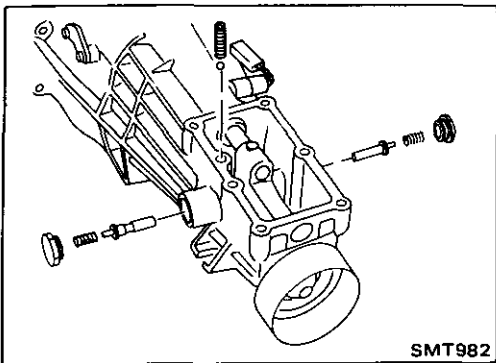


Case Components — FS5R30A

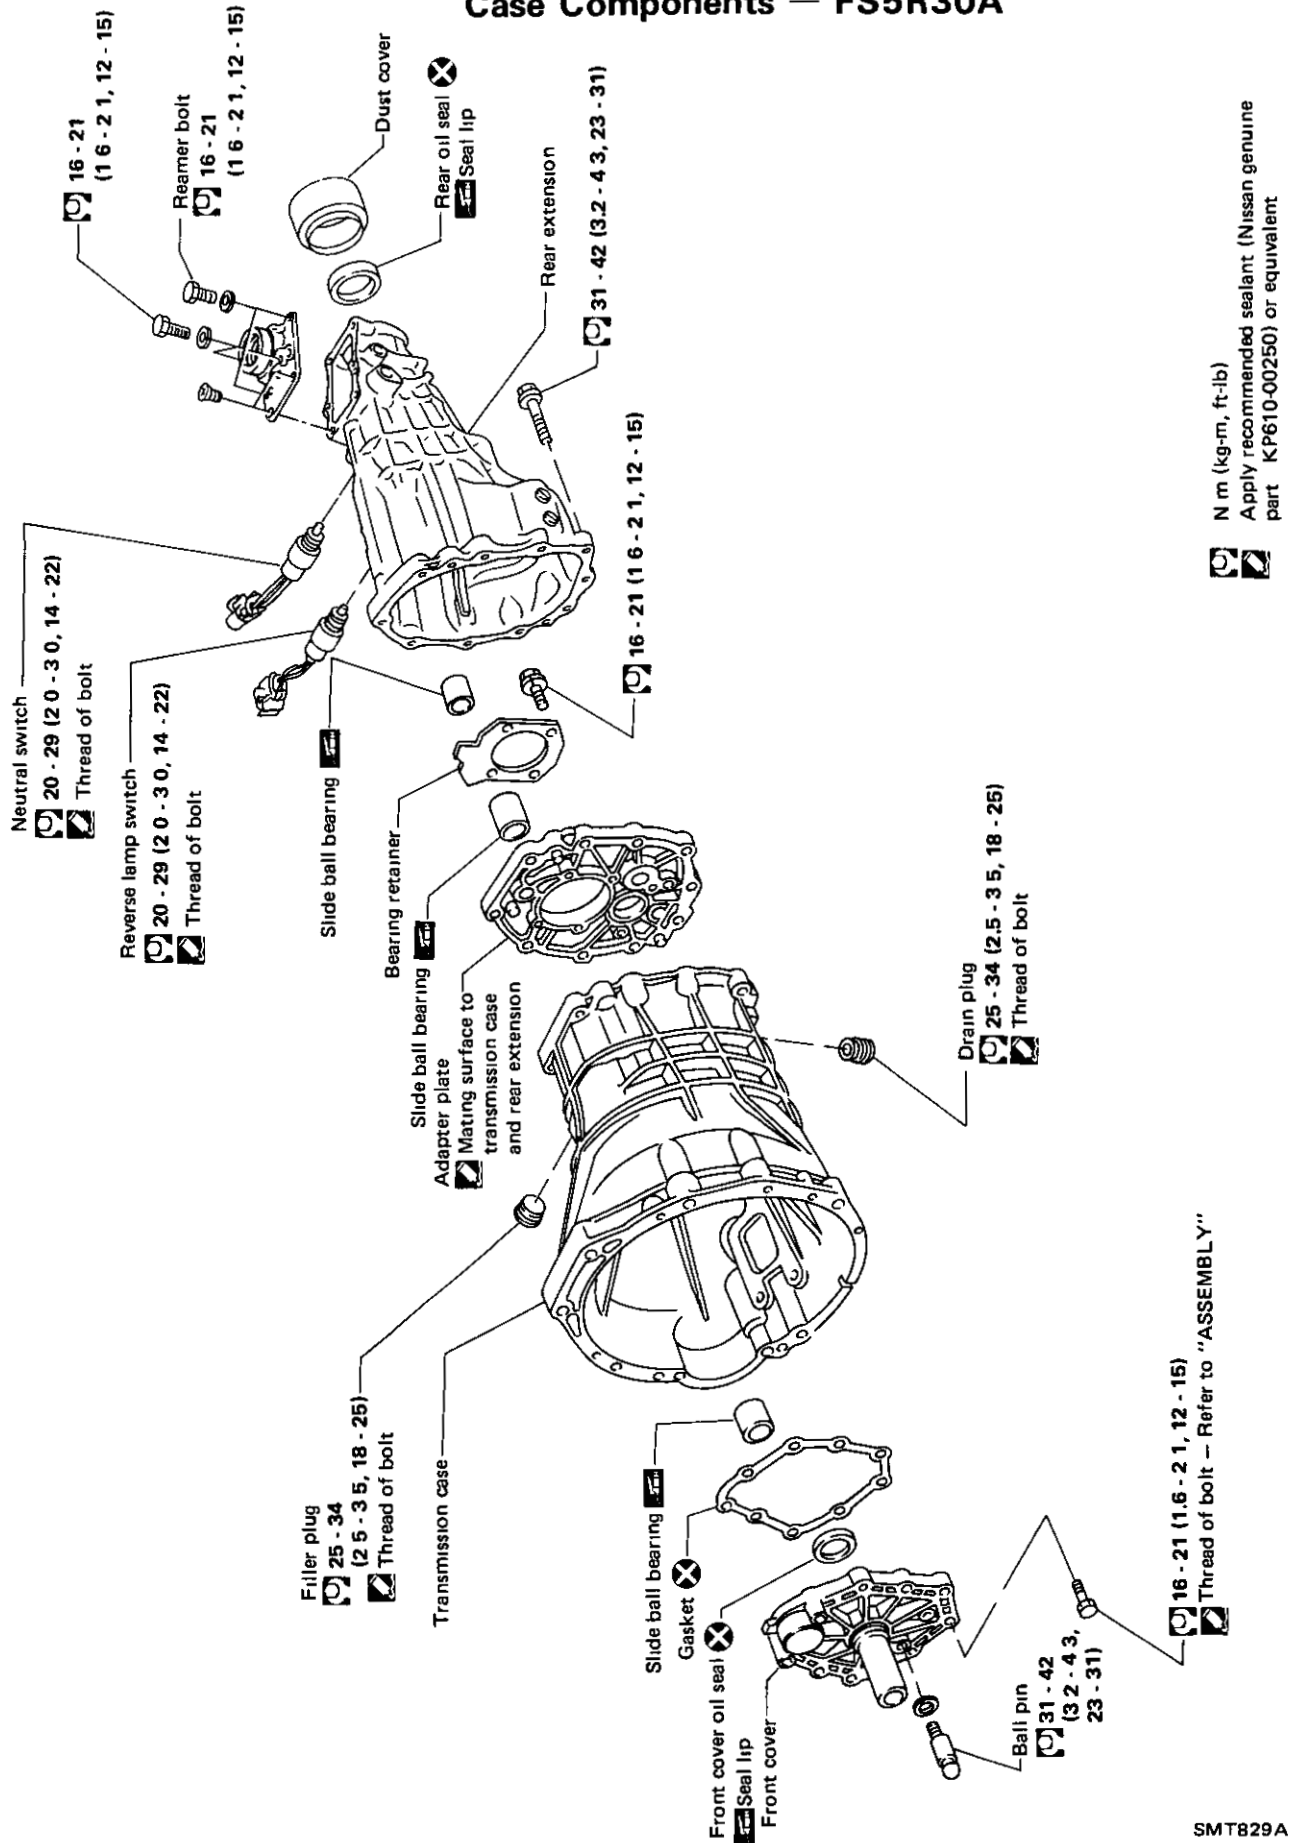

Gear Components — FS5R30A

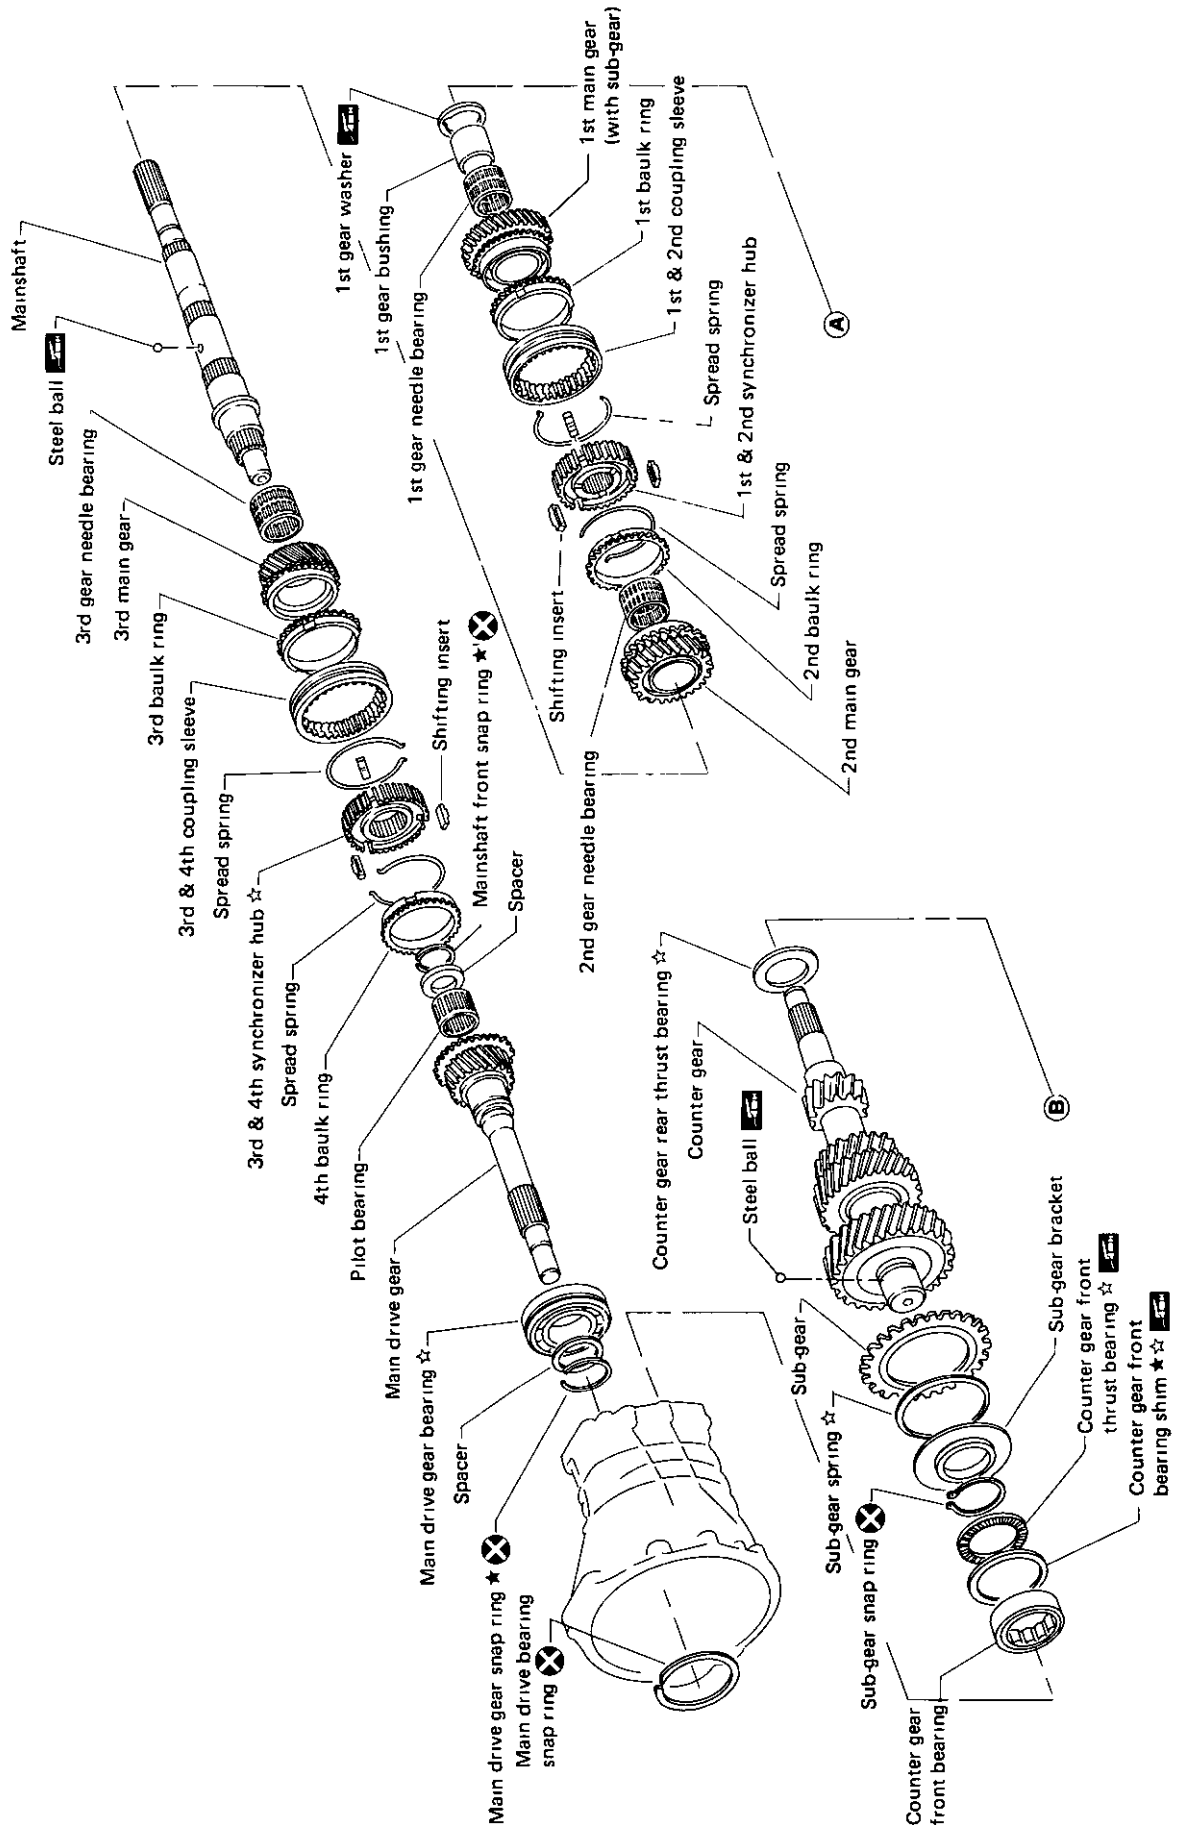


Gear Components — FS5R30A (Cont'd)

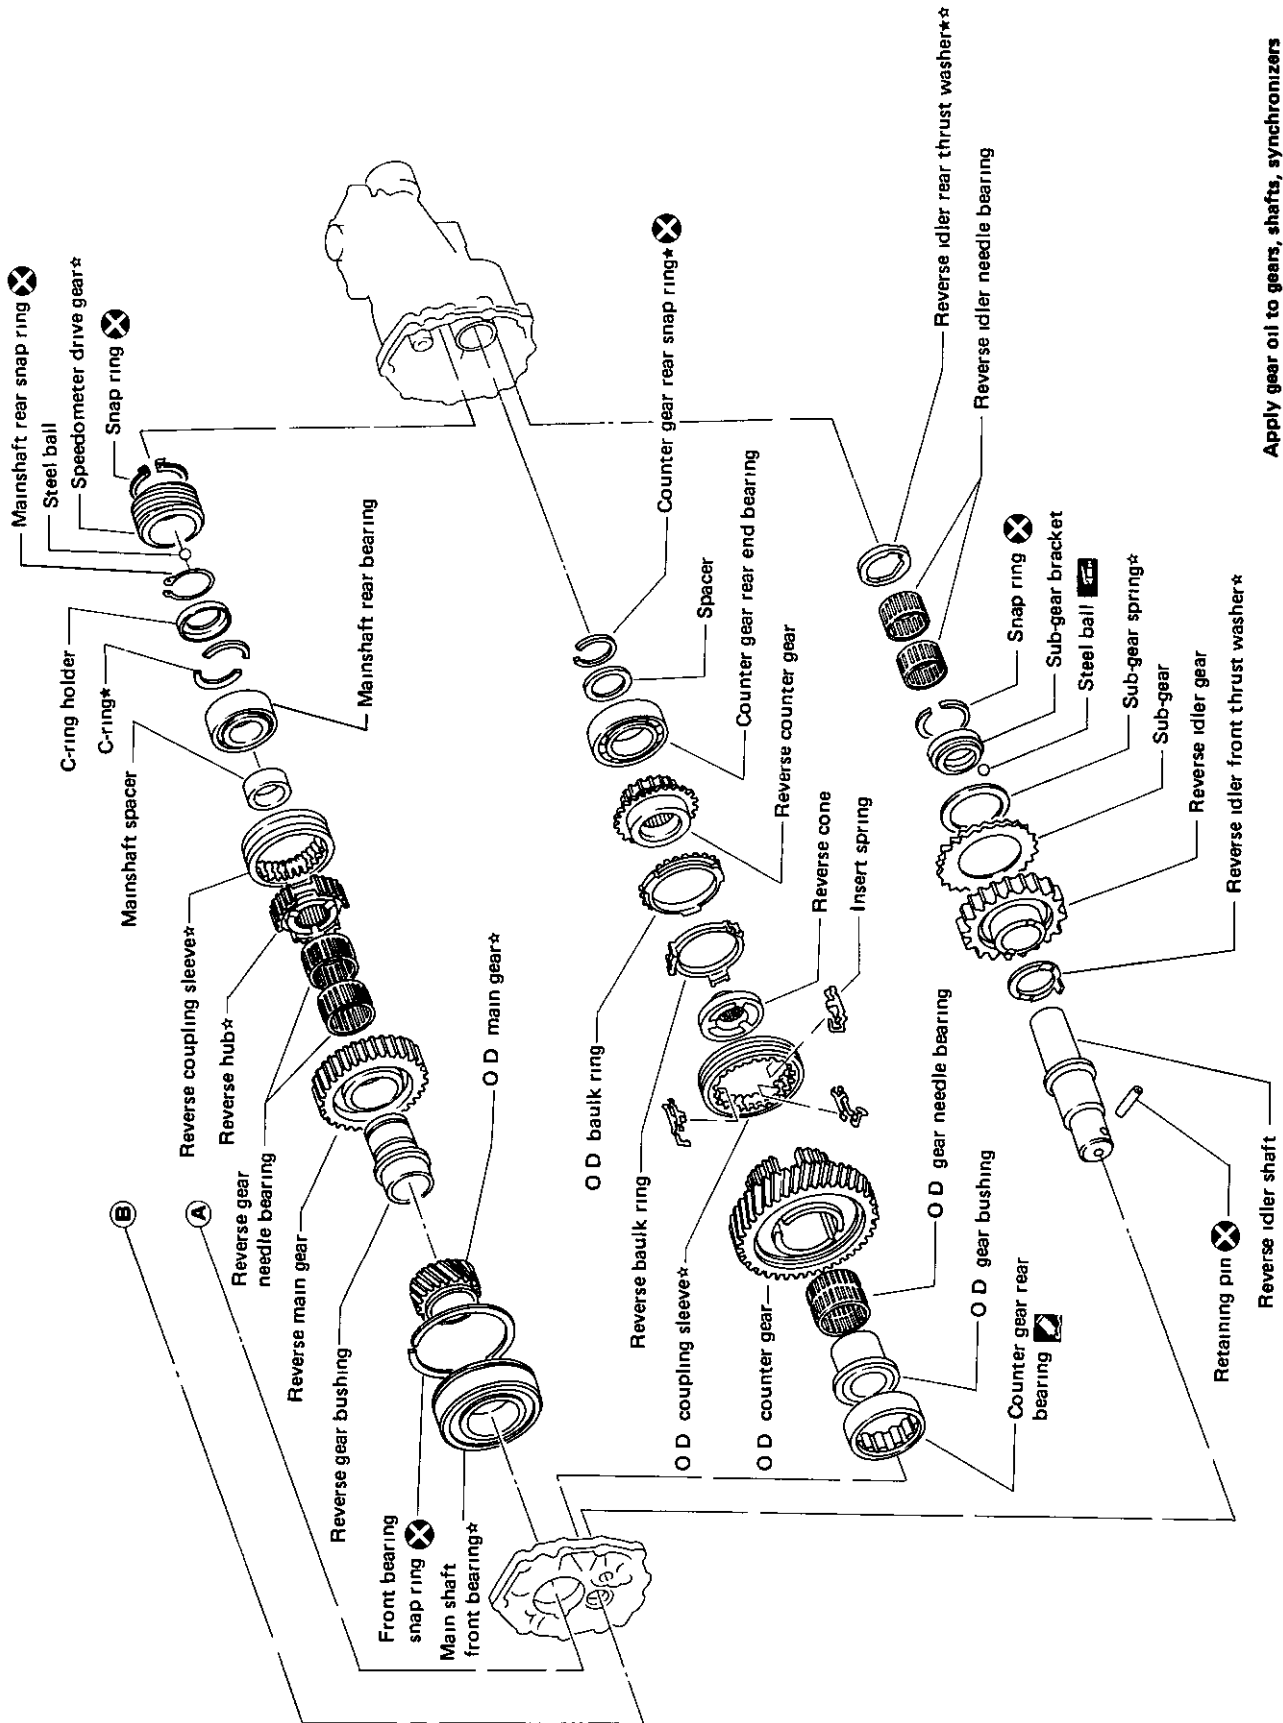

Apply gear oil to gears, shafts, synchronizers and bearings when assembling.

- ★ Select with proper thickness
- ★ Pay attention to its direction

Shift Control Components — FS5R30A

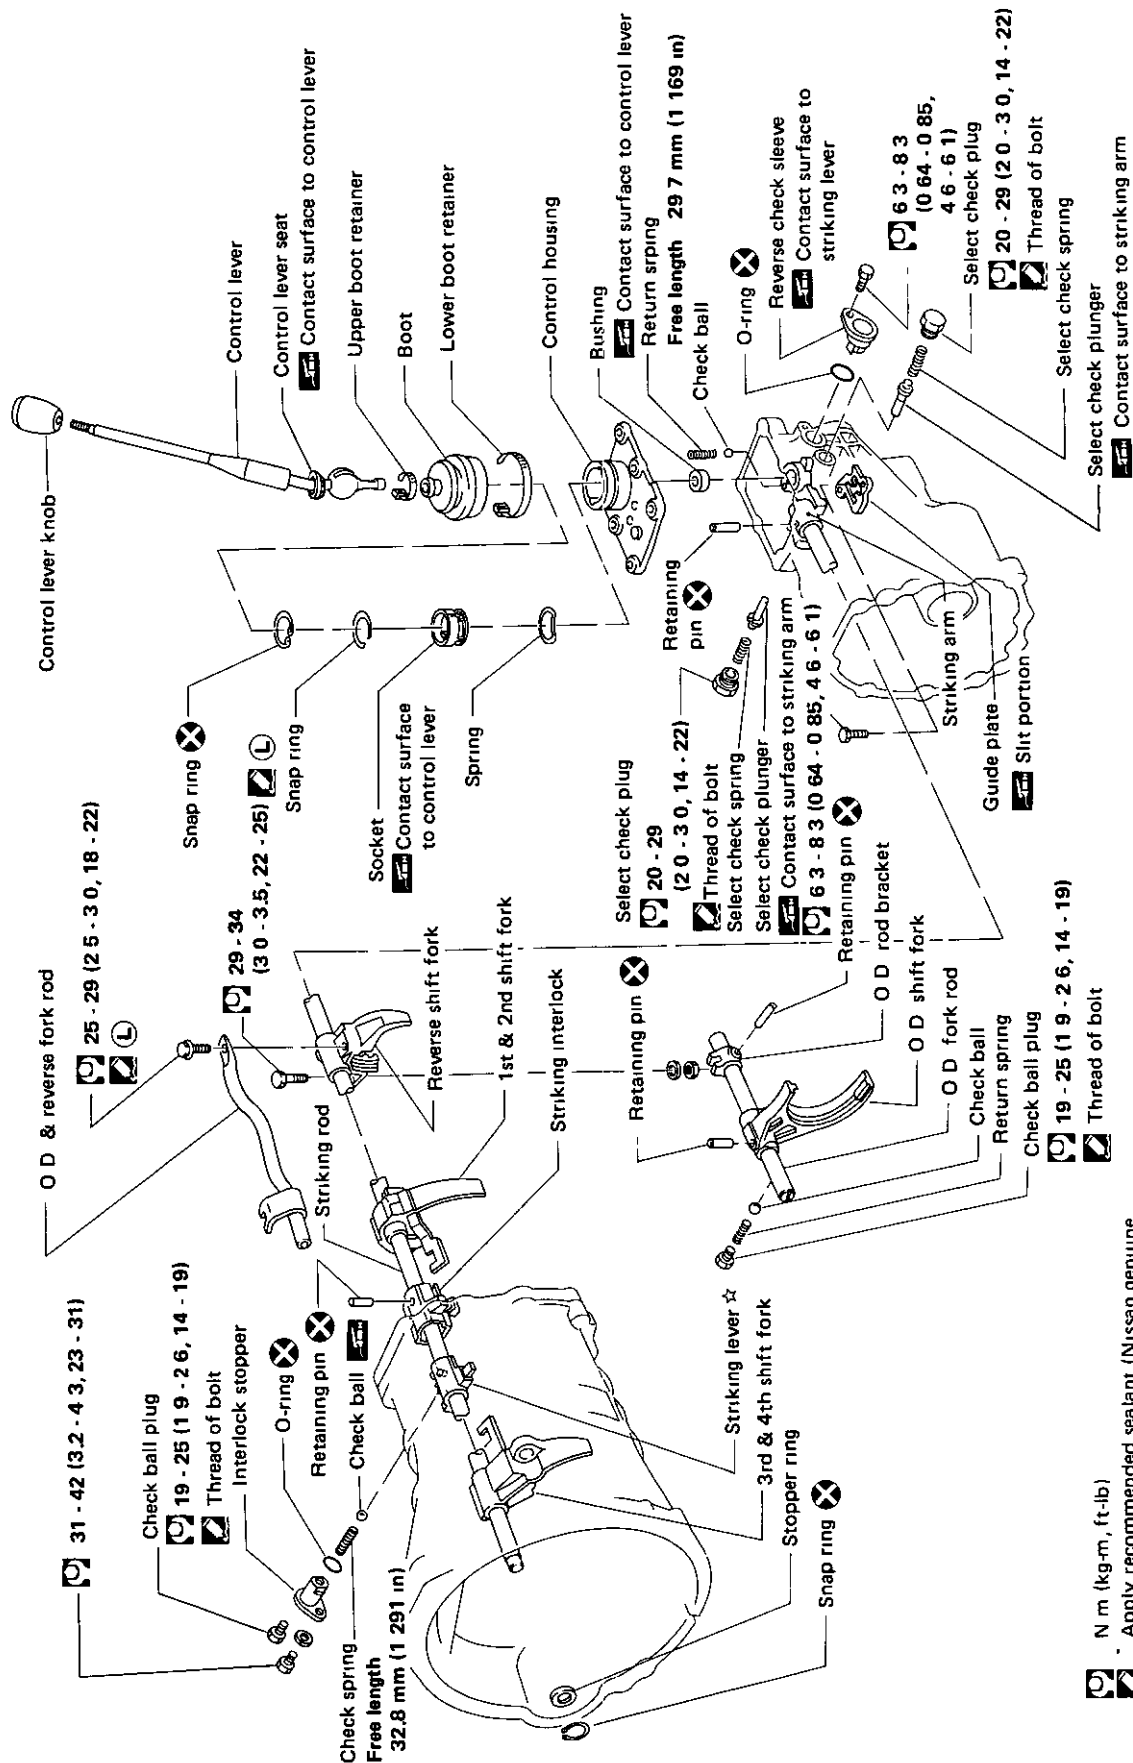


N m (kg-m, ft-lb)

Apply recommended sealant (Nissan genuine part KP610-00250) or equivalent


Apply locking sealer

Pay attention to its direction

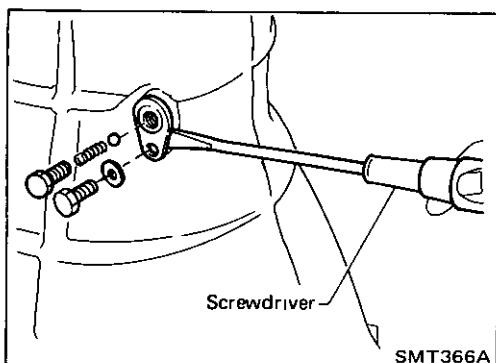


Case Components


- 1 Remove check ball plug, check spring and check ball. Then remove interlock stopper.
If interlock assembly is removed as a unit, the check ball can fall into transmission case.

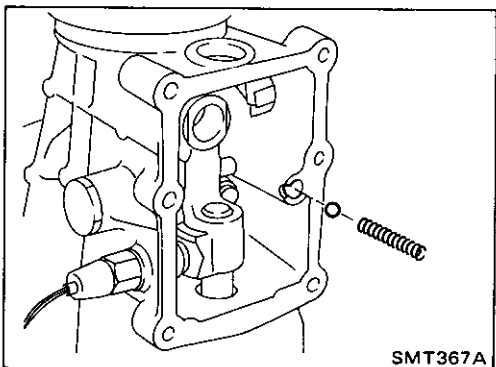

- 2 Remove control housing, return spring and check ball

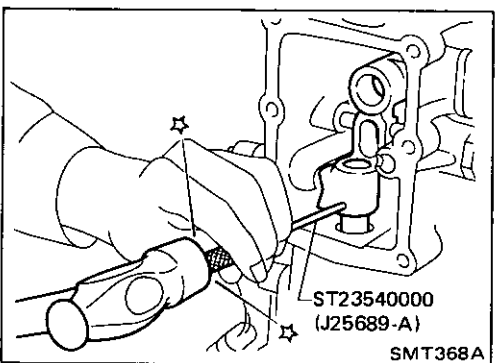


- 3 Drive out retaining pin from striking arm

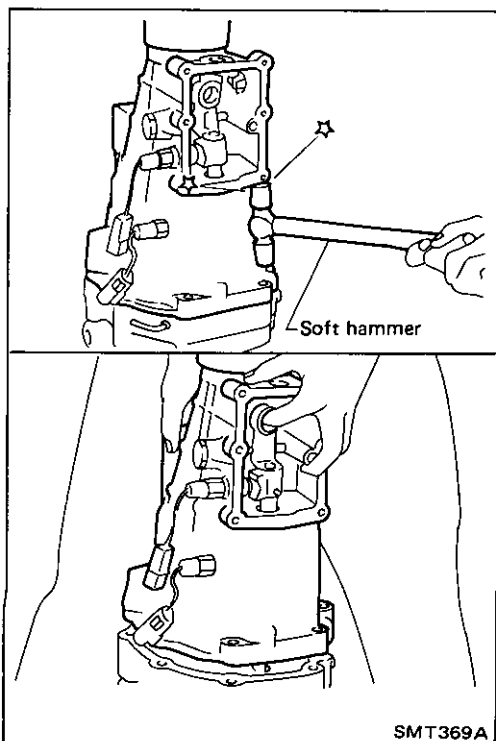


4. Remove rear extension together with striking arm by tapping lightly.

Case Components (Cont'd)


- 5 Remove front cover and gasket

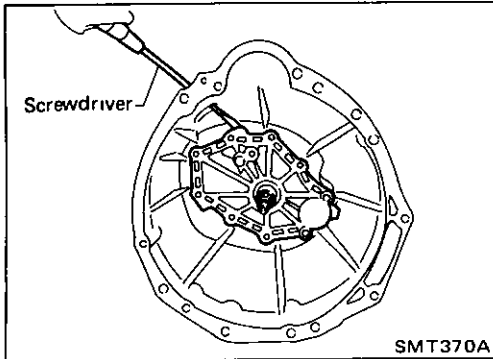


- 6 Remove stopper ring and main drive bearing snap ring

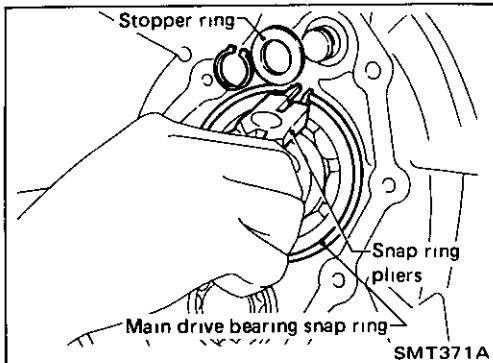

- 7 Remove transmission case by tapping lightly

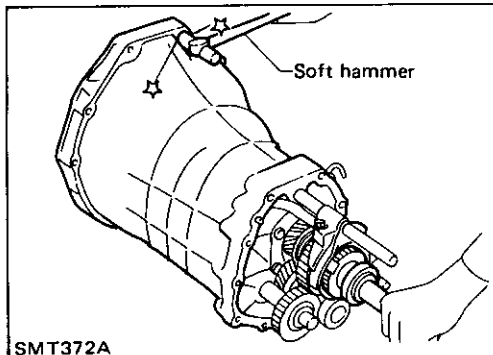



- 8 Remove front cover oil seal

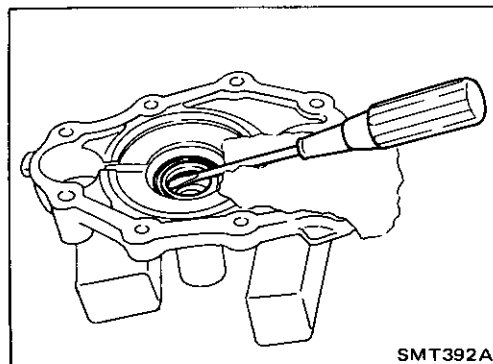


Shift Control Components

- 1 Mount adapter plate on vise
- 2 Remove O D & reverse fork rod

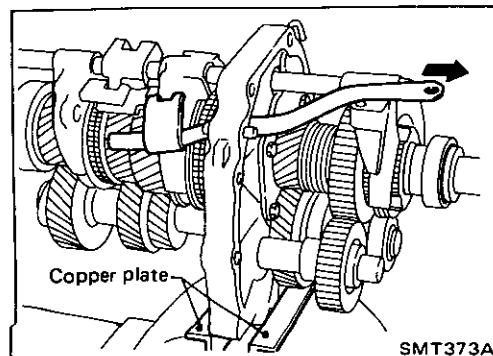

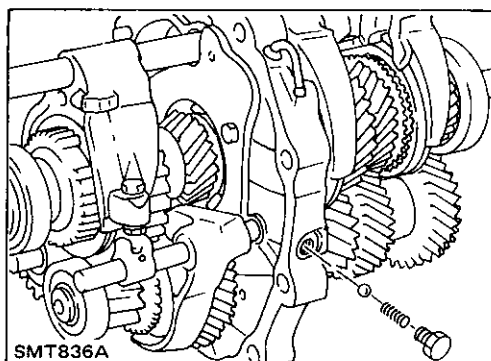
Shift Control Components (Cont'd)

3. Remove check ball plug, check ball and return spring

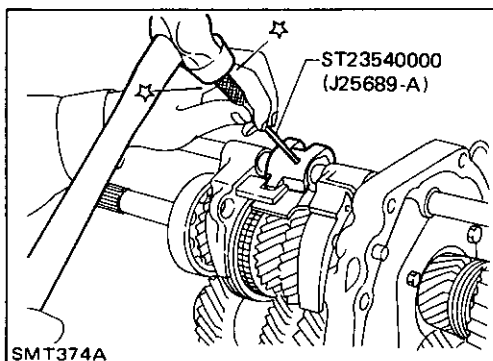


4 Drive out retaining pin from striking lever

5 While pulling out striking rod, remove striking lever and striking interlock. Then remove 1st & 2nd, 3rd & 4th and reverse shift fork

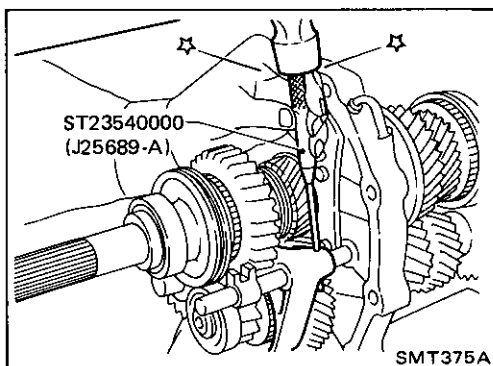

6 Drive out retaining pin from O D shift fork

7. Pull out O D. fork rod and then remove O D shift fork

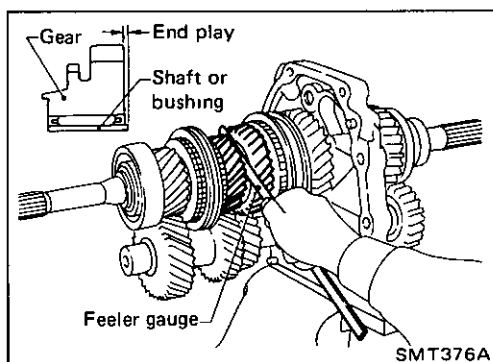**Gear Components**



1 Before removing gears and shafts, measure each gear end play

Gear	End play mm (in)
1st main gear	0.23 - 0.33 (0.0091 - 0.0130)
2nd main gear	0.23 - 0.33 (0.0091 - 0.0130)
3rd main gear	0.23 - 0.33 (0.0091 - 0.0130)
O D counter gear	0.23 - 0.33 (0.0091 - 0.0130)
Reverse main gear	0.33 - 0.43 (0.0130 - 0.0169)


- If not within specification, disassemble and check contact surface of gear to hub, washer, bushing, needle bearing and shaft

Gear Components (Cont'd)


2. Remove rear side components on mainshaft and counter gear.
 - a. Remove snap ring, speedometer drive gear and steel ball
 - b. Remove reverse coupling sleeve.

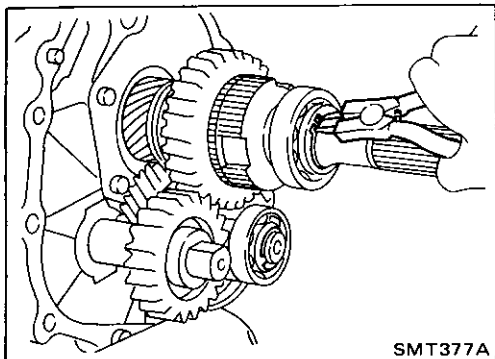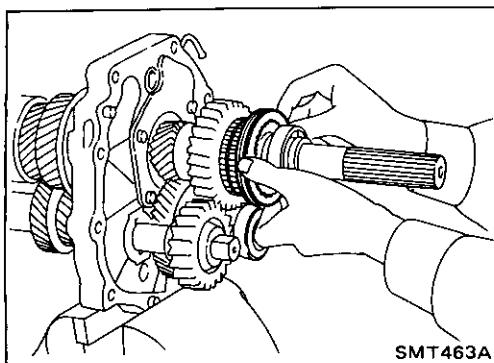


- c. Remove mainshaft rear snap ring and counter gear rear snap ring
- d. Remove C-ring holder and mainshaft C-rings from mainshaft
Use punch and hammer to remove C-rings

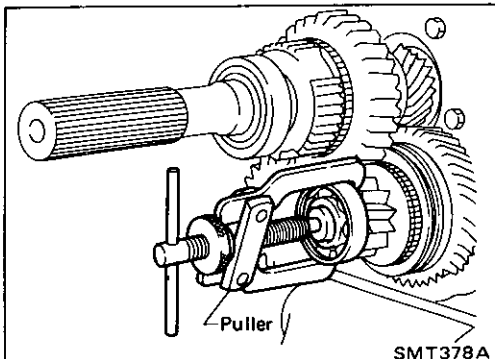

- e. Pull out counter gear rear end bearing
- f. Remove reverse idler gear and reverse idler thrust washers

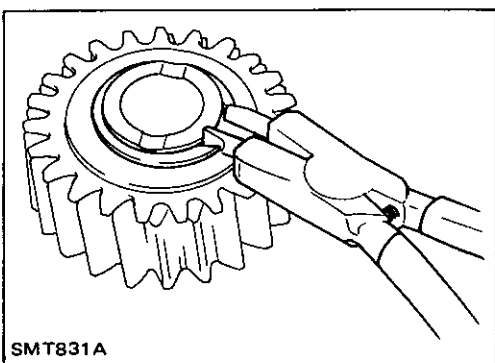


- g. Remove sub-gear from reverse idler gear.

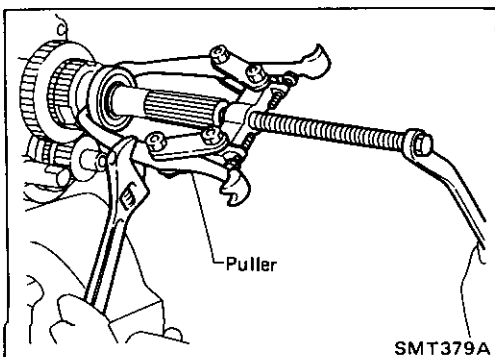


- h. Pull out mainshaft rear bearing (2WD model)

Gear Components (Cont'd)


- i. Pull out reverse main gear together with mainshaft spacer and reverse synchronizer hub. Then remove reverse gear needle bearings

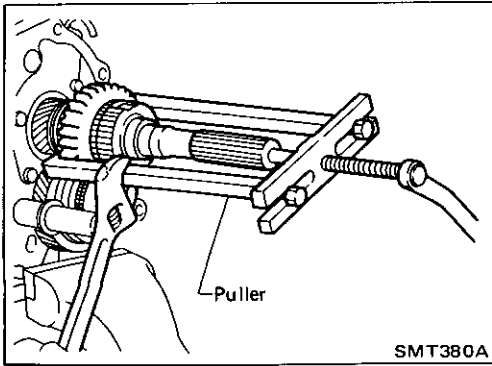


- j. Pull out reverse counter gear
- k. Remove O D coupling sleeve together with O.D baulk ring, reverse baulk ring and spring inserts

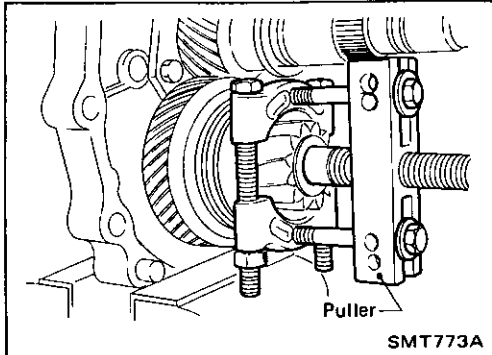

- l. Pull out reverse gear bushing


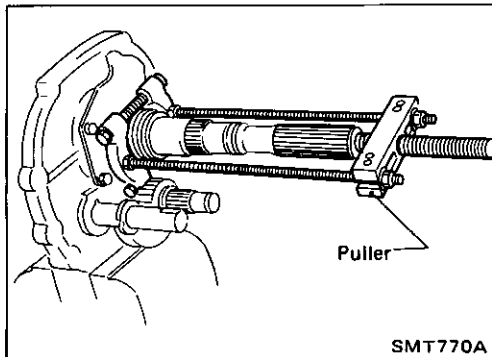


- m. Pull out O D counter gear together with reverse cone

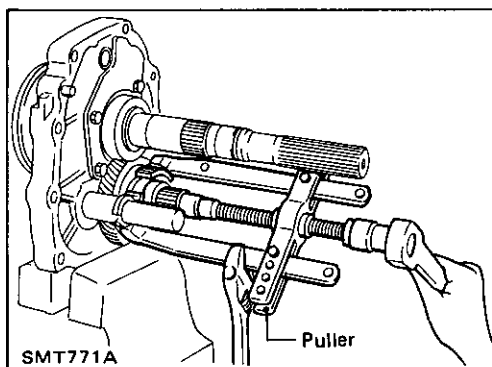

Gear Components (Cont'd)


3 Press out mainshaft and counter gear alternately

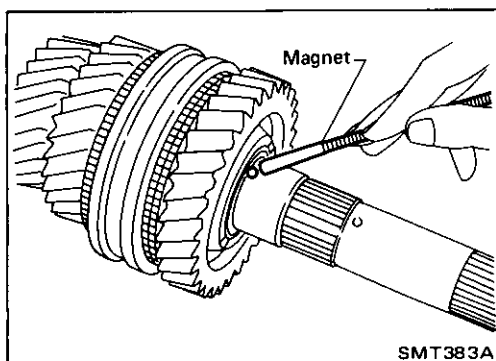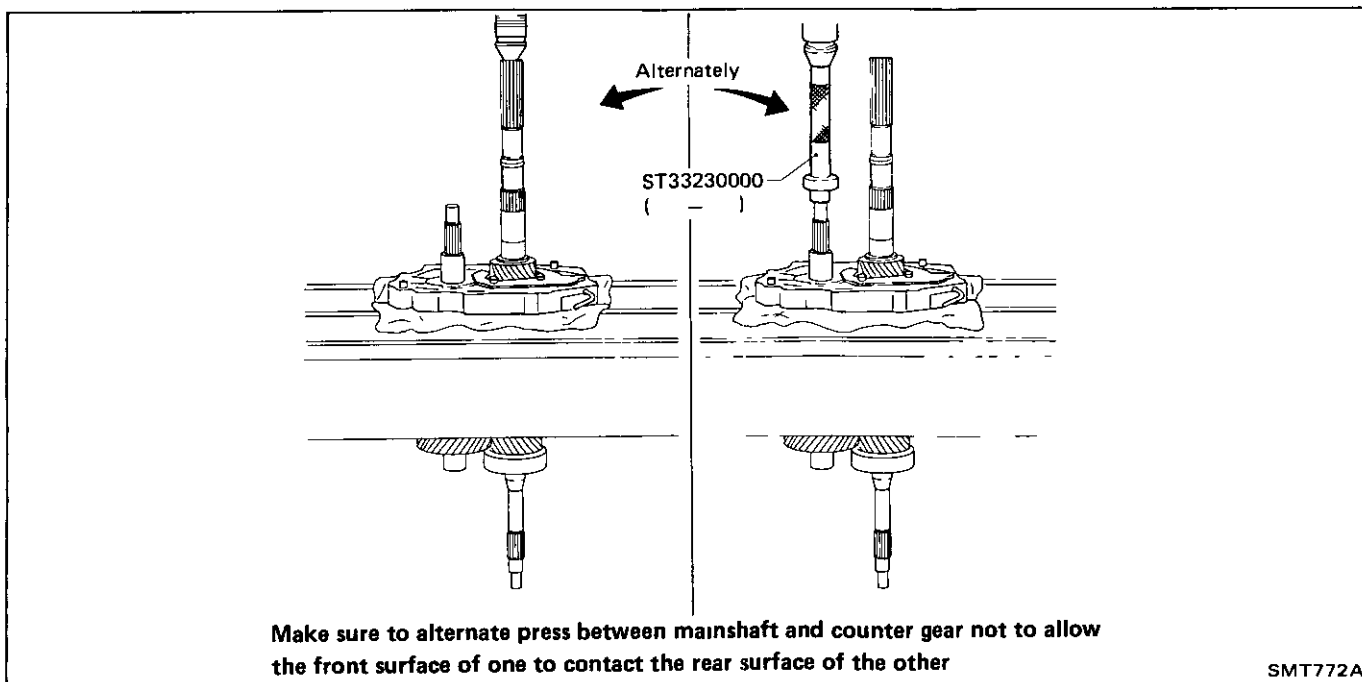

4 Remove front side components on mainshaft


a Remove 1st gear washer and steel ball

b Remove 1st main gear and 1st gear needle bearing

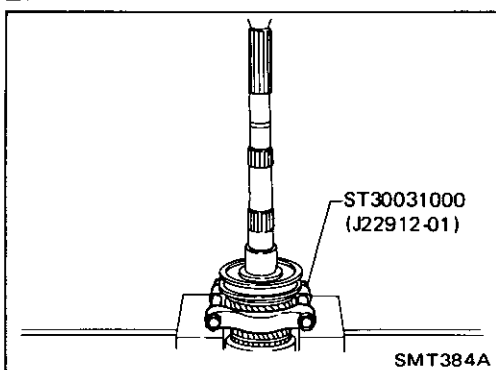

c Press out 2nd main gear together with 1st gear bushing and 1st & 2nd synchronizer assembly

d Remove mainshaft front snap ring

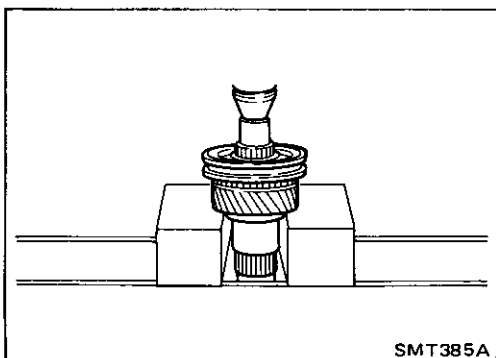


e Press out 3rd main gear together with 3rd & 4th synchronizer assembly and 3rd gear needle bearing


Gear Components (Cont'd)

5 Remove front side components on counter gear

a Remove counter gear rear thrust bearing

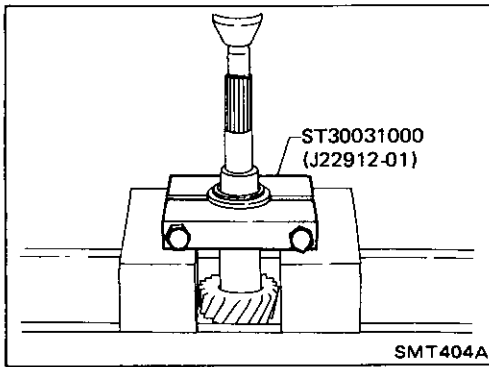


b Remove sub gear components.

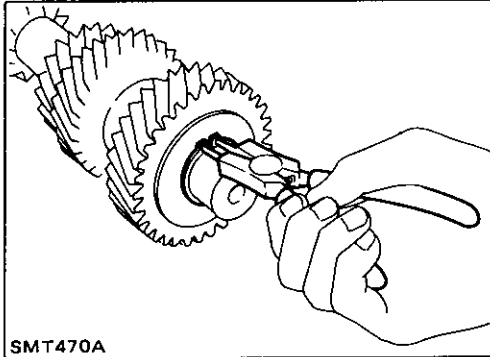

6 Remove main drive gear bearing


a Remove main drive gear snap ring and spacer

b Press out main drive gear bearing

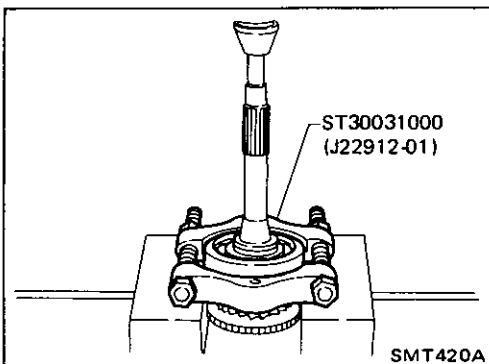


7. Remove bearings from case components


Counter gear front bearing in transmission case

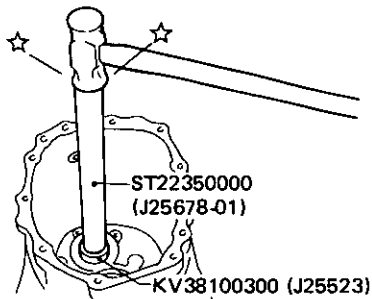


Mainshaft front bearing in adapter plate

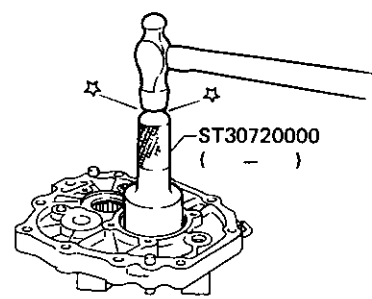


Counter gear rear bearing in adapter plate

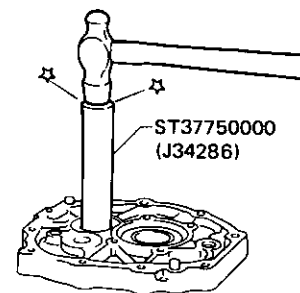

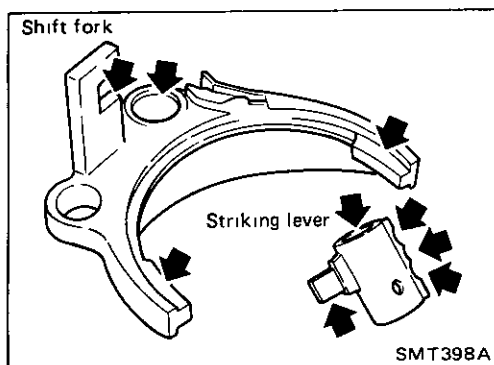

Shift Control Components



- Check contact surface and sliding surface for wear, scratches, projections or other damage

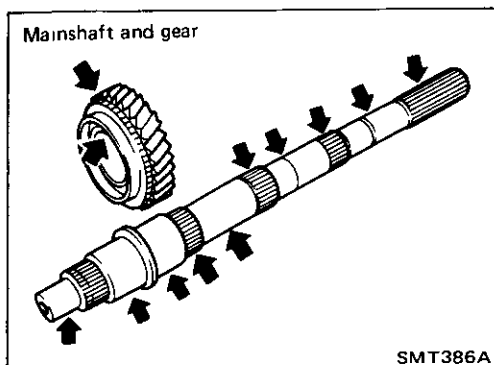

Gear Components


GEARS AND SHAFTS

- Check shafts for cracks, wear or bending
- Check gears for excessive wear, chips or cracks

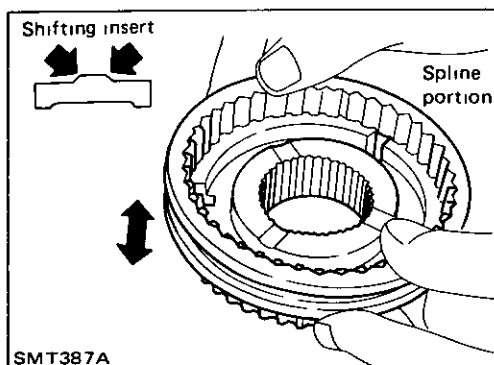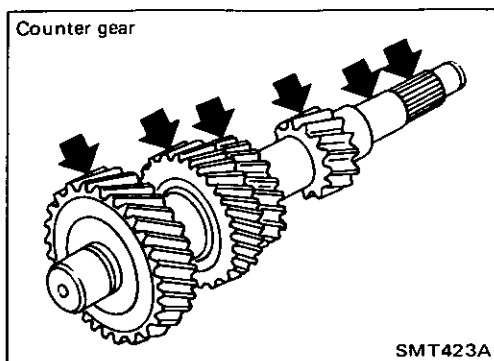

SYNCHRONIZERS


- Check spline portion of coupling sleeves, hubs, and gears for wear or cracks
- Check baulk rings for cracks or deformation
- Check shifting inserts for wear or deformation
- Check insert springs for deformation

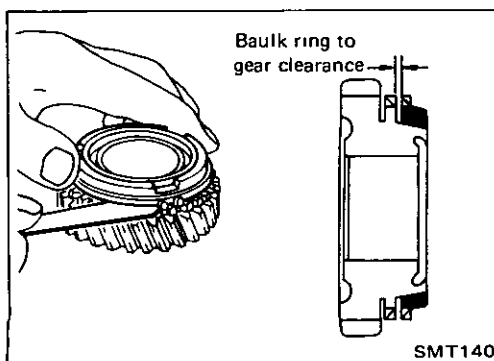

Clearance between baulk ring and gear

		Unit mm (in)
	Standard	Wear limit
1st & 2nd	1.05 - 1.3 (0.0413 - 0.0512)	0.7 (0.028)
3rd & main drive	1.05 - 1.3 (0.0413 - 0.0512)	0.7 (0.028)
O.D.	1.05 - 1.3 (0.0413 - 0.0512)	0.7 (0.028)

If the clearance is smaller than the wear limit, replace baulk ring

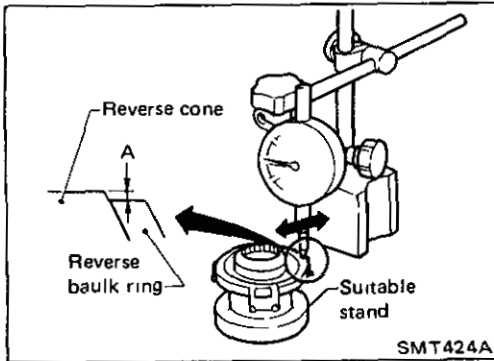


Gear Components (Cont'd)

- Measure wear of reverse baulk ring.
- a Place baulk ring in position on reverse cone
- b. While holding baulk ring against reverse cone as far as it will go, measure dimension "A" with dial indicator.

Unit mm (in)		
	Standard	Wear limit
Dimension "A"	-0.1 to 0.35 (-0.0039 to 0.0138)	0.7 (0.028)

- c If dimension "A" is larger than the wear limit, replace baulk ring

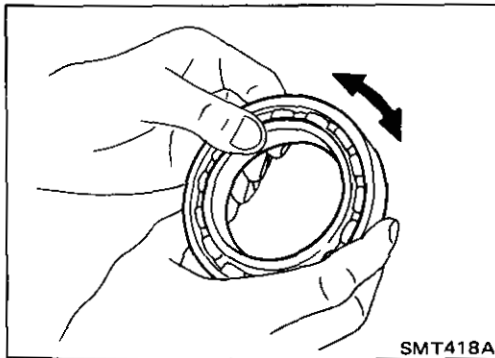


BEARINGS

- Make sure bearings roll freely and are free from noise, crack, pitting or wear

Gear Components


1 Install bearings into case components

Counter gear front bearing in transmission case

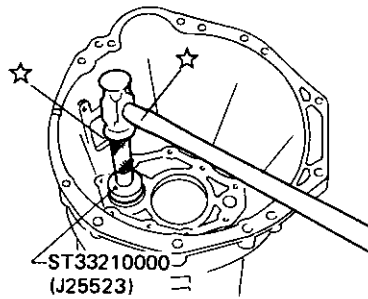


SMT389A

Mainshaft front bearing in adapter plate

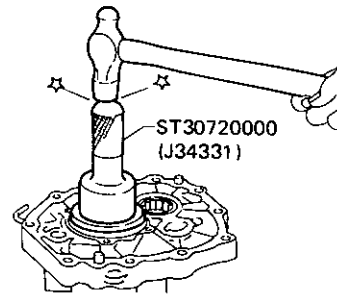


SMT397A

Counter gear rear bearing in adapter plate

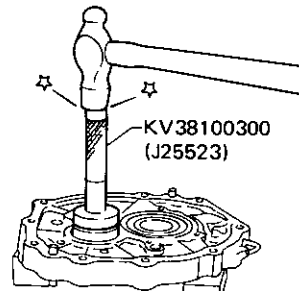


SMT395A

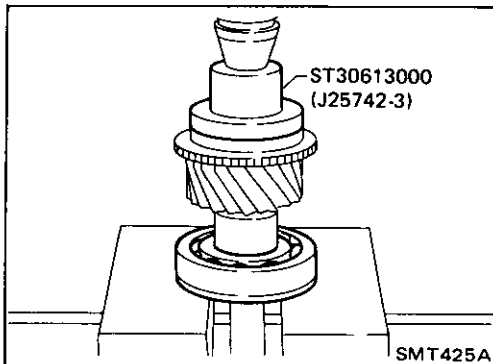

SMT425A

- 2 Install main drive gear bearing
 - a Press main drive gear bearing
 - b Install main drive gear spacer

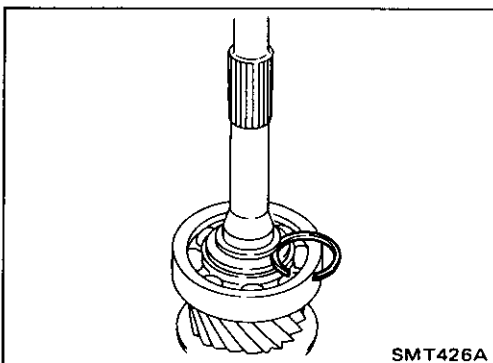

SMT426A

- c Select proper main drive gear snap ring to minimize clearance of groove

Allowable clearance of groove:

0 - 0.1 mm (0 - 0.004 in)

Main drive gear snap ring

Thickness mm (in)	Part number
1.89 (0.0744)	32204-01G00
1.98 (0.0780)	32204-01G01
2.05 (0.0807)	32204-01G02
2.12 (0.0835)	32204-01G03
2.19 (0.0862)	32204-01G04


- d Install selected snap ring on main drive gear

Gear Components (Cont'd)


3 Install components on counter gear

a Install sub-gear components

When installing sub-gear snap ring, tap sub-gear snap ring into position on counter gear.

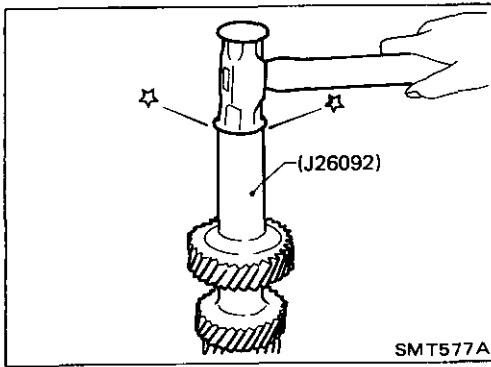


b Install counter gear rear thrust bearing

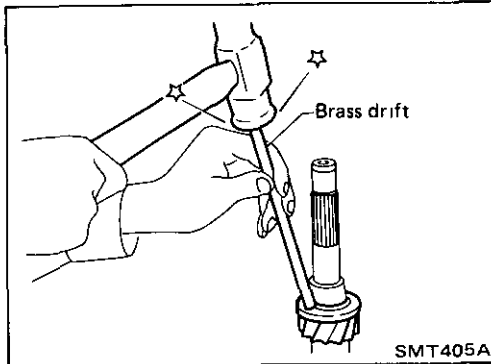


4 Install front side components on mainshaft

a Assemble 1st & 2nd synchronizer

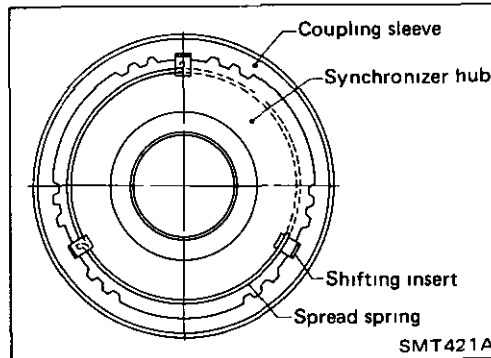


b Assemble 3rd & 4th synchronizer

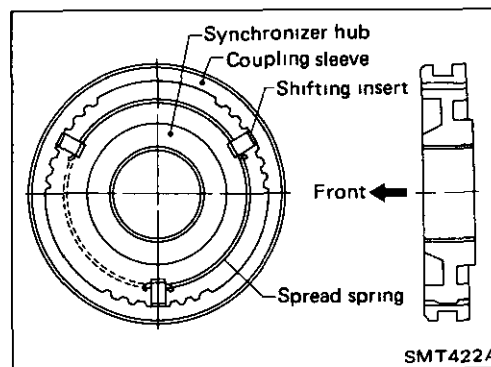

c Press on 3rd & 4th synchronizer assembly together with 3rd main gear and 3rd gear needle bearing

Pay attention to direction of synchronizer assembly.

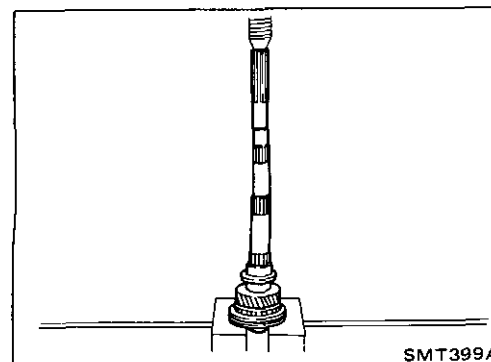

Gear Components (Cont'd)

- d Select proper snap ring to minimize clearance of groove


Allowable clearance of groove*

0 - 0.1 mm (0 - 0.004 in)


Mainshaft front snap ring

Thickness mm (in)	Part number
1.89 (0.0744)	32204-01G00
1.98 (0.0780)	32204-01G01
2.05 (0.0807)	32204-01G02
2.12 (0.0835)	32204-01G03
2.19 (0.0862)	32204-01G04

- e Install selected snap ring on mainshaft

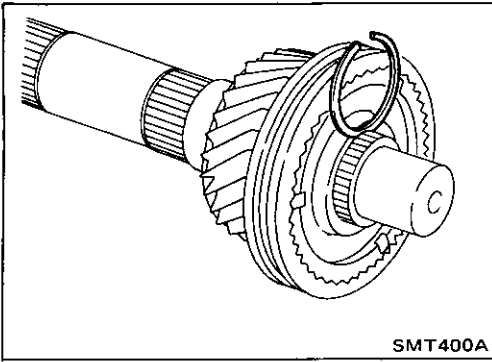


- f Press on 1st & 2nd synchronizer assembly together with 2nd main gear and 2nd gear needle bearing

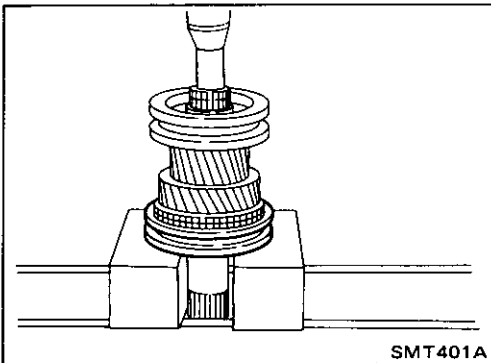


- g Press on 1st gear bushing using 1st gear washer

- h Install 1st main gear and needle bearing

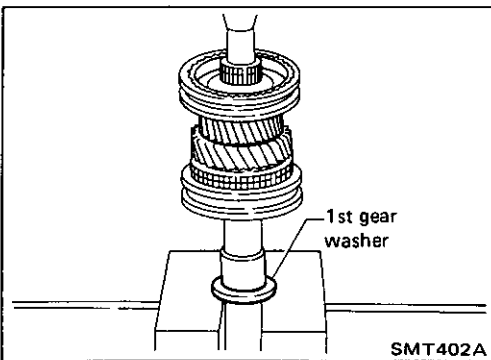



- i Install steel ball and 1st gear washer

Apply multi-purpose grease to steel ball and 1st gear washer before installing.

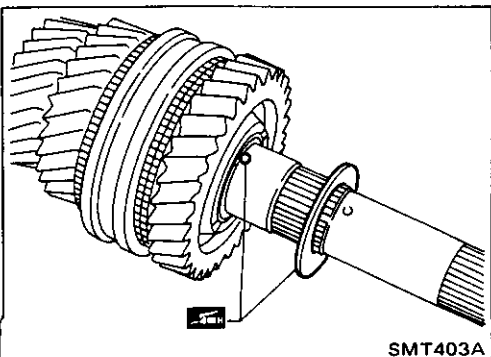

Gear Components (Cont'd)

- 5 Select proper counter gear front bearing shim when replacing transmission case, counter gear, counter gear thrust bearing or sub-gear components.
 - a Install counter gear with sub-gear components, counter gear front and rear thrust bearing on adapter plate
 - b Remove counter gear front bearing shim from transmission case
 - c Place adapter plate and counter gear assembly in transmission case (case inverted)

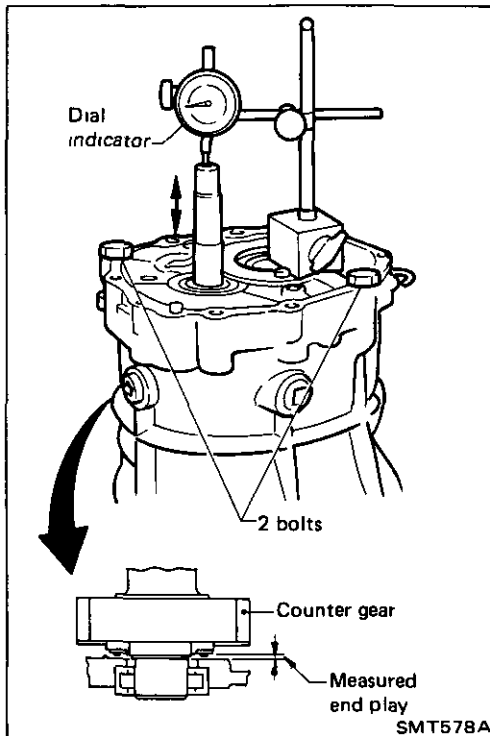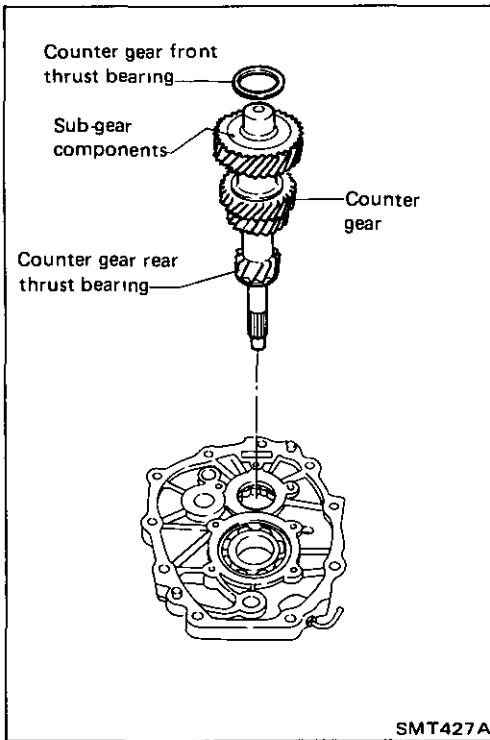

- d. Tighten adapter plate to transmission case using 2 bolts
- e Place dial indicator on rear end of counter gear
- f Move counter gear up and down and measure dial indicator deflection
- g. Select proper shim using table below as a guide

Counter gear end play:

0.10 - 0.25 mm (0.0039 - 0.0098 in)

Table for selecting proper counter gear front bearing shim

Dial indicator deflection mm (in)	Thickness of proper washer mm (in)	Part number
0.93 - 1.02 (0.0366 - 0.0402)	0.8 (0.031)	32218-01G00
1.03 - 1.12 (0.0406 - 0.0441)	0.9 (0.035)	32218-01G01
1.13 - 1.22 (0.0445 - 0.0480)	1.0 (0.039)	32218-01G02
1.23 - 1.32 (0.0484 - 0.0520)	1.1 (0.043)	32218-01G03
1.33 - 1.42 (0.0524 - 0.0559)	1.2 (0.047)	32218-01G04
1.43 - 1.52 (0.0563 - 0.0598)	1.3 (0.051)	32218-01G05
1.53 - 1.62 (0.0602 - 0.0638)	1.4 (0.055)	32218-01G06



Gear Components (Cont'd)

- 6 Select proper reverse idler rear thrust washer when replacing rear extension, reverse idler gear, reverse idler shaft or reverse idler thrust washer
- a. Install reverse idler gear, reverse idler needle bearings, reverse idler thrust washers and reverse idler shaft into rear extension.

When replacing reverse idler rear washer, install either A or B

Reverse idler rear thrust washer

	Thickness mm (in)	Part number
A	1.97 (0.0776)	32284-01G10
B	2.07 (0.0815)	32284-01G11

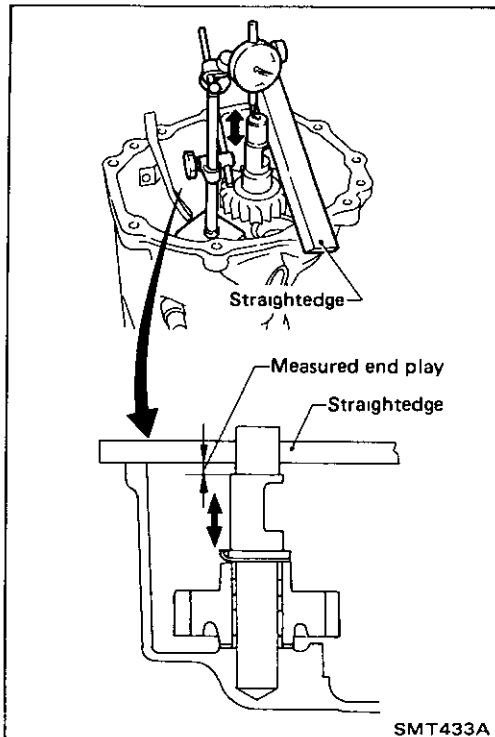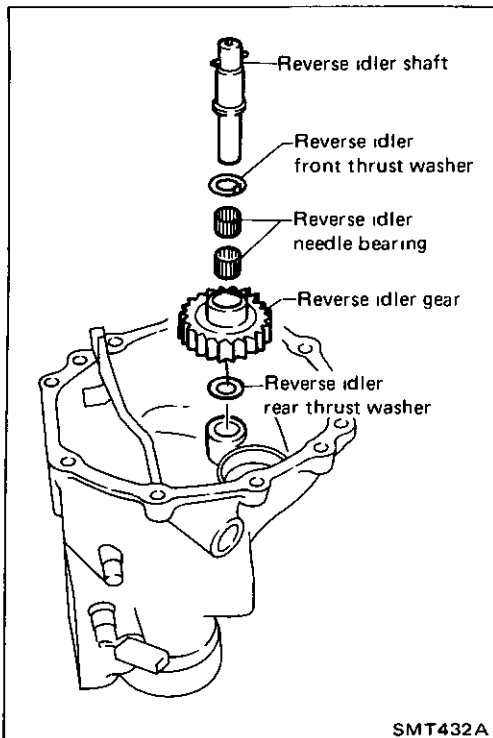

- b. Place dial indicator on front end of reverse idler shaft
- c. Put straightedge on front surface of rear extension as a stopper of reverse idler shaft
- d. Move reverse idler shaft up and down and measure reverse idler gear end play


Reverse idler gear end play

0.30 - 0.53 mm (0.0118 - 0.0209 in)


- e. If not within specification, replace reverse idler rear thrust washer with the other (A or B) and check again

Gear Components (Cont'd)


- 7 Install mainshaft and counter gear on adapter plate and main drive gear on mainshaft
 - a Mount adapter plate on vise and apply multi-purpose grease to counter gear rear bearing

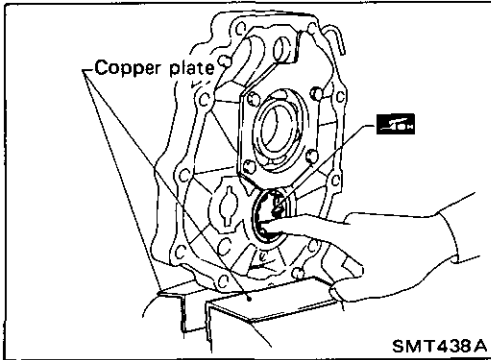


- b Install mainshaft a little on mainshaft front bearing
To allow for installation of counter gear, do not install mainshaft completely.

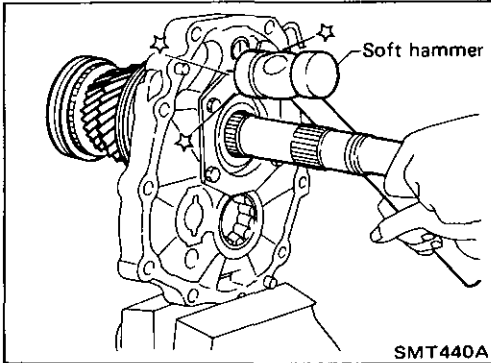


- c. Install counter gear on counter gear rear bearing and install main drive gear, pilot bearing and spacer on mainshaft

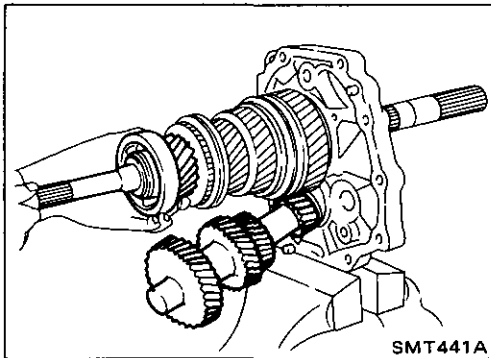

When installing counter gear into counter gear rear bearing, push up on upper roller of counter gear rear bearing with screwdriver.

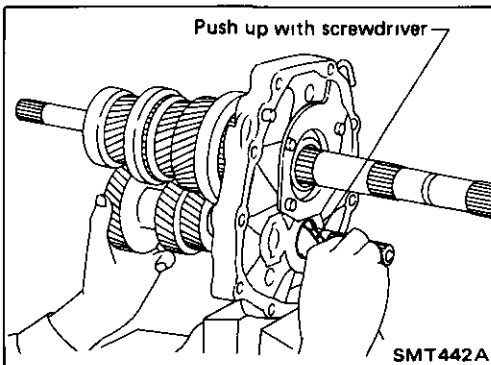


- d Install Tools (J26349-3) onto adapter plate and C-ring and C-ring holder on mainshaft.
 - e. Install Tool (J34328) on mainshaft

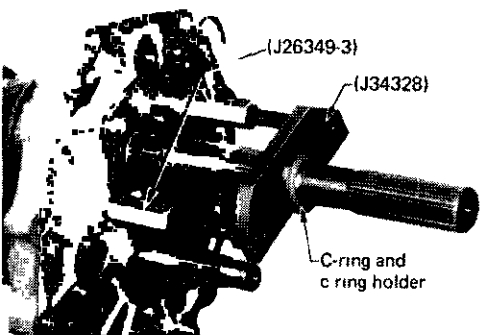


Gear Components (Cont'd)


- f Install mainshaft and counter gear completely by extending length of J26349-3

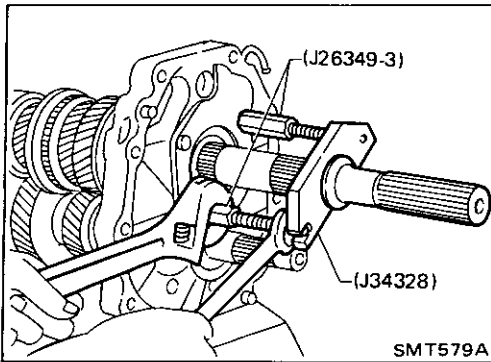


- 8 Install rear side components on mainshaft and counter gear
a Install O D gear bushing while pushing on the front of counter gear

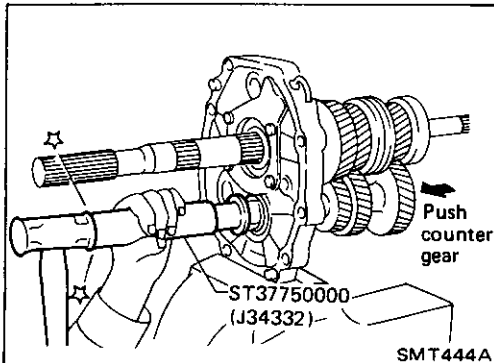


- b Install O.D main gear
Pay attention to direction of O.D. main gear (B is wider than A as shown at left.)
c Install adapter plate with gear assembly onto transmission case
d Install O.D. gear needle bearing and then install O D counter gear and reverse idler shaft

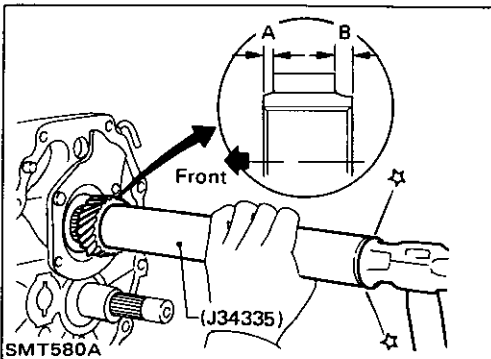

- e. Install reverse gear bushing.

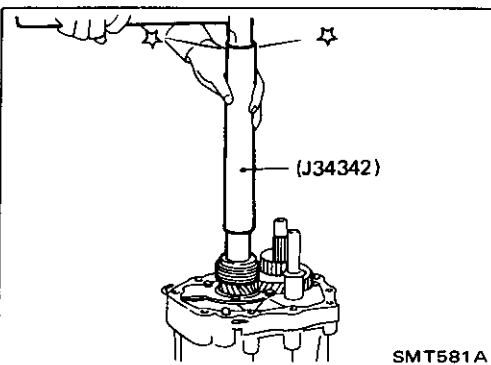



- f Install reverse cone

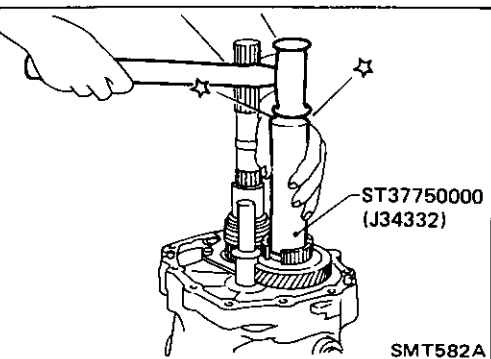


Gear Components (Cont'd)

- g Install insert springs and reverse baulk ring on O D coupling sleeve. Then install them and O D baulk ring on O D counter gear


Pay attention to direction of O.D. coupling sleeve.

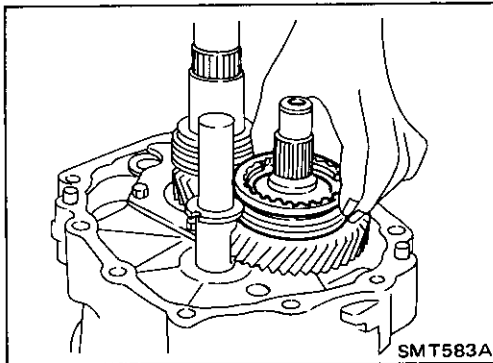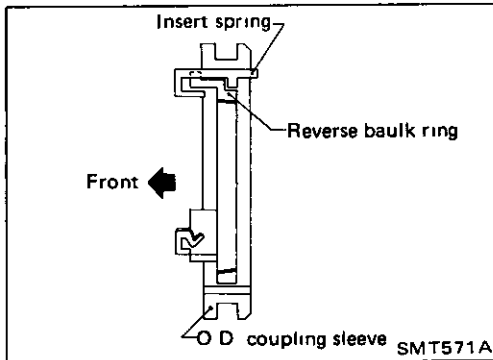


- h Install reverse counter gear

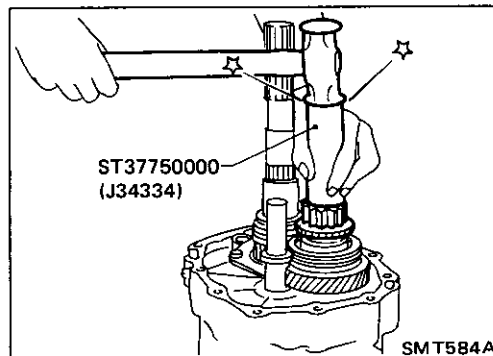

- i. Install sub-gear on reverse idler gear.
- j. Install reverse gear needle bearing and then install reverse main gear, reverse idler gear and reverse idler thrust washers.




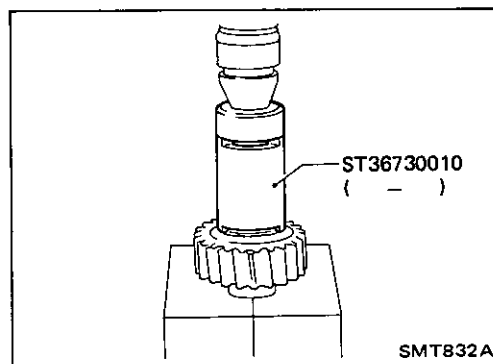


- k. Install reverse hub.
- Pay attention to its direction.**

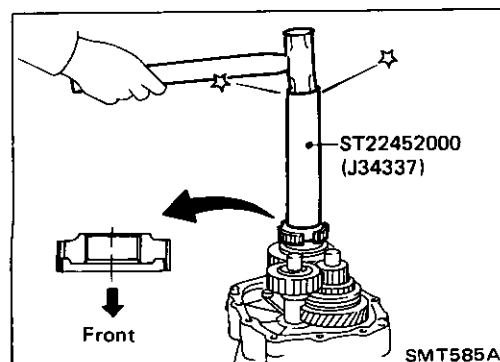

Gear Components (Cont'd)

- l. Install mainshaft spacer and mainshaft rear bearing
- m. Install speedometer drive gear.

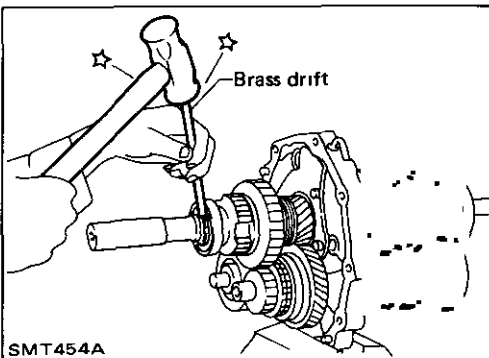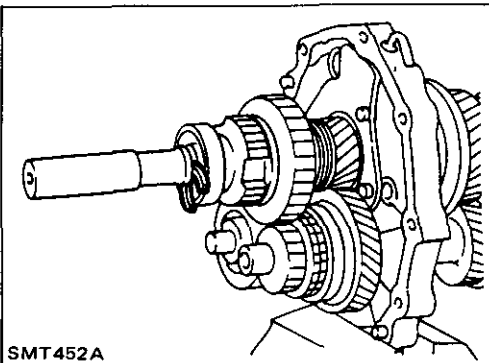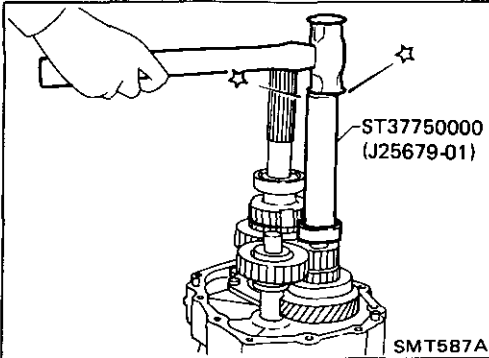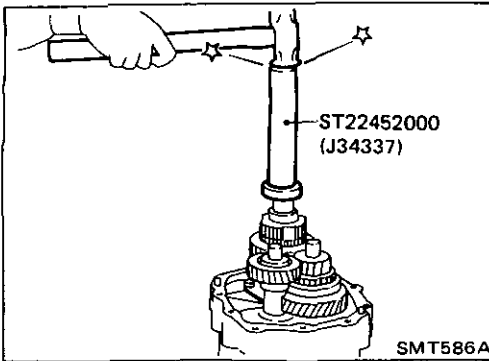

- n. Install counter gear rear end bearing
- o. Separate adapter plate from transmission case and Mount adapter plate on vice again

- p. Select proper mainshaft C-ring to minimize clearance of groove

Allowable clearance of groove:

0 - 0.1 mm (0 - 0.004 in)

Mainshaft C-ring

Thickness mm (in)	Part number	Thickness mm (in)	Part number
2 63 (0 1035)	32348-01G15	3 19 (0 1256)	32348-01G07
2 70 (0 1063)	32348-01G00	3 26 (0 1283)	32348-01G08
2 77 (0 1091)	32348-01G01	3 33 (0 1311)	32348-01G09
2 84 (0 1118)	32348-01G02	3 40 (0 1339)	32348-01G10
2 91 (0 1146)	32348-01G03	3 47 (0 1366)	32348-01G11
2 98 (0 1173)	32348-01G04	3 54 (0 1394)	32348-01G12
3 05 (0 1201)	32348-01G05	3 61 (0 1421)	32348-01G13
3 12 (0 1228)	32348-01G06	3 68 (0 1449)	32348-01G14

- q. Install selected C-ring, C-ring holder and mainshaft rear snap ring

Gear Components (Cont'd)

- r. Install spacer and then select proper counter gear rear snap ring to minimize clearance of groove






Allowable clearance of groove.

0 - 0.1 mm (0 - 0.004 in)

Counter gear rear snap ring

Thickness mm (in)	Part number
1.26 (0.0496)	32236-01G08
1.32 (0.0520)	32236-01G00
1.38 (0.0543)	32236-01G01
1.44 (0.0567)	32236-01G02
1.50 (0.0591)	32236-01G03
1.56 (0.0614)	32236-01G04
1.62 (0.0638)	32236-01G05
1.68 (0.0661)	32236-01G06
1.74 (0.0685)	32236-01G07

- s. Install selected counter gear rear snap ring
- t. Install reverse coupling sleeve
Pay attention to its direction.
- u. Measure each gear end play as a final check — Refer to "DISASSEMBLY"

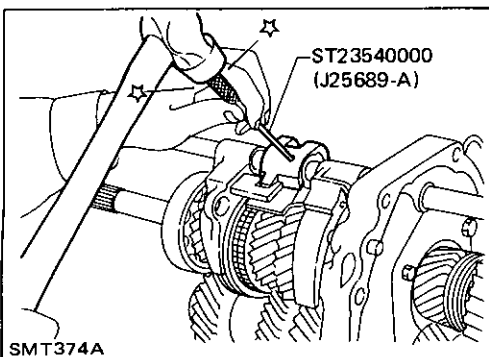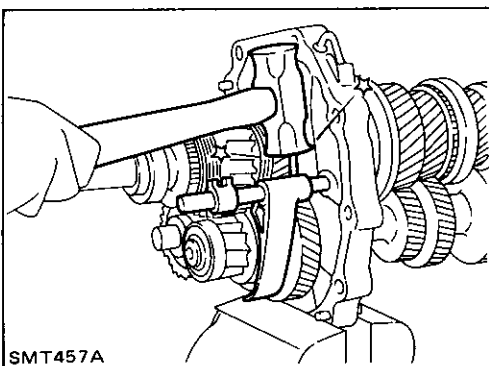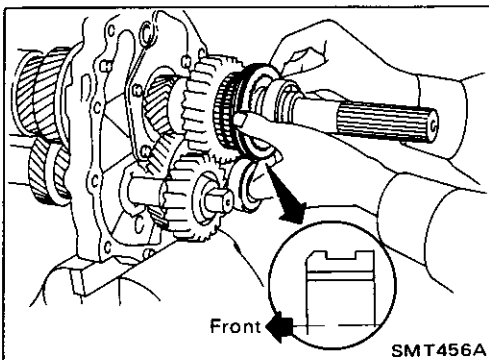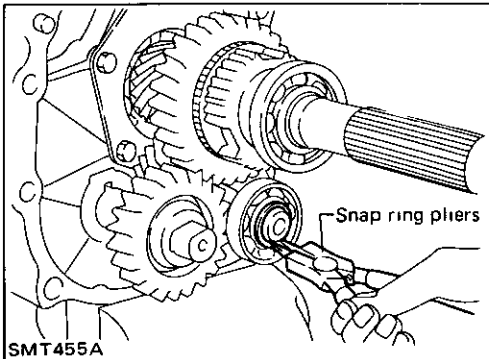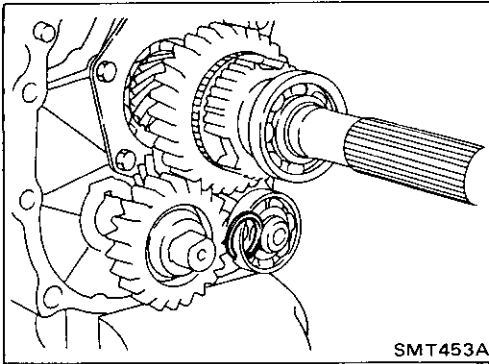


Shift Control Components

1. Install OD fork rod and OD shift fork. Then install retaining pin into OD shift fork.
2. Install 1st & 2nd, 3rd & 4th and reverse shift fork onto coupling sleeve.
3. Install striking rod into hole of shift forks, striking lever and interlock and then install retaining pin into striking lever.
Make sure that striking rod moves smoothly




Shift Control Components (Cont'd)

4. Install check ball, return spring and check ball plug.
Apply sealant to thread of check ball plug.

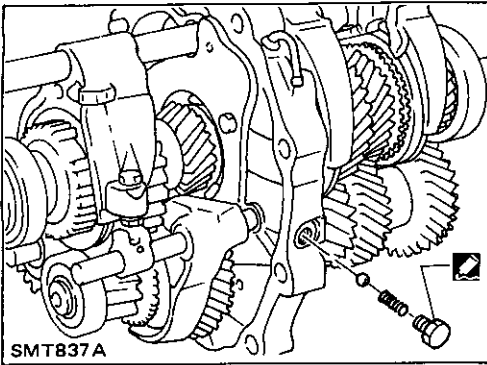


Case Components

1. Install front cover oil seal
Apply multi-purpose grease to seal lip.
2. Install selected counter gear front bearing shim onto transmission case
Apply multi-purpose grease.
3. Apply sealant to mating surface of transmission case
4. Install gear assembly onto transmission case
5. Install check spring and check ball into interlock stopper
Apply multi-purpose grease to check ball

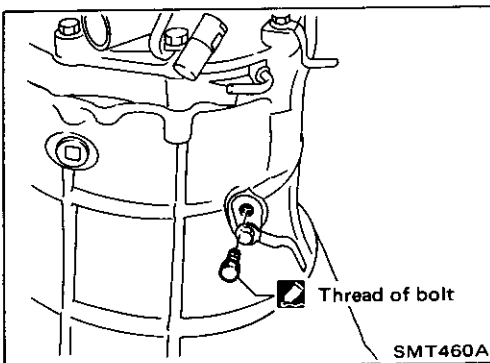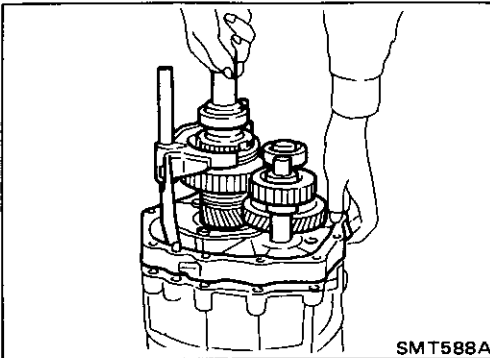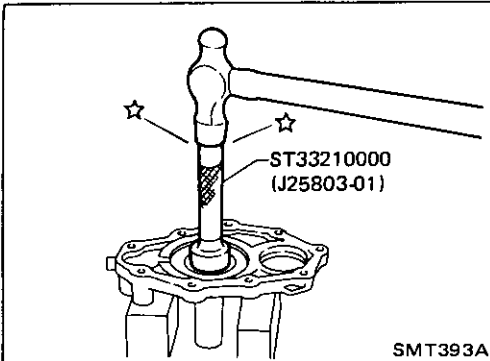



6. Install interlock stopper assembly and then tighten check ball plug
Apply sealant to thread of check ball plug.

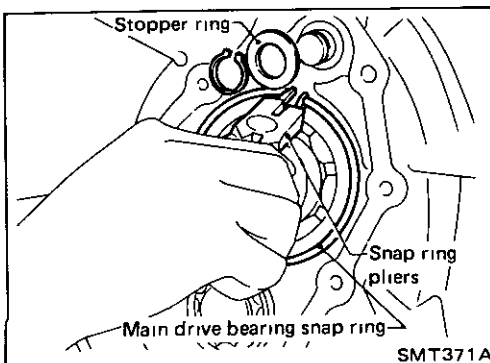


7. Install stopper ring and main drive bearing snap ring

Case Components (Cont'd)


- 8 Install front cover and gasket
Apply sealant to thread of 3 bolts shown left.
- 9 Apply sealant to mating surface of adapter plate

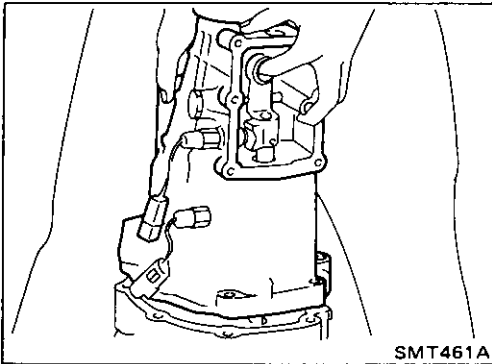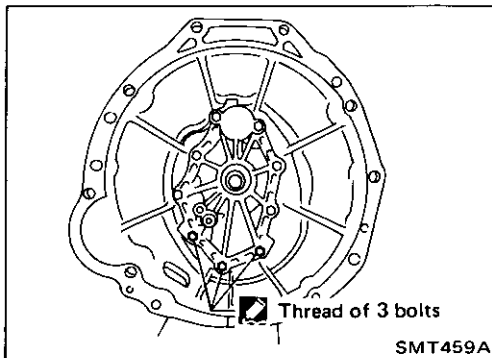

10. Install rear extension together with striking arm.

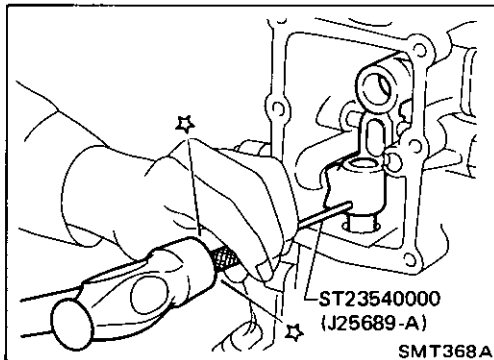

- 11 Install retaining pin into striking arm

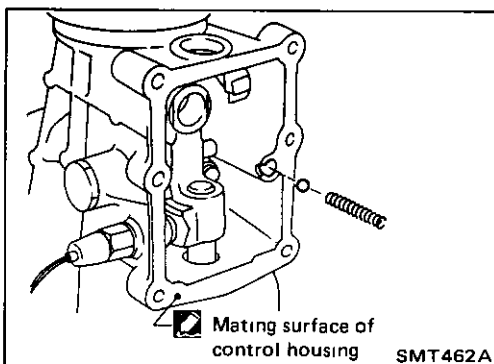



- 12 Install return spring and check ball and then install control housing
Apply sealant to mating surface of rear extension.

- 13 Tighten control housing bolts

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

General Specifications

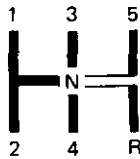Engine	VG30E												
Transmission model	FS5W71C												
Shift pattern													
Synchromesh type	Warner												
Gear ratio	<table> <tr><td>1st</td><td>3.321</td></tr> <tr><td>2nd</td><td>1.902</td></tr> <tr><td>3rd</td><td>1.308</td></tr> <tr><td>4th</td><td>1.000</td></tr> <tr><td>O D</td><td>0.759</td></tr> <tr><td>Reverse</td><td>3.382</td></tr> </table>	1st	3.321	2nd	1.902	3rd	1.308	4th	1.000	O D	0.759	Reverse	3.382
1st	3.321												
2nd	1.902												
3rd	1.308												
4th	1.000												
O D	0.759												
Reverse	3.382												
Number of teeth													
Main drive gear	22												
Main gear													
1st	33												
2nd	27												
3rd	26												
O D	21												
Reverse	36												
Counter drive gear	31												
Counter gear													
1st	14												
2nd	20												
3rd	28												
O D	39												
Reverse	15												
Reverse idler gear	21												
Oil capacity Liter (US pt, Imp pt)	2.0 (4-1/4, 3-1/2)												

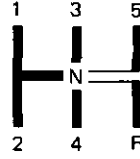Engine	VG30ET												
Transmission model	FS5R30A												
Shift pattern													
Synchromesh type	Warner												
Gear ratio	<table> <tr><td>1st</td><td>3.325</td></tr> <tr><td>2nd</td><td>2.077</td></tr> <tr><td>3rd</td><td>1.360</td></tr> <tr><td>4th</td><td>1.000</td></tr> <tr><td>O D</td><td>0.760</td></tr> <tr><td>Reverse</td><td>3.636</td></tr> </table>	1st	3.325	2nd	2.077	3rd	1.360	4th	1.000	O D	0.760	Reverse	3.636
1st	3.325												
2nd	2.077												
3rd	1.360												
4th	1.000												
O D	0.760												
Reverse	3.636												
Number of teeth													
Main drive gear	22												
Main gear													
1st	32												
2nd	30												
3rd	29												
O D	23												
Reverse	30												
Counter drive gear	32												
Counter gear													
1st	14												
2nd	21												
3rd	31												
O D	44												
Reverse	12												
Reverse idler gear	22												
Oil capacity Liter (US pt, Imp pt)	2.4 (5-1/8, 4-1/4)												

Inspection and Adjustment — FS5W71C

GEAR END PLAY

Gear	End play mm (in)
1st gear	0.31 - 0.41 (0.0122 - 0.0161)
2nd gear	0.11 - 0.21 (0.0043 - 0.0083)
3rd gear	0.11 - 0.21 (0.0043 - 0.0083)
O.D. gear	0.32 - 0.39 (0.0126 - 0.0154)

CLEARANCE BETWEEN BAULK RING AND GEAR

	Standard	Unit mm (in)
1st & 2nd	1.2 - 1.6 (0.047 - 0.063)	0.8 (0.031)
3rd and main drive	1.2 - 1.6 (0.047 - 0.063)	0.8 (0.031)
O.D.	1.0 - 1.4 (0.039 - 0.055)	0.5 (0.020)

AVAILABLE SNAP RINGS

Main drive gear bearing

Allowable clearance	0 - 0.13 mm (0 - 0.0051 in)	
Thickness mm (in)	Part number	
1.73 (0.0681)	32204-78005	
1.80 (0.0709)	32204-78000	
1.87 (0.0736)	32204-78801	
1.94 (0.0764)	32204-78002	
2.01 (0.0791)	32204-78003	
2.08 (0.0819)	32204-78004	

Mainshaft front

Allowable clearance	0 - 0.18 mm (0 - 0.0071 in)	
Thickness mm (in)	Part number	
2.4 (0.094)	32263-V5200	
2.5 (0.098)	32263-V5201	
2.6 (0.102)	32263-V5202	

Mainshaft rear end bearing

Allowable clearance	0 - 0.14 mm (0 - 0.0055 in)	
Thickness mm (in)	Part number	
1.1 (0.043)	32228-20100	
1.2 (0.047)	32228-20101	
1.3 (0.051)	32228-20102	
1.4 (0.055)	32228-20103	


Counter drive gear

Allowable clearance	0 - 0.18 mm (0 - 0.0071 in)	
Thickness mm (in)	Part number	
1.4 (0.055)	32215-E9000	
1.5 (0.059)	32215-E9001	
1.6 (0.063)	32215-E9002	

AVAILABLE SHIMS

Counter front bearing

Unit mm (in)

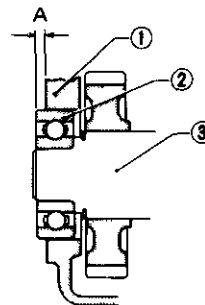

A Distance from bearing surface to transmission case

- 1 Transmission case
- 2 Counter gear front bearing
- 3 Counter gear

TM371

"A"	Thickness of shim	Part number
4.52 - 4.71 (0.1780 - 0.1854)	Not necessary	
4.42 - 4.51 (0.1740 - 0.1776)	0.1 (0.004)	32218-V5000
4.32 - 4.41 (0.1701 - 0.1736)	0.2 (0.008)	32218-V5001
4.22 - 4.31 (0.1661 - 0.1697)	0.3 (0.012)	32218-V5002
4.12 - 4.21 (0.1622 - 0.1657)	0.4 (0.016)	32218-V5003
4.02 - 4.11 (0.1583 - 0.1618)	0.5 (0.020)	32218-V5004
3.92 - 4.01 (0.1543 - 0.1579)	0.6 (0.024)	32218-V5005

Inspection and Adjustment — FS5R30A


GEAR END PLAY

Gear	End play mm (in)
1st main gear	0.23 - 0.33 (0.0091 - 0.0130)
2nd main gear	0.23 - 0.33 (0.0091 - 0.0130)
3rd main gear	0.23 - 0.33 (0.0091 - 0.0130)
O.D. counter gear	0.23 - 0.33 (0.0091 - 0.0130)
Reverse main gear	0.33 - 0.43 (0.0130 - 0.0169)
Counter gear	0.10 - 0.25 (0.0039 - 0.0098)
Reverse idler gear	0.30 - 0.53 (0.0118 - 0.0209)

CLEARANCE BETWEEN BAULK RING AND GEAR

	Standard	Wear limit
1st & 2nd	1.05 - 1.3 (0.0413 - 0.0512)	0.7 (0.028)
3rd & main drive	1.05 - 1.3 (0.0413 - 0.0512)	0.7 (0.028)
O.D.	1.05 - 1.3 (0.0413 - 0.0512)	0.7 (0.028)

DISTANCE BETWEEN REAR SURFACE OF REVERSE CONE AND REVERSE BAULK RING

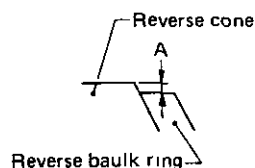

	Standard	Wear limit
Dimension "A"	-0.1 to 0.35 (-0.0039 to 0.0138)	0.7 (0.028)

AVAILABLE SNAP RING

Main drive gear snap ring

Thickness mm (in)	Part number
1.89 (0.0744)	32204-01G00
1.98 (0.0780)	32204-01G01
2.05 (0.0807)	32204-01G02
2.12 (0.0835)	32204-01G03
2.19 (0.0862)	32204-01G04

Mainshaft front snap ring

Thickness mm (in)	Part number
1.89 (0.0744)	32204-01G00
1.98 (0.0780)	32204-01G01
2.05 (0.0807)	32204-01G02
2.12 (0.0835)	32204-01G03
2.19 (0.0862)	32204-01G04

Counter gear rear snap ring

Thickness mm (in)	Part number
1.26 (0.0496)	32236-01G08
1.32 (0.0520)	32236-01G00
1.38 (0.0543)	32236-01G01
1.44 (0.0567)	32236-01G02
1.50 (0.0591)	32236-01G03
1.56 (0.0614)	32236-01G04
1.62 (0.0638)	32236-01G05
1.68 (0.0661)	32236-01G06
1.74 (0.0685)	32236-01G07

AVAILABLE C-RING

Mainshaft C-ring

Thickness mm (in)	Part number	Thickness mm (in)	Part number
2.63 (0.1035)	32348-01G15	3.19 (0.1256)	32348-01G07
2.70 (0.1063)	32348-01G00	3.26 (0.1283)	32348-01G08
2.77 (0.1091)	32348-01G01	3.33 (0.1311)	32348-01G09
2.84 (0.1118)	32348-01G02	3.40 (0.1339)	32348-01G10
2.91 (0.1146)	32348-01G03	3.47 (0.1366)	32348-01G11
2.98 (0.1173)	32348-01G04	3.54 (0.1394)	32348-01G12
3.05 (0.1201)	32348-01G05	3.61 (0.1421)	32348-01G13
3.12 (0.1228)	32348-01G06	3.68 (0.1449)	32348-01G14

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

Inspection and Adjustment — FS5R30A (Cont'd)

AVAILABLE SHIM AND WASHER Table for selecting proper counter gear front bearing shim

Dial indicator deflection mm (in)	Thickness of proper washer mm (in)	Part number
0.93 - 1.02 (0.0366 - 0.0402)	0.8 (0.031)	32218-01G00
1.03 - 1.12 (0.0406 - 0.0441)	0.9 (0.035)	32218-01G01
1.13 - 1.22 (0.0445 - 0.0480)	1.0 (0.039)	32218-01G02
1.23 - 1.32 (0.0484 - 0.0520)	1.1 (0.043)	32218-01G03
1.33 - 1.42 (0.0524 - 0.0559)	1.2 (0.047)	32218-01G04
1.43 - 1.52 (0.0563 - 0.0598)	1.3 (0.051)	32218-01G05
1.53 - 1.62 (0.0602 - 0.0638)	1.4 (0.055)	32218-01G06

Reverse idler rear thrust washer

Thickness mm (in)	Part number
1.97 (0.0776)	32284-01G10
2.07 (0.0815)	32284-01G11

Tightening Torque

TRANSMISSION INSTALLATION

Unit	N·m	kg·m	ft·lb
Clutch operating cylinder	30 - 40	3.1 - 4.1	22 - 30
Transmission securing bolt	Refer to Removal and Installation		
Engine gusset to engine	29 - 39	3.0 - 4.0	22 - 29
Rear mounting insulator to rear extension	Refer to section EM		
Starter motor fixing bolt	Refer to section EM		

GEAR ASSEMBLY — FS5W71C

Unit	N·m	kg·m	ft·lb
Rear extension to transmission case	16 - 20	1.6 - 2.0	12 - 14
Front cover to transmission case	16 - 21	1.6 - 2.1	12 - 15
Control housing to rear extension			
M8 bolt	14 - 18	1.4 - 1.8	10 - 13
M12 bolt	20 - 29	2.0 - 3.0	14 - 22
Ball pin	20 - 34	2.0 - 3.5	14 - 25
Filler plug	25 - 34	2.5 - 3.5	18 - 25
Drain plug	25 - 34	2.5 - 3.5	18 - 25
Speedometer sleeve installation	4 - 5	0.4 - 0.5	2.9 - 3.6
Return spring plug	20 - 29	2.0 - 3.0	14 - 22
Reverse check sleeve to rear extension	4 - 5	0.4 - 0.5	2.9 - 3.6
Check ball plug	19 - 25	1.9 - 2.5	14 - 18
Mainshaft lock nut (without Tool)	137 - 167	14.0 - 17.0	101 - 123
Countershaft lock nut	98 - 127	10.0 - 13.0	72 - 94
Striking lever lock nut	9 - 12	0.9 - 1.2	6.5 - 8.7
Bearing retainer to adapter plate	19 - 25	1.9 - 2.5	14 - 18
Reverse lamp switch	20 - 29	2.0 - 3.0	14 - 22
Neutral switch	20 - 29	2.0 - 3.0	14 - 22

SERVICE DATA AND SPECIFICATIONS (S.D.S.)

Tightening Torque (Cont'd)

GEAR ASSEMBLY – FS5R30A

Unit	N·m	kg-m	ft-lb
Rear extension to transmission case	31 - 42	3.2 - 4.3	23 - 31
Front cover to transmission case	16 - 21	1.6 - 2.1	12 - 15
Control housing to rear extension	16 - 21	1.6 - 2.1	12 - 15
Ball pin	31 - 42	3.2 - 4.3	23 - 31
Filler plug	25 - 34	2.5 - 3.5	18 - 25
Drain plug	25 - 34	2.5 - 3.5	18 - 25
Speedometer pinion installation	4 - 5	0.4 - 0.5	2.9 - 3.6
Interlock stopper fixing bolt	31 - 42	3.2 - 4.3	23 - 31
Check ball plug	19 - 25	1.9 - 2.6	14 - 19
Select check plug	20 - 29	2.0 - 3.0	14 - 22
Reverse check sleeve fixing bolt	6.3 - 8.3	0.64 - 0.85	4.6 - 6.1
O.D. & reverse fork rod to reverse shift fork	25 - 29	2.5 - 3.0	18 - 22
O.D. and reverse shift fork connecting bolt	29 - 34	3.0 - 3.5	22 - 25
Guide plate to rear extension	6.3 - 8.3	0.64 - 0.85	4.6 - 6.1
Bearing retainer to adopter plate	16 - 21	1.6 - 2.1	12 - 15
Reverse lamp switch	20 - 29	2.0 - 3.0	14 - 22
Neutral switch	20 - 29	2.0 - 3.0	14 - 22

NISSAN FACTORY SERVICE MANUAL CDROM END-USER LICENSE AGREEMENT

NOTICE TO USER: THIS IS A CONTRACT. BY PURCHASING AND USING THE SERVICE MANUAL ON CDROM, YOU ACCEPT ALL THE TERMS AND CONDITIONS OF THIS AGREEMENT.

This End User License Agreement accompanies the Service Manual on CDROM product and related explanatory materials. Please read this Agreement carefully. By purchasing and using the Service Manual on CDROM, you are implying that you have carefully read, agree with, and will adhere to the conditions set forth in this agreement. If you do not wish to accept the terms of this End User Agreement please do not use the Service Manual on CDROM. You will not be permitted to use the Service Manual on CDROM without consenting to this end user agreement.

Upon your acceptance of this Agreement, Courtesy Nissan grants to you a nonexclusive license to use the Service Manual on CDROM, provided that you agree to the following:

USE OF SOFTWARE

You may install the contents of the CD on a hard disk or other storage device for personal use only. Each Service Manual on CDROM comes with a single user license. Under no circumstances should the contents of the Service Manual CDROM be placed on a server for purposes of distributing or allowing access to the material over a network.

COPYRIGHT AND TRADEMARK RIGHTS

The Service Manual CDROM is owned by Courtesy Nissan and its structure and organization, all graphics and coding are considered intellectual property of Courtesy Nissan. The Service Manual on CDROM is also protected by United States Copyright Law and International Treaty provisions. This Agreement does not grant you any intellectual property or resale rights to the Service Manual CDROM.

RESTRICTIONS

You agree not to modify, adapt, translate, reverse engineer, decompile or disassemble the PDF file on the Service Manual CDROM. The Service Manual on CDROM is licensed and distributed by Courtesy Nissan for single user utilization of its contents only. Licensed users will be permitted to use the contents of the Service Manual CDROM for multimedia presentation to an audience from a single machine using a large display or projection device but the Service Manual CDROM may not otherwise be distributed, sold to or made accessible to multiple users.

NO WARRANTY

The software is being delivered to you AS IS and Courtesy Nissan makes no warranty as to its use or performance. COURTESY NISSAN DOES NOT AND CANNOT WARRANT THE PERFORMANCE OR RESULTS YOU MAY OBTAIN BY USING THE SERVICE MANUAL CDROM OR DOCUMENTATION, NOR MAKES ANY WARRANTIES, EXPRESS OR IMPLIED, AS TO NONINFRINGEMENT OF THIRD-PARTY RIGHTS, MERCHANTABILITY, OR FITNESS FOR ANY PARTICULAR PURPOSE. IN NO EVENT WILL COURTESY NISSAN BE LIABLE TO YOU FOR ANY CONSEQUENTIAL, INCIDENTAL, OR SPECIAL DAMAGES FOR ANY REASON.

Courtesy Nissan
1777 North Central Expressway
Richardson, TX 75080
(800)527-1909

GOVERNING LAW AND GENERAL PROVISIONS

This Agreement will be governed by the laws of the State of Texas, USA, excluding the application of its conflicts of law rules. This Agreement will not be governed by the United Nations Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. If any part of this Agreement is found void and unenforceable, it will not affect the validity of the balance of the Agreement, which shall remain valid and enforceable according to its terms. You agree that the Service Manual on CDROM will not be shipped, transferred or exported into any country or used in any manner prohibited by the United States Export Administration act or any other export laws, restrictions or regulations. This Agreement shall automatically terminate upon failure by you to comply with its terms. This Agreement may only be modified in writing signed by and authorized officer for Courtesy Nissan.

Courtesy Nissan
1777 North Central Expressway
Richardson, TX 75080
USA

YOUR ACCEPTANCE OF THE FOREGOING AGREEMENT IS IMPLIED UPON PURCHASING AND USING THE SERVICE MANUAL CDROM.