

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

ALPHABETICAL INDEX

Numerics

3METER - Wiring diagram [DI-37](#), [DI-41](#)

A

A/C component layout [ATC-23](#)
A/C compressor mounting [ATC-128](#)
A/C compressor special service tool [ATC-15](#)
A/C controller [ATC-105](#)
A/C diagnostic work flow (auto A/C) [ATC-94](#)
A/C evaporator [ATC-141](#)
A/C HFC134a (R134a) system service procedure
[ATC-126](#)
A/C HFC134a (R134a) system service tools ... [ATC-16](#)
A/C lubricant (R134a) [ATC-24](#)
A/C lubrication oil [ATC-148](#)
A/C operational check [ATC-56](#)
A/C self-diagnoses (auto A/C) [ATC-48](#), [ATC-94](#)
A/C service data specification [ATC-148](#)
A/C trouble diagnoses (auto A/C) [ATC-36](#)
A/C, A - Wiring diagram [ATC-41](#)
A/T fluid checking [AT-13](#), [AT-51](#), [MA-22](#)
A/T fluid replacement [AT-13](#), [MA-24](#)
A/T fluid temperature sensor [AT-137](#)
A/T IND - Wiring diagram [DI-89](#)
A/T self-diagnoses [AT-102](#)
A/T shift lock system [AT-239](#)
A/T shift lock system - Wiring diagram [AT-240](#), [AT-241](#)
A/T trouble diagnoses [AT-42](#)
ABS - Wiring diagram [BRC-16](#), [BRC-20](#)
Accelerator control system [ACC-3](#)
Accelerator pedal position (APP) sensor [EC-619](#),
[EC-627](#), [EC-643](#)
Accelerator pedal released position learning [EC-79](#)
AF1B1-Wiring diagram [EC-258](#), [EC-268](#), [EC-278](#),
[EC-289](#), [EC-654](#)
AF1B2-Wiring diagram [EC-260](#), [EC-270](#), [EC-280](#),
[EC-291](#), [EC-656](#)
AF1HB1-Wiring diagram [EC-177](#)
AF1HB2-Wiring diagram [EC-179](#)
Air bag [SRS-3](#)
Air bag precautions [SRS-3](#)
Air bleeding (hydraulic clutch) [CL-7](#)
Air bleeding for brake system [BR-11](#)
Air cleaner and air duct [EM-16](#)
Air cleaner filter replacement [MA-18](#)
Air conditioner cut control [EC-28](#)
Air flow meter - See Mass air flow sensor [EC-209](#),
[EC-218](#)
Air fuel ratio sensor 1 [EC-255](#), [EC-266](#), [EC-276](#),
[EC-286](#), [EC-652](#)
Air fuel ratio sensor 1 heater [EC-176](#)
Air mix. door motor [ATC-66](#), [ATC-120](#)
Air spoiler, rear [EI-30](#)
Ambient sensor [ATC-95](#), [ATC-107](#)
Angular tightening application [EM-5](#)
APPS1 - Wiring diagram [EC-621](#)
APPS2 - Wiring diagram [EC-629](#)

APPS3 - Wiring diagram [EC-645](#)
ASC/BS - Wiring diagram [EC-577](#), [EC-579](#)
ASC/SW - Wiring diagram [EC-569](#)
ASCBOF - Wiring diagram [EC-665](#), [EC-667](#)
ASCD [EC-29](#)
ASCD (automatic speed control device) [ACS-2](#)
ASCD brake switch [EC-575](#), [EC-664](#)
ASCD indicator lamp [EC-679](#)
ASCD steering switch [EC-567](#)
ASCIND - Wiring diagram [EC-680](#)
AT indicator lamp [DI-88](#)
Audio [AV-6](#)
AUDIO - Wiring diagram [AV-11](#)
Auto air conditioner - Wiring diagram [ATC-41](#)
Auto amp [ATC-106](#)
Auto anti-dazzling inside mirror [GW-54](#)
Automatic amplifier [ATC-57](#), [ATC-106](#)
Axle [MA-29](#)
Axle housing (rear) [RAX-8](#)

B

Back Door [BL-104](#)
Back door [BL-104](#)
Back door opener - See Back door [BL-109](#)
BACK/L - Wiring diagram [LT-105](#), [LT-288](#)
Back-up lamp [LT-105](#), [LT-288](#)
Back-up lamp switch (M/T) [MT-11](#)
Basic inspection [EC-71](#)
Battery [SC-4](#)
Battery/Starting/Charging System Tester [SC-7](#), [SC-15](#),
[SC-23](#)
BCM (Body control module) [BCS-3](#)
Blower motor [ATC-72](#), [ATC-113](#)
Blower unit [ATC-111](#)
Bose speaker amp. [AV-6](#), [AV-7](#)
Brake booster [BR-23](#)
Brake fluid change [BR-10](#)
Brake fluid level [MA-27](#)
Brake fluid level and line check [BR-10](#)
Brake hydraulic line [BR-12](#)
Brake inspection [MA-27](#)
Brake lines and cables inspection [MA-27](#)
Brake master cylinder [BR-15](#)
Brake pedal [BR-7](#)
Brake switch [EC-594](#)
BRK/SW - Wiring diagram [EC-595](#)
Bulb specifications [LT-191](#), [LT-364](#)
Bumper, front [EI-14](#)
Bumper, rear [EI-17](#)

C

Camshaft [EM-100](#)
Camshaft inspection [EM-102](#)
Camshaft position sensor (PHASE) [EC-402](#)
CAN [DI-116](#)
CAN - Wiring diagram [EC-162](#), [AT-107](#)
CAN communication [EC-31](#), [EC-161](#), [EC-164](#), [AT-31](#),

ALPHABETICAL INDEX

[AT-106](#), [LT-11](#), [LT-73](#), [LT-112](#), [LT-177](#), [LT-195](#), [LT-257](#),
[LT-295](#), [LT-350](#), [WW-11](#), [WW-66](#)
 CHARGE - Wiring diagram [SC-22](#)
 Charging system [SC-21](#)
 Chassis and body maintenance [MA-22](#)
 CHIME - Wiring diagram [DI-95](#), [DI-98](#)
 Circuit breaker [PG-29](#)
 Closed loop control [EC-25](#)
 Clutch cover [CL-16](#)
 Clutch disc [CL-16](#)
 Clutch master cylinder [CL-8](#)
 Clutch operating cylinder [CL-11](#)
 Clutch pedal [CL-5](#)
 Clutch release bearing [CL-14](#)
 Clutch release mechanism [CL-14](#)
 Clutch withdrawal lever [CL-14](#)
 Coil spring (front) [FSU-10](#)
 Collision diagnosis [SRS-59](#)
 Combination lamp, rear, removal and installation
[LT-134](#), [LT-317](#)
 Combination meter [DI-5](#)
 Combination meter removal and installation - See
 Instrument panel [IP-11](#)
 Combination switch [LT-93](#), [LT-276](#)
 Component Location (auto A/C) [ATC-38](#)
 Compression pressure [EM-119](#)
 Compressor special service tool [ATC-15](#)
 Condenser [ATC-137](#), [ATC-141](#), [ATC-143](#)
 Console box - See Instrument panel [IP-10](#)
 CONSULT for ABS [BRC-25](#)
 CONSULT for TCS [BRC-65](#)
 CONSULT for VDC [BRC-118](#)
 Control units (terminal arrangement) [PG-133](#), [PG-135](#)
 Control valve (A/T) [AT-36](#)
 Converter housing installation [AT-276](#)
 COOL/F - Wiring diagram [EC-555](#)
 Cooling circuit (engine) [CO-8](#)
 Cooling fan [CO-22](#)
 Cooling fan motor [EC-562](#)
 Cowl top [EI-20](#)
 Cowl top cover [EI-20](#)
 Crankcase ventilation system - See Positive crankcase
 ventilation [EC-44](#)
 Crankshaft position sensor (POS) [EC-394](#)
 Crash zone sensor [SRS-54](#)
 Cylinder head [EM-119](#)

D

D/LOCK - Wiring diagram [BL-26](#)
 Daytime light system [LT-37](#), [LT-221](#)
 Daytime running light - See Daytime light system
[LT-37](#), [LT-221](#)
 DEF - Wiring diagram [GW-60](#), [GW-64](#)
 Diagnosis sensor unit [SRS-57](#)
 Diagnostic trouble code (DTC) for OBD system . [EC-8](#),
[EC-48](#)
 Diagnostic trouble code (DTC) inspection priority chart
[EC-89](#)

Differential gear oil replacement [MA-25](#)
 Direct clutch solenoid valve [AT-157](#), [AT-159](#)
 Display and amp.assembly [ATC-57](#)
 Door glass [GW-51](#)
 Door glass Fitting Adjustment(Front) [GW-53](#)
 Door lock [BL-102](#)
 Door mirror [GW-81](#)
 Door trim [EI-33](#)
 Door, front [BL-97](#), [BL-98](#), [GW-51](#)
 Drive belt [EM-14](#)
 Drive shaft (rear) [RAX-10](#)
 Driver air bag [SRS-46](#)
 DTRL - Wiring diagram [LT-43](#), [LT-227](#)
 Duct and grilles [ATC-122](#)

E

ECM power supply [EC-152](#), [EC-517](#)
 ECM/PW - Wiring diagram [EC-518](#)
 ECTS - Wiring diagram [EC-234](#)
 Electric throttle control actuator [EC-605](#), [EC-617](#)
 Electrical load signal circuit [EC-682](#)
 Electrical unit [PG-133](#), [PG-135](#)
 Electrical units location [PG-121](#)
 Electronic ignition (EI) system [EC-26](#)
 Engine control circuit diagram [EC-109](#)
 Engine control component parts location [EC-96](#),
[EC-102](#)
 Engine control module (ECM) [EC-521](#)
 Engine control system diagram [EC-22](#), [EC-23](#)
 Engine coolant [CO-10](#)
 Engine coolant temperature sensor (ECTS) ... [EC-232](#),
[EC-246](#)
 Engine fail-safe system [EC-91](#)
 Engine oil [LU-7](#)
 Engine oil filter replacement [MA-19](#)
 Engine oil precautions [GI-7](#)
 Engine removal [EM-131](#)
 ETC1 - Wiring diagram [EC-606](#)
 ETC2 - Wiring diagram [EC-601](#)
 ETC3 - Wiring diagram [EC-613](#)
 EVAP canister [EC-35](#)
 EVAP canister purge volume control solenoid valve
[EC-431](#), [EC-439](#)
 EVAP canister vent control valve [EC-446](#), [EC-455](#)
 EVAP control system (small leak) diagnosis ... [EC-423](#)
 EVAP control system pressure sensor [EC-464](#),
[EC-468](#), [EC-475](#)
 EVAP control system purge flow monitoring diagnosis
[EC-418](#)
 EVAP vapor lines inspection [MA-21](#)
 Evaporative emission (EVAP) system [EC-32](#)
 Evaporator [ATC-141](#)
 EVCB1 - Wiring diagram [EC-202](#)
 EVCB2 - Wiring diagram [EC-204](#)
 EVCSB1 - Wiring diagram [EC-539](#)
 EVCSB2 - Wiring diagram [EC-541](#)
 Exhaust system [EX-3](#)
 Exhaust system inspection [EX-3](#), [MA-22](#)

ALPHABETICAL INDEX

Exhaust valve timing control (Bank 1) [EC-171](#)
 Exhaust valve timing control (Bank 2) [EC-171](#)
 Exhaust valve timing control learning [EC-78](#)
 Exhaust valve timing control magnet retarder (Bank 1) [EC-201](#)
 Exhaust valve timing control magnet retarder (Bank 2) [EC-201](#)
 Exhaust valve timing control position sensor (Bank 1) [EC-538](#)
 Exhaust valve timing control position sensor (Bank 2) [EC-538](#)
 Expansion valve [ATC-143](#)

F

F/LID - Wiring diagram [BL-53](#)
 F/PUMP - Wiring diagram [EC-693](#)
 Final drive pre-inspection [RFD-20](#), [RFD-40](#)
 Floor trim [EI-43](#)
 Flow charts [GI-26](#)
 Fluid temperature sensor (A/T) [AT-137](#)
 Fluorescent leak detector [ATC-144](#)
 Flywheel (clutch) [CL-16](#)
 Flywheel runout [EM-165](#)
 Freeze frame data [EC-52](#)
 Front axle [FAX-4](#)
 Front brake solenoid valve [AT-153](#), [AT-155](#)
 Front bumper [EI-14](#)
 Front door [BL-97](#), [BL-98](#), [GW-51](#)
 Front passenger air bag [SRS-50](#)
 Front seat belt [SB-4](#)
 Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-56](#)
 Front suspension [FSU-5](#)
 Front washer [WW-6](#)
 Front wiper [WW-6](#)
 FTS - Wiring diagram [AT-138](#)
 FTTS - Wiring diagram [EC-364](#), [EC-368](#)
 Fuel cut control (at no load high engine speed) [EC-27](#)
 Fuel filter replacement [FL-4](#)
 Fuel gauge [DI-5](#)
 Fuel injection system (Bank 1) [EC-338](#), [EC-350](#)
 Fuel injection system (Bank 2) [EC-338](#), [EC-350](#)
 Fuel injector [EC-684](#)
 Fuel level sensor [EC-500](#), [EC-502](#), [EC-504](#)
 Fuel lid opener, electric [BL-52](#)
 Fuel line inspection [FL-3](#), [MA-18](#)
 Fuel precautions [GI-5](#)
 Fuel pressure check [EC-82](#)
 Fuel pressure release [EC-81](#)
 Fuel pump [EC-692](#)
 Fuel pump and gauge [FL-4](#)
 Fuel system [FL-3](#)
 Fuel tank [FL-10](#)
 Fuel tank temperature sensor [EC-362](#), [EC-367](#)
 Fuel tank vacuum relief valve [EC-35](#)
 FUELB1 - Wiring diagram [EC-340](#), [EC-352](#)
 FUELB2 - Wiring diagram [EC-342](#), [EC-354](#)
 Fuse [PG-29](#)
 Fuse and fusible link box [PG-142](#)

Fusible link [PG-29](#)

G

Gauges [DI-5](#)
 Generic scan tool (GST) [EC-133](#)
 Glass [GW-11](#), [GW-51](#)
 Ground distribution [PG-44](#)

H

H/LAMP - Wiring diagram [LT-13](#), [LT-197](#)
 Harness connector [PG-130](#)
 Harness layout [PG-73](#)
 Hazard warning lamp [LT-71](#)
 Headlamp [LT-9](#), [LT-193](#)
 Headlining - See Roof trim [EI-44](#), [EI-46](#)
 Heated oxygen sensor 2 (bank 1) [EC-299](#), [EC-311](#), [EC-326](#)
 Heated oxygen sensor 2 (bank 2) [EC-299](#), [EC-311](#), [EC-326](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-184](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-184](#)
 Heated seat [SE-59](#)
 Heater and cooling unit (Heater core) [ATC-115](#)
 HFC134a (R134a) system service procedure [ATC-126](#)
 HFC134a (R134a) system service tools [ATC-16](#)
 High and low reverse clutch solenoid valve [AT-161](#), [AT-163](#)
 Hood [BL-13](#)
 Hood lock system [BL-16](#)
 Horn [WW-58](#), [WW-113](#)
 HORN - Wiring diagram [WW-58](#), [WW-113](#)
 How to erase DTC for OBD system [EC-60](#)

I

IATS - Wiring diagram [EC-228](#)
 Idle air volume learning [EC-79](#)
 Idle speed [EC-76](#)
 Idle speed control (ISC) [EC-508](#), [EC-510](#)
 Ignition coil [EM-35](#), [EC-699](#)
 Ignition control system [EC-699](#)
 Ignition timing [EC-76](#)
 IGNSYS - Wiring diagram [EC-700](#)
 ILL - Wiring diagram [LT-180](#), [LT-353](#)
 Illumination [LT-175](#)
 In vehicle sensor [ATC-97](#), [ATC-108](#)
 INJECT - Wiring diagram [EC-685](#)
 Input clutch solenoid valve [AT-149](#), [AT-151](#)
 Instrument panel [IP-10](#)
 Intake air temperature sensor [EC-226](#), [EC-250](#)
 Intake door control linkage adjustment [ATC-71](#)
 Intake door motor [ATC-69](#), [ATC-114](#)
 Intake manifold [EM-23](#)
 Intake manifold collector [EM-18](#)
 Intake sensor [ATC-103](#), [ATC-110](#)
 Intake valve timing control (Bank 1) [EC-166](#)
 Intake valve timing control (Bank 2) [EC-166](#)

ALPHABETICAL INDEX

Intake valve timing control solenoid valve (Bank 1) [EC-193](#)
 Intake valve timing control solenoid valve (Bank 2) [EC-193](#)
 Integrated homelink transmitter [BL-177](#)
 Interior [EI-35](#)
 Interior lamp [LT-135](#), [LT-318](#)
 IPDM (Intelligent power distribution module engine room) [PG-30](#)
 IVCB1 - Wiring diagram [EC-194](#)
 IVCB2 - Wiring diagram [EC-196](#)

K

KEYLES - Wiring diagram [BL-66](#)
 Knock sensor (KS) [EC-389](#)
 KS - Wiring diagram [EC-390](#)

L

LAN system circuit [ATC-59](#)
 License lamp [LT-110](#)
 Line pressure solenoid valve [AT-132](#)
 Line pressure test (A/T) [AT-53](#)
 Liquid gasket application [LU-2](#), [CO-2](#)
 Location of electrical units [PG-121](#)
 Lock, door [BL-102](#)
 Low coast brake solenoid valve [AT-165](#), [AT-167](#)
 Low tire pressure warning system [WT-11](#)
 Lubricant (R134a) A/C [ATC-24](#)
 Lubrication circuit (engine) [LU-4](#)
 Lubrication oil A/C [ATC-148](#)

M

M/ANT - Wiring diagram [AV-52](#)
 M/T major overhaul [MT-21](#)
 M/T oil replacement [MT-9](#)
 M/T removal and installation [MT-18](#)
 MAFS - Wiring diagram [EC-212](#), [EC-220](#)
 Magnet clutch [ATC-77](#)
 MAIN - Wiring diagram [EC-152](#), [AT-182](#)
 Maintenance (engine) [MA-14](#)
 Major overhaul (Final drive) [RFD-19](#)
 Malfunction indicator lamp (MIL) [EC-62](#)
 Manual transmission oil replacement [MA-22](#)
 Mass air flow sensor (MAFS) [EC-209](#), [EC-218](#)
 Master cylinder (clutch) [CL-8](#)
 Meter [DI-5](#)
 METER - Wiring diagram [DI-13](#), [DI-16](#)
 MIL data link connectors circuit [EC-718](#)
 MIL/DL - Wiring diagram [EC-718](#)
 MIRROR - Wiring diagram [GW-80](#)
 Mirror, door [GW-81](#)
 Mirror, out side [GW-81](#)
 Misfire [EC-379](#)
 MMSW - Wiring diagram [AT-170](#)
 Mode door control linkage adjustment [ATC-65](#)
 Mode door motor [ATC-63](#), [ATC-119](#)

Molding - See Exterior [EI-22](#), [EI-26](#)
 Multiport fuel injection (MFI) system [EC-24](#)
 Multiport fuel injection precautions [GI-6](#)

N

NATS - Wiring diagram [BL-161](#)
 NAVI - Wiring diagram [AV-62](#), [AV-66](#)
 Navigation system [AV-56](#)
 NONDTC - Wiring diagram [AT-189](#), [AT-192](#)
 NVH troubleshooting (BR) [BR-6](#)
 NVH troubleshooting (Final drive) [RFD-7](#)
 NVH troubleshooting (Propeller shaft) [PR-4](#)
 NVH troubleshooting (WT) [WT-6](#)
 NVIS (Nissan vehicle immobilizer system) [BL-158](#)

O

O2H2B1 - Wiring diagram [EC-186](#)
 O2H2B2 - Wiring diagram [EC-188](#)
 O2S2B1 - Wiring diagram ... [EC-302](#), [EC-314](#), [EC-329](#)
 O2S2B2 - Wiring diagram ... [EC-304](#), [EC-316](#), [EC-331](#)
 Oil cooler (engine) [LU-11](#)
 Oil filter [LU-10](#)
 Oil pressure (engine) [LU-8](#)
 Oil pump (engine) [LU-13](#)
 Oil pump regulator valve (engine) [LU-13](#)
 Oil seal replacement (front of final drive) [RFD-10](#)
 Oil seal replacement (side of final drive) [RFD-15](#)
 On board diagnostic system [EC-47](#)
 Operating cylinder (clutch) [CL-11](#)
 ORVR (On-board Refueling Vapor Recovery) ... [EC-39](#)
 Out side mirror [GW-81](#)
 Overheat [EC-551](#)

P

P/SCKT - Wiring diagram [WW-56](#), [WW-111](#)
 Park/Neutral position switch [EC-530](#)
 Park/neutral position switch (A/T) [AT-115](#)
 Parking brake control [PB-4](#)
 Parking lamp [LT-110](#)
 PCV (positive crankcase ventilation) [EC-44](#)
 PGC/V - Wiring diagram [EC-433](#), [EC-441](#)
 PHSB1 - Wiring diagram [EC-404](#)
 PHSB2 - Wiring diagram [EC-406](#)
 PNP/SW - Wiring diagram ... [EC-532](#), [EC-534](#), [AT-116](#)
 POS - Wiring diagram [EC-396](#)
 POWER - Wiring diagram [PG-6](#), [PG-18](#)
 Power door lock [BL-21](#)
 Power socket [WW-56](#), [WW-111](#)
 Power steering fluid level [PS-6](#), [MA-29](#)
 Power steering gear [PS-18](#)
 Power steering oil pump [PS-29](#)
 Power steering pressure (PSP) sensor [EC-512](#)
 Power steering system bleeding [PS-6](#)
 Power supply routing [PG-5](#)
 Power window [GW-18](#)
 PRE/SE - Wiring diagram [EC-470](#), [EC-477](#)

ALPHABETICAL INDEX

Precautions (General)	GI-3
Pressure plate - See Clutch cover	CL-16
Pressure switch 1	AT-155 , AT-174
Pressure switch 2	AT-167
Pressure switch 3	AT-151 , AT-176
Pressure switch 5	AT-159 , AT-178
Pressure switch 6	AT-163 , AT-180
Pressure test (A/T)	AT-53
Propeller shaft	PR-5
Propeller shaft on vehicle service	PR-5
Propeller shaft vibration	PR-5
PS/SEN - Wiring diagram	EC-513

R

Radiator	CO-13
Radio - See Audio	AV-6
Rear axle	RAX-6
Rear bumper	EI-17
Rear combination lamp removal and installation	LT-134 , LT-317
Rear suspension	RSU-5
Rear washer	WW-40 , WW-95
Rear window defogger	GW-56
Rear wiper	WW-40
Refrigerant discharging evacuating charging	ATC-126
Refrigerant lines	ATC-126
Refrigerant pressure sensor	EC-712 , ATC-83 , ATC-141
Refrigeration cycle	ATC-19
Release bearing (clutch)	CL-14
Remote keyless entry system	BL-60
Removal and installation (A/T)	AT-274
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)	MT-11
Revolution sensor (A/T)	AT-121
Rocker cover	EM-44
Room lamp - See Interior lamp	LT-135 , LT-318
ROOM/L - Wiring diagram	LT-141 , LT-150 , LT-323
RP/SEN - Wiring diagram	EC-713

S

SAE J1979 - Service \$01 - 09	EC-47
SEAT - Wiring diagram	SE-12
Seat belt inspection	SB-8
Seat belt, front	SB-4
Self-diagnostic results	EC-64
SEN/PW - Wiring diagram	EC-525
SHIFT - Wiring diagram	AT-240 , AT-241
Shift lock system	AT-239
Shift schedule	AT-343
Shock absorber (front)	FSU-10
Shock absorber (rear)	RSU-9
Side air bag (satellite) sensor	SRS-55
Side trim	EI-35
SMJ (super multiple junction)	PG-137
Spark plug	EM-36
Spark plug replacement	MA-20

Specification value	EC-141
Speedometer	DI-5
Spiral cable	SRS-48
SRS - See Supplemental Restraint System	SRS-5
SRS - Wiring diagram	SRS-13
SRS Trouble diagnoses	SRS-9
Stabilizer bar (rear)	RSU-16
Stall test (A/T)	AT-51
Standardized relay	PG-139
START - Wiring diagram	SC-12
Starter	SC-10
Starting system	SC-10
Steering gear and linkage inspection	MA-28
Steering linkage	PS-18
Steering wheel and column	PS-8 , PS-11
Steering wheel turning force	PS-8
Stop lamp	LT-102 , LT-285
Stop lamp switch	EC-594
STOP/L - Wiring diagram	LT-102 , LT-285
STSIG - Wiring diagram	AT-110 , AT-111
Sunload sensor	ATC-100 , ATC-109
Supplemental Restraint System	SRS-5
Supplemental restraint system - Wiring diagram	SRS-13
Suspension	MA-29
Symbols and abbreviations	GI-10 , GI-22
Symptom matrix chart	EC-92
System readiness test (SRT) code	EC-53

T

Tachometer	DI-5
Tail lamp	LT-110
TAIL/L - Wiring diagram	LT-114 , LT-297
TCM circuit diagram	AT-50
TCM inspection table	AT-89
TCS - Wiring diagram	BRC-55 , BRC-59
Three way catalyst	EM-25
Three way catalyst function (Bank 1)	EC-412
Three way catalyst function (Bank 2)	EC-412
Three way catalyst precautions	GI-5
Throttle body	EM-22
Throttle control motor	EC-612
Throttle control motor relay	EC-599
Throttle position sensor (TPS)	EC-238 , EC-371 , EC-563 , EC-565 , EC-635
Throttle valve closed position learning	EC-79
Throwout bearing - See Clutch release bearing	CL-14
Tie-rod	PS-18
Timing chain	EM-59
Tire rotation	WT-9 , MA-27
Torque converter installation	AT-275 , AT-276
Torque convertor clutch solenoid valve	AT-128 , AT-130
TPS1 - Wiring diagram	EC-373
TPS2 - Wiring diagram	EC-240
TPS3 - Wiring diagram	EC-637
Transverse link (front)	FSU-13
Triple meter	DI-32
TRNSCV - Wiring diagram	BL-177

ALPHABETICAL INDEX

Trouble diagnoses [GI-11](#)
Trunk lid [BL-111](#)
TURN - Wiring diagram [LT-75](#), [LT-259](#)
Turn signal lamp [LT-71](#)
Two trip detection logic [EC-47](#)

U

Unified meter and A/C amp. [DI-54](#)
Upper link (front susp.) [FSU-14](#)

V

Vacuum hose (brake system) [BR-25](#)
Vacuum hose drawing (Engine control) [EC-108](#)
Valve clearance [EM-111](#)
Valve guide [EM-127](#)
Valve lifter [EM-104](#)
Valve seat [EM-129](#)
Valve spring [EM-130](#)
VDC -Wiring diagram [BRC-102](#), [BRC-109](#)
Vehicle security (theft warning) system [BL-129](#)
Vehicle speed sensor (VSS) [EC-506](#), [EC-593](#)
VEHSEC - Wiring diagram [BL-134](#)
VENT/V - Wiring diagram ... [EC-448](#), [EC-450](#), [EC-457](#),
[EC-459](#)
VIN registration [EC-77](#)
VSS A/T - Wiring diagram [AT-123](#)

W

WARN - Wiring diagram [DI-70](#), [DI-79](#)
Warning chime [DI-92](#)
Warning lamps [DI-68](#)
Washer, front [WW-6](#)
Washer, rear [WW-40](#)
Water pump [CO-24](#)
Water temperature gauge [DI-5](#)
Wheel alignment (front) [FSU-6](#)
Wheel alignment (rear) [RSU-5](#)
Wheel balance [WT-8](#), [MA-25](#)
Wheel bearing (front) [FAX-4](#)
Wheel bearing (rear) [RAX-6](#)
Wheel hub (front) [FAX-4](#)
Wheel hub (rear) [RAX-6](#)
Wheel sensor (VDC) [BRC-153](#)
Wheel sensors (ABS) [BRC-41](#)
Wheel sensors (TCS) [BRC-86](#)
WINDOW - Wiring diagram [GW-23](#)
Window, door [GW-51](#)
Windshield [GW-11](#)
WIP/R - Wiring diagram [WW-42](#), [WW-97](#)
WIPER - Wiring diagram [WW-13](#), [WW-68](#)
Wiper and washer [WW-61](#)
Wiper, front [WW-6](#)
Wiper, rear [WW-40](#)
Wiring Diagram (Cell code) list [PG-118](#)
Withdrawal lever (clutch) [CL-14](#)
WT-T/WARN - Wiring diagram [WT-17](#), [WT-20](#)

A

B

C

D

E

F

G

H

I

J

K

L

IDX