



LEGACY

INSTALLATION INSTRUCTION

GENUINE PARTS

FILTER KIT

1 Part No. G3210AE000


2 Applicable Model LEGACY (99MY ~) / LHD

3 Component parts (Confirm component parts before you start installation.)

No.	Component parts	Q'ty	Remarks
1	Filter assembly	1	Upper
2	Filter assembly	1	Lower
3	Label	1	Filter replacement
4	Label	1	Caution

4 Tools • Screwdriver, Phillips screwdriver


5 Installation process

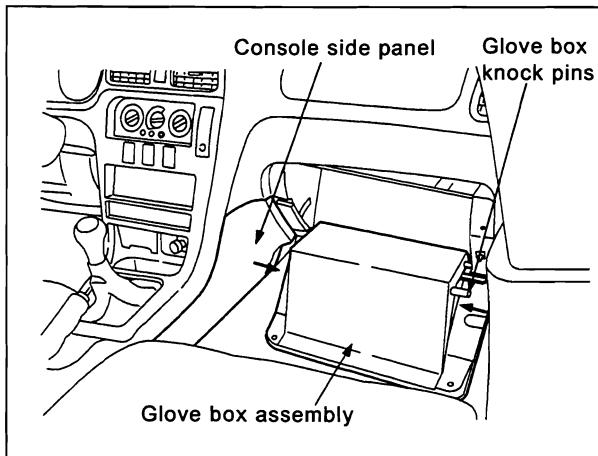

1. COVER REMOVAL

(1) Remove the glove box assembly as follows.

- 1 Push in the sides of the glove box to unhook the knock pins.
- 2 Remove the glove box installation screws.
- 3 Remove the console side panel.
- 4 Disconnect the glove box illumination harness connector and remove the glove box assembly. Remove the knock pins to facilitate later reinstallation.

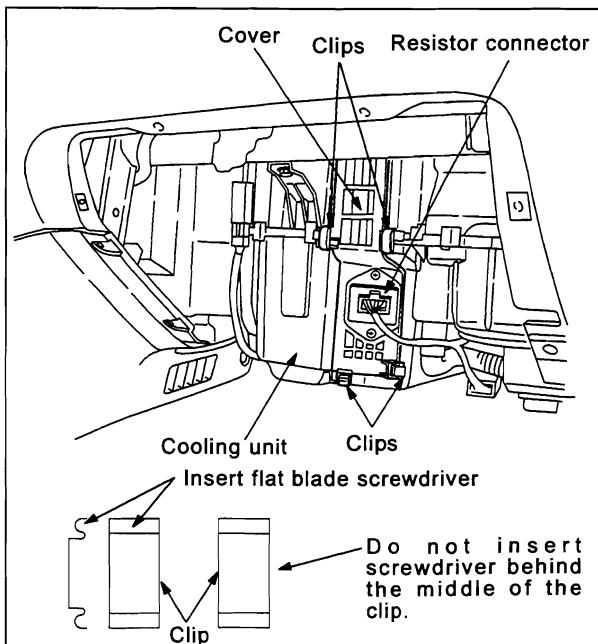


(2) Disconnect the resistor connector.

Remove the cover from the cooling unit by removing the four clips with a flat blade screwdriver.

The screwdriver must be inserted into the top of the clip. Do not pry the middle of the clip.

(Continued)

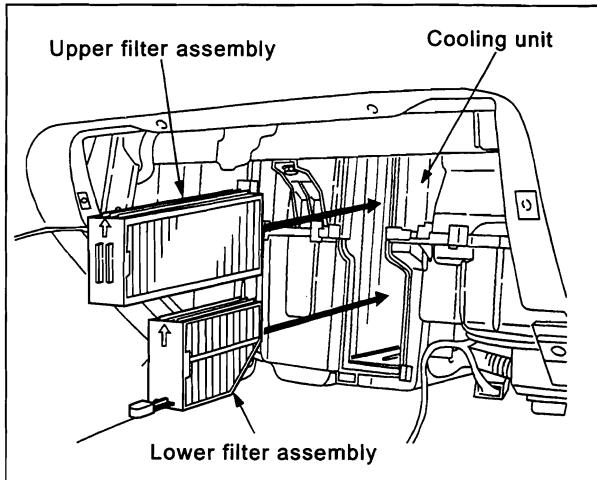


2. FILTER INSTALLATION

(1) Install the upper filter assembly in the cooling unit, then install the lower filter assembly.

Note:


- The passenger compartment side of each filter is marked with an arrow. Ensure the arrow points up.
- Ensure each filter assembly's tongues and grooves fit the corresponding cooling unit and matching filter tongues and grooves.

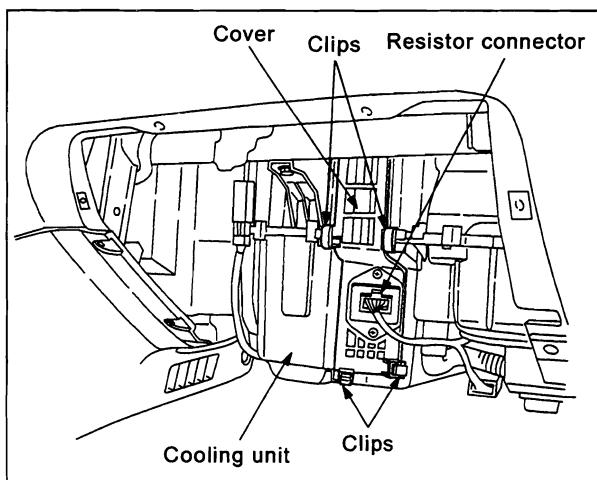

(2) Reinstall the cover, secure it using the clips and reconnect the resistor connector.

Note:

Ensure no air leaks from the cooling unit through the cover.

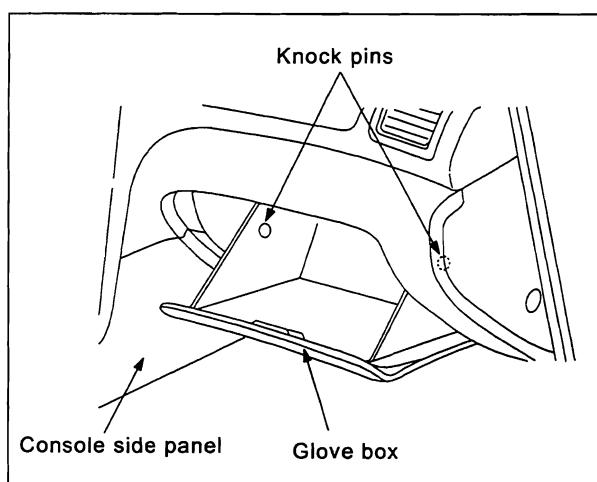

(3) Reinstall the glove box assembly as follows.

-1 Reconnect the glove box illumination harness connector and reinstall the glove box assembly.


-2 Reinstall the console side panel.

-3 Reinstall the glove box installation screws.

-4 Lift the glove box and reinstall the knock pins.

Note:

Ensure the knock pins are properly inserted into the glove box assembly grooves.

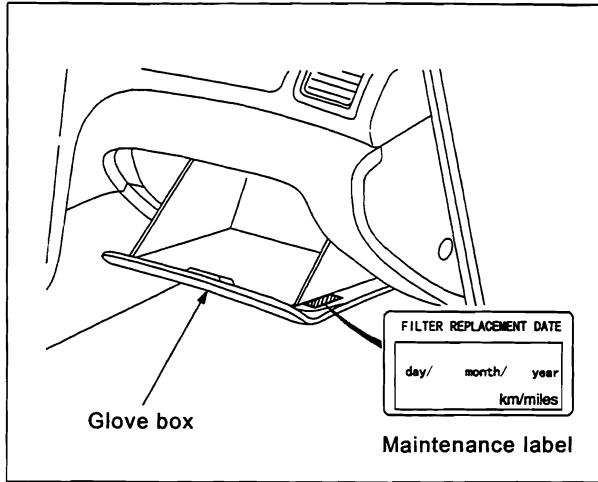


3. LABEL INSTALLATION


- (1) Fill in the maintenance label with the replacement date and mileage.
- (2) Install it on the right hand side of the glove box as shown.

Note:

The label is shown below.

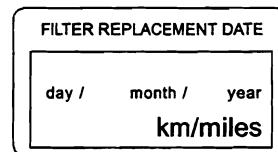

- The filter must be replaced every 12,000 km (7,500 miles) or 1 year.
- The filter may need to be replaced more frequently in dusty areas.

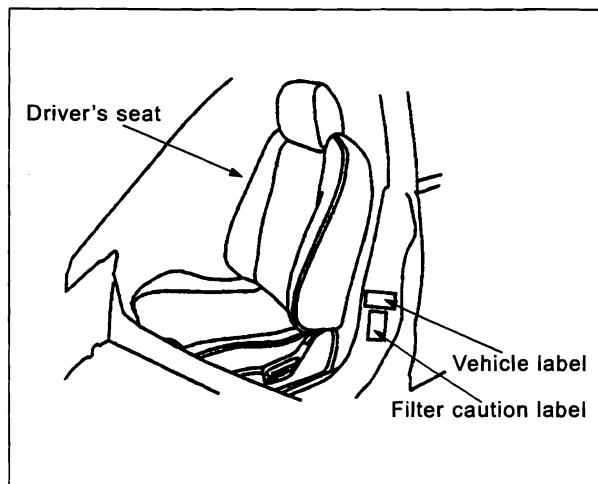

- (3) Install the caution label on the left-hand side door pillar below the vehicle label as shown.

Note:

The caution label reads as follows.

This vehicle is equipped with a ventilation air filter which collects dust, pollen, etc.

To ensure ventilation, A/C, heating and defrosting performance, the filter should be replaced regularly.

Contact your dealer for part replacement.

Replace the part every 12,000 km (7,500 miles) or 1 year.

Consult your dealer if the following occurs, even if it is not yet time to change the filter:

- Reduction of air flow through the vents.
- Windshield gets easily fogged or misted.