

## SCHEDULED MAINTENANCE INTERVALS

### SUBARU—IMPREZA OUTBACK, SPORT, WRX, LEGACY & OUTBACK

TO BE SERVICED	OF SERVIC	VEHICLE MILEAGE INTERVAL (x1000)											
		7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90
Engine oil & filter	R	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Brake lines	S/I		✓		✓		✓		✓		✓		✓
Clutch & hill holder system	S/I		✓		✓		✓		✓		✓		✓
Disc brake pads & discs, front & rear axle boots & axle shaft joint portions	S/I		✓		✓		✓		✓		✓		✓
Parking brake	S/I		✓		✓		✓		✓		✓		✓
Steering & suspension	S/I		✓		✓		✓		✓		✓		✓
Air filter element	R				✓				✓				✓
Engine coolant	R				✓				✓				✓
Fuel filter	R				✓				✓				✓
Spark plugs	R								✓				
Automatic transmission fluid & filter	S/I					✓			✓				✓
Brake fluid	S/I					✓			✓				✓
Brake linings & drums	S/I					✓			✓				✓
Camshaft drive belt A	S/I					✓			✓				✓
Coolant level, hoses & clamps	S/I					✓			✓				✓
Drive belts	S/I					✓			✓				✓
Fuel system, hoses & connections	S/I					✓			✓				✓
Transmission and/or differential gear fluid	S/I					✓							✓
Front & rear wheel bearing repack	S/I								✓				

R: Replace

S/I: Service or Inspect

A Non-California vehicles: replace every 60,000 miles.

### FREQUENT OPERATION MAINTENANCE (SEVERE SERVICE)

If a vehicle is operated under any of the following conditions it is considered severe service:

- Extremely dusty areas.
- 50% or more of the vehicle operation is in 32°C (90°F) or higher temperatures, or constant operation in temperatures below 0°C (32°F).
- Prolonged idling (vehicle operation in stop and go traffic).
- Frequent short running periods (engine does not warm to normal operating temperatures).
- Police, taxi, delivery usage or trailer towing usage.

Oil & oil filter change: change every 3750 miles.

Clutch & hill holder system: service or inspect every 7500 miles.

Disc brake pads & discs, front & rear axle boots & axle shaft joint portions: service or inspect every 7500 miles.

Steering & suspension: service or inspect every 7500 miles.

Air filter element: service or inspect every 15,000 miles.

Automatic transmission fluid: service or inspect every 15,000 miles.

Brake linings & drums: service or inspect every 15,000 miles.

Coolant level, hoses & clamps: service or inspect every 15,000 miles.

Drive belts: service or inspect every 15,000 miles.

Transmission/differential gear oil (except SVX): service or inspect every 15,000 miles.

Front & rear wheel bearing repack: service or inspect every 30,000 miles.