

CONTENTS

INTRODUCTION	7	Radiator	95
TOOLS-EQUIPMENT-SAFETY	8	Cooling fan and thermostats	97
Tools and equipment	8	Thermostat	98
Safety	10	Water pump	99
LUBRICATION AND MAINTENANCE	11	Water pump drive belt	100
Specifications	11	Heater assembly	100
How to grease and oil change	11	FUEL SYSTEM	104
Service schedule	14	Specifications	104
Lubrication chart	19	Fuel system trouble shooting	104
Maintenance chart	20	Air cleaner	106
WHEELS AND TYRES	21	Carburettor	107
Specifications	21	Electromagnetic plunger fuel pump	116
How to change a road wheel	21	Electromagnetic diaphragm fuel pump	117
Tyre wear trouble shooting	23	Fuel filter	119
Care and maintenance	24	Fuel tank	119
ENGINE TUNE-UP	25	Throttle cable	120
Tune-up specifications	25	CLUTCH	121
Tune-up operations	25	Specifications	121
ROADSIDE TROUBLE SHOOTING	33	Clutch trouble shooting	121
Trouble shooting	33	Description	122
To check ignition and electrical systems	33	Clutch unit	123
To check fuel system	35	Clutch release mechanism	124
To check mechanical system	36	Clutch pedal	125
ENGINE	38	Clutch cable	125
PART 1. ENGINE MECHANICAL TROUBLE SHOOTING	38	Clutch adjustments	126
PART 2. OVERHEAD VALVE (OHV) ENGINE ..	41	MANUAL TRANSAXLE	127
Specifications	41	Specifications	127
Description	43	Transaxle trouble shooting	128
Engine assembly	43	Description	132
Rocker assemblies and pushrods	46	Transaxle assembly	135
Inlet manifold	47	Transaxle controls	141
Engine sump and oil pump pick up	48	Axle shafts	148
Camshaft and cam followers	49	Propeller shaft	150
Cylinder heads	50	AUTOMATIC TRANSAXLE	152
Oil pump	53	Specifications	152
Pistons, connecting rods and cylinder bores	54	Automatic transaxle trouble shooting	152
Crankshaft and main bearings	60	Description	153
Flywheel/drive plate	62	Transmission fluid	153
Engine mountings	63	Brake band	154
Exhaust system	64	Kickdown solenoid	155
PART. 3 OVERHEAD CAMSHAFT (OHC) ENGINE	66	Vacuum modulator	155
Specifications	66	Four wheel drive transfer solenoid	155
Description	67	Automatic four wheel drive switch	156
Engine assembly	68	Neutral safety switch	156
Camshaft drive belts	71	Selector lever and linkage	157
Camshafts, rocker arms and tappets	75	Transaxle assembly	159
Inlet manifold	76	REAR AXLE	162
Cylinder heads	77	Specifications	162
Engine sump and oil pump pick up	80	Rear axle trouble shooting	162
Oil pump	81	Description	164
Pistons, connecting rods and cylinder bores	82	Axle shafts	165
Crankshaft and main bearings	88	Differential assembly	166
Flywheel/drive plate	90	Differential mounting rubber bushes	168
Engine mountings	91	STEERING	170
Exhaust system	92	PART 1. STEERING TROUBLE SHOOTING	170
COOLING SYSTEM	93	PART 2. CONVENTIONAL STEERING	172
Specifications	93	Specifications	172
Cooling system trouble shooting	93	Description	172
Description	94	Steering gear assembly	172
		Non-adjustable steering column	174
		Tilt adjustable steering column	176
		Intermediate shaft	178

Contents

PART 3. POWER STEERING	179	Alternator	225
Specifications	179	Starter motor	229
Description	179	Breaker point distributor	232
Preliminary inspection and testing	179	Electronic distributor	235
In car adjustment and minor repairs	180	Switches and controls	239
Power steering pump	181	Steering wheel and horn control	242
Power steering gear assembly	183	Instrument cluster	242
Steering column	184	Speedometer cable	244
Intermediate shaft	184	Heater blower motor	244
FRONT SUSPENSION	185	Lamp units	245
Specifications	185	Windscreen wipers	251
Front suspension trouble shooting	185	Rear wipers	252
Description	186	Fuses and fusible links	253
Front hub	187	How to wire up a trailer	254
Suspension unit	188	Wiring diagrams	256
Ball joint	190	EMISSION CONTROL	272
Suspension control arm	190	Introduction	272
Radius rod	190	Positive crankcase ventilation (PCV) system	272
Stabiliser bar	191	Evaporative control system	273
Steering angles and ground clearance	191	Air preheat system	277
REAR SUSPENSION	194	Exhaust gas recirculation (EGR) system	277
PART 1. REAR SUSPENSION TROUBLE SHOOTING	194	Coasting by-pass system	280
PART 2. TORSION BAR REAR SUSPENSION	195	Air injection system	281
Specifications	195	Catalytic converter	282
Description	195	BODY	283
Torsion bar and trailing link	195	PART 1. BODY COMPONENTS	283
Shock absorber	196	Windscreen and rear glass	283
Trailing arm	197	Front doors	283
Rear hub	197	Rear doors	286
PART 3. COIL SPRING REAR SUSPENSION	198	Engine bonnet	289
Specifications	198	Luggage compartment lid — Sedan and Coupe	290
Description	198	Tailgate — Station Wagon	291
Trailing link	198	Tailgate — Utility	293
Trailing arm	198	Radiator grille	294
Suspension unit	199	Centre console	294
Rear hub	200	Vehicle cleaning	294
BRAKES	203	PART 2. BODY REPAIRS	297
Specifications	203	Introduction	297
Brakes trouble shooting	203	Safety	297
Description	206	Tools, equipment and materials	297
Master cylinder	206	Rust repairs	302
Front disc brake assembly	208	Panel damage	305
Rear drum brake assembly	212	Panel replacement	308
Brake servo unit	214	Plastic body fillers	309
Handbrake	215	Fundamentals of spray painting	310
Brake pedal	216	Preparing for painting	313
Proportioning valve	217	Spray painting	316
Hill holder valve (HHV)	217	Spray gun and spray pattern trouble shooting	318
Hydraulic system	218	Paint difficulties — Causes and cures	319
ELECTRICAL SYSTEM	219	Finishing off (except enamel finishes)	323
Specifications	219	CONVERSION TABLES	325
Battery and charging system trouble shooting	219	SUPPLEMENT	327
Battery and starting system trouble shooting	221	Lubrication, maintenance and engine tune-up	328
Lighting system trouble shooting	221	Overhead camshaft engine	328
Turn signal lamp trouble shooting	222	Fuel system	328
Ignition system trouble shooting	223	Front suspension	328
Test equipment and some applications	223	Rear suspension	328
Battery	224	Emission control	328