


GENERAL DESCRIPTION

EXTERIOR BODY PANELS

1. General Description

A: SPECIFICATIONS

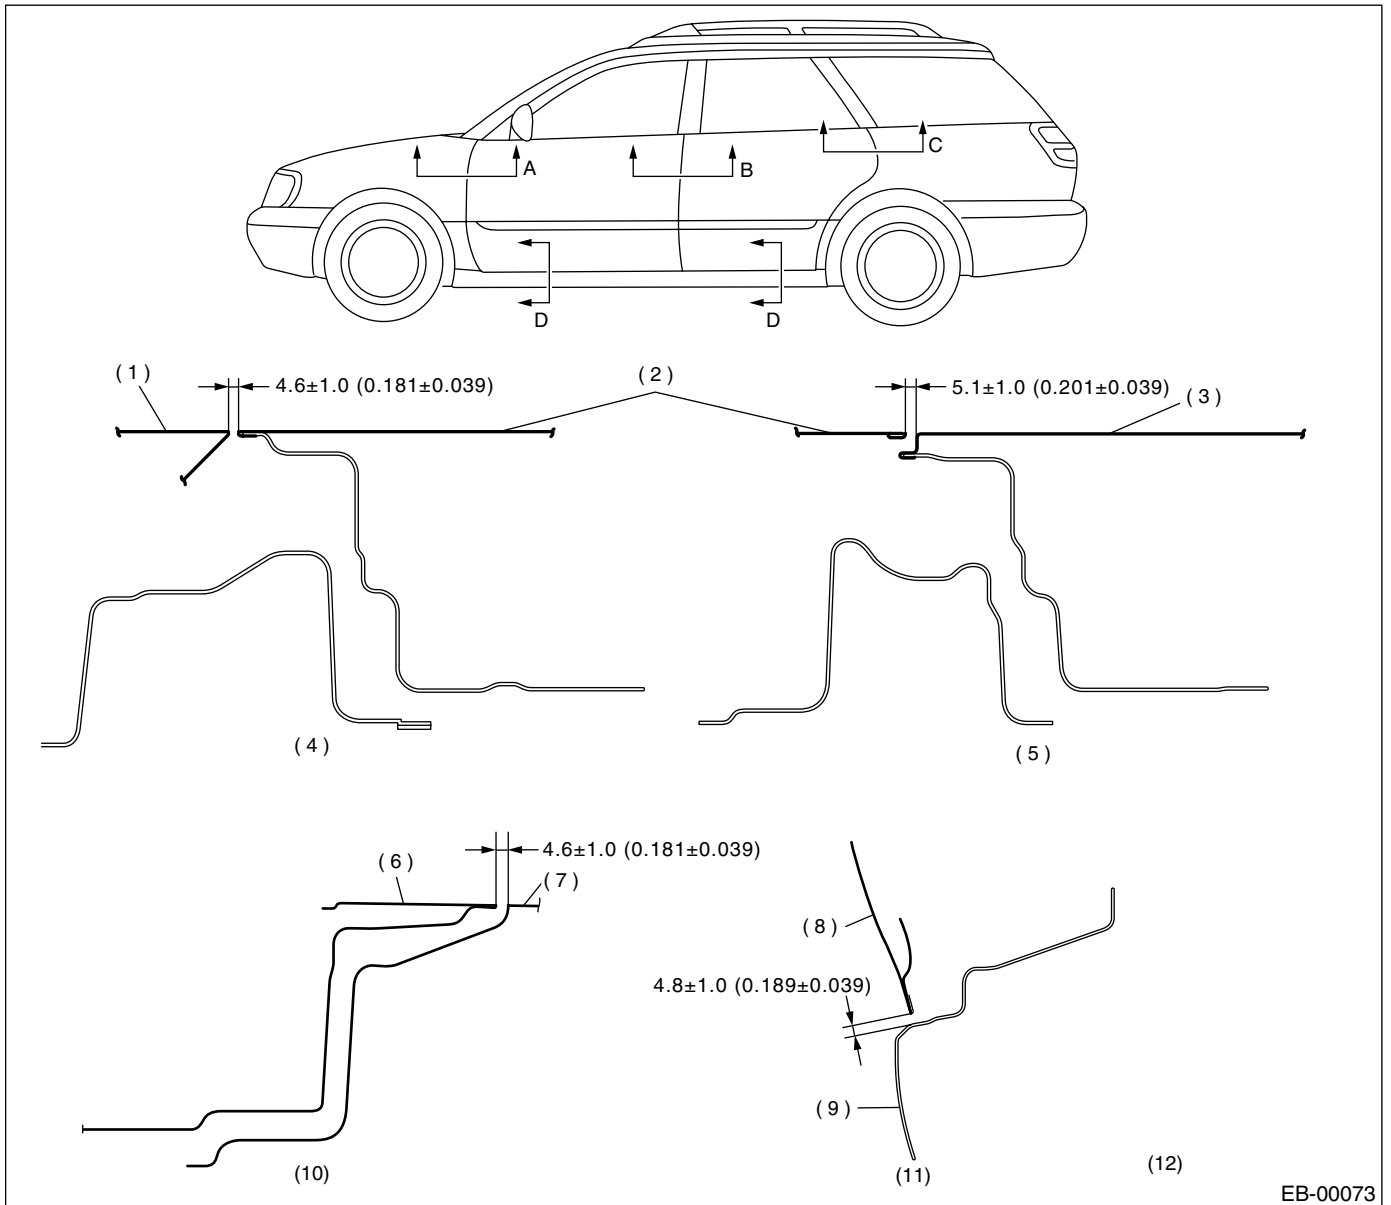


EB-00073

- | | | |
|----------------------|------------------------|--------------------|
| (1) Front fender | (5) Section B | (9) Side sill |
| (2) Front door outer | (6) Rear door outer | (10) Section C |
| (3) Rear door outer | (7) Rear quarter outer | (11) Section D |
| (4) Section A | (8) Door panel | (12) Unit: mm (in) |

B: COMPONENT

1. FRONT HOOD

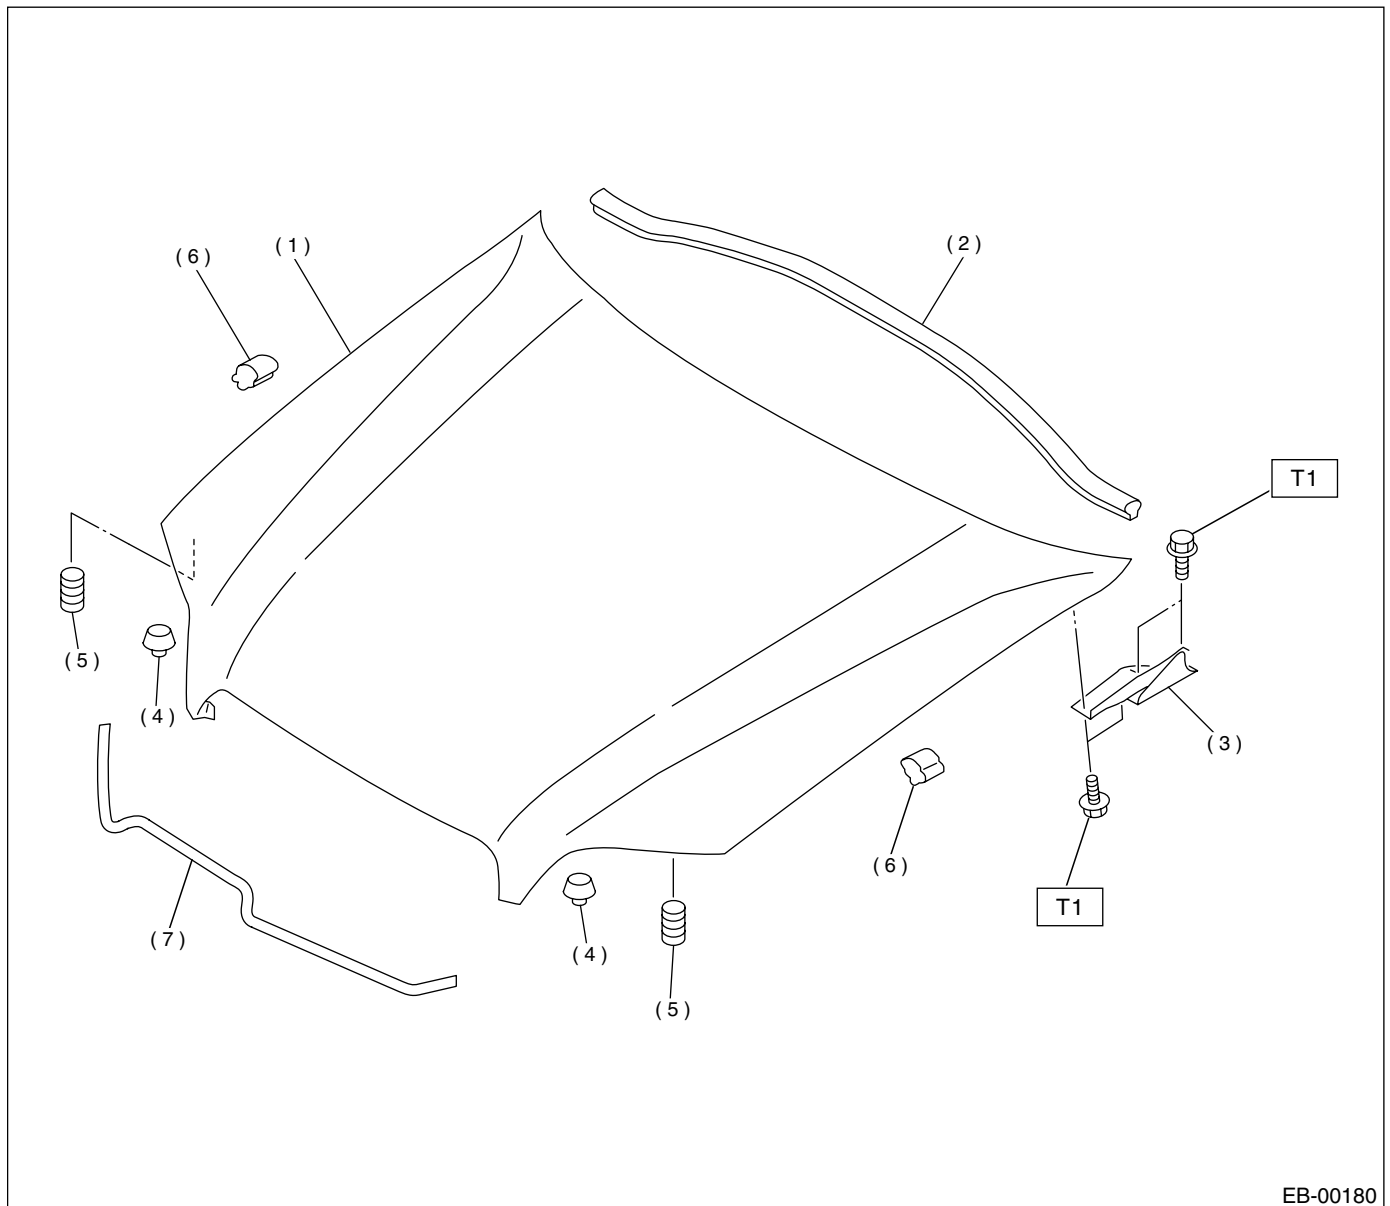

EB-00180


- | | |
|-----------------------|---------------|
| (1) Front hood | (5) Buffer A |
| (2) Seal (Front hood) | (6) Buffer B |
| (3) Hinge | (7) Seal ASSY |
| (4) Buffer C | |

Tightening torque: N-m (kgf-m, ft-lb)
T1: 24.5 (2.5, 18.1)

GENERAL DESCRIPTION

EXTERIOR BODY PANELS

2. FRONT DOOR PANEL

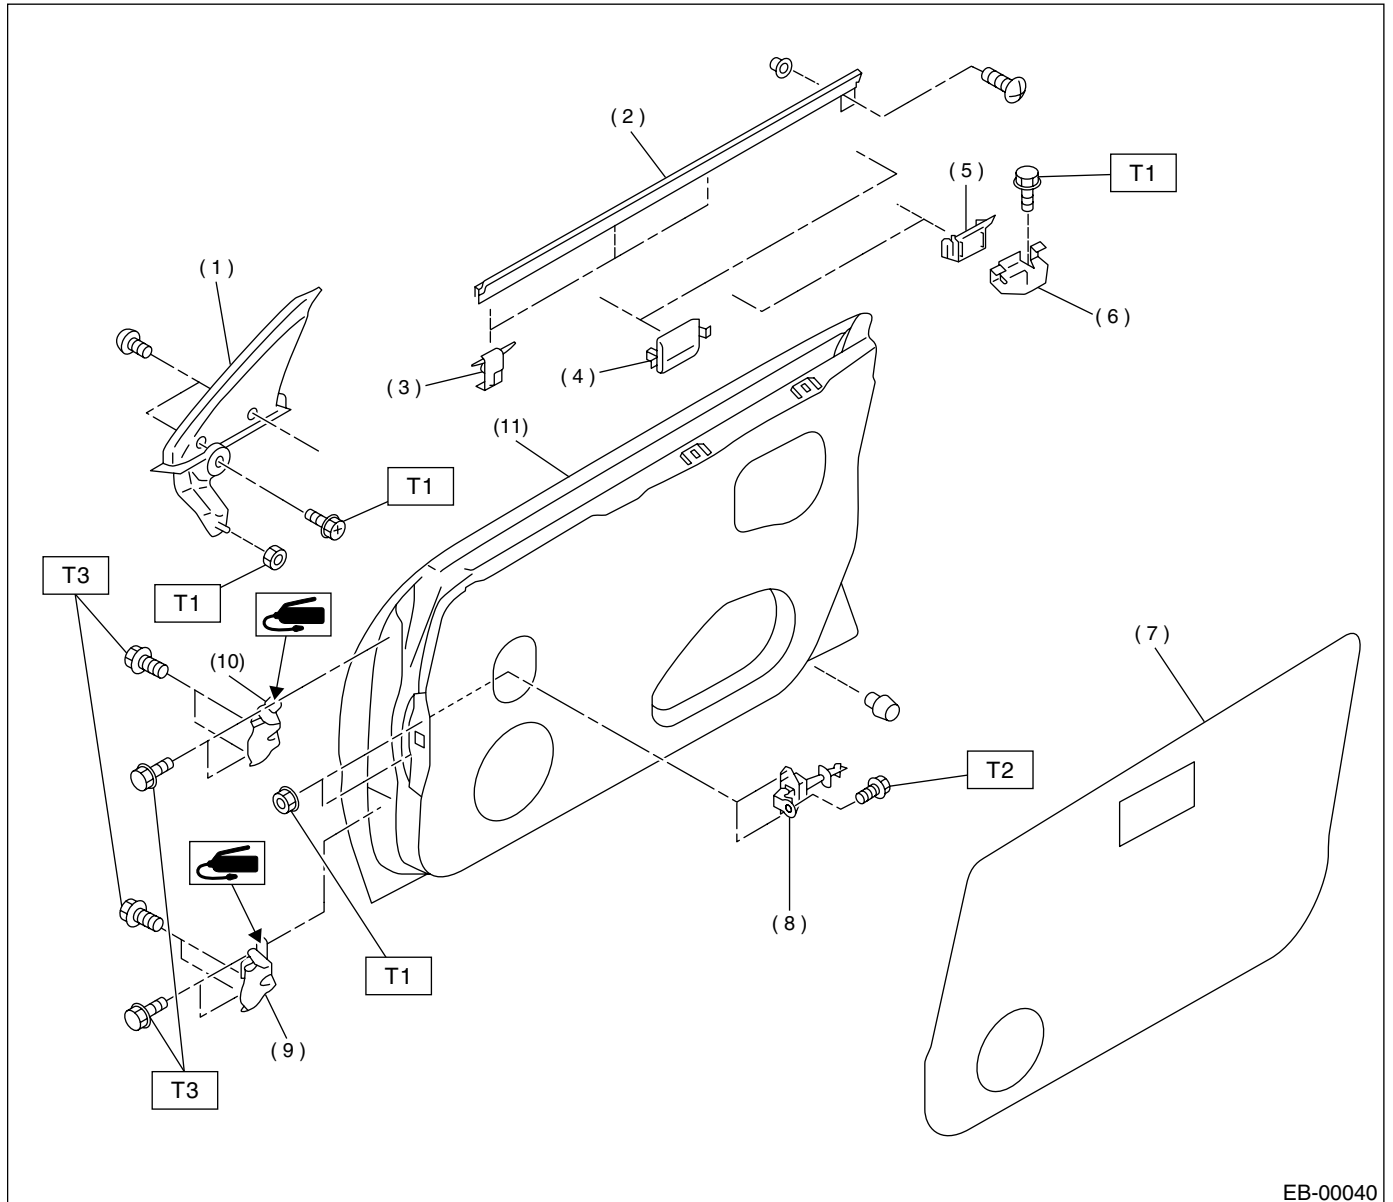

- | | |
|--------------------------------|-------------------|
| (1) Gusset | (7) Sealing cover |
| (2) Weatherstrip (Outer) | (8) Checker |
| (3) Clip (Weatherstrip, outer) | (9) Lower hinge |
| (4) Stabilizer (Lifter) | (10) Upper hinge |
| (5) Stabilizer (Outer) | (11) Door panel |
| (6) Stabilizer (Inner) | |


Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.35 (0.75, 5.4)

T2: 18 (1.8, 13)

T3: 30 (3.1, 22.4)

3. REAR DOOR PANEL

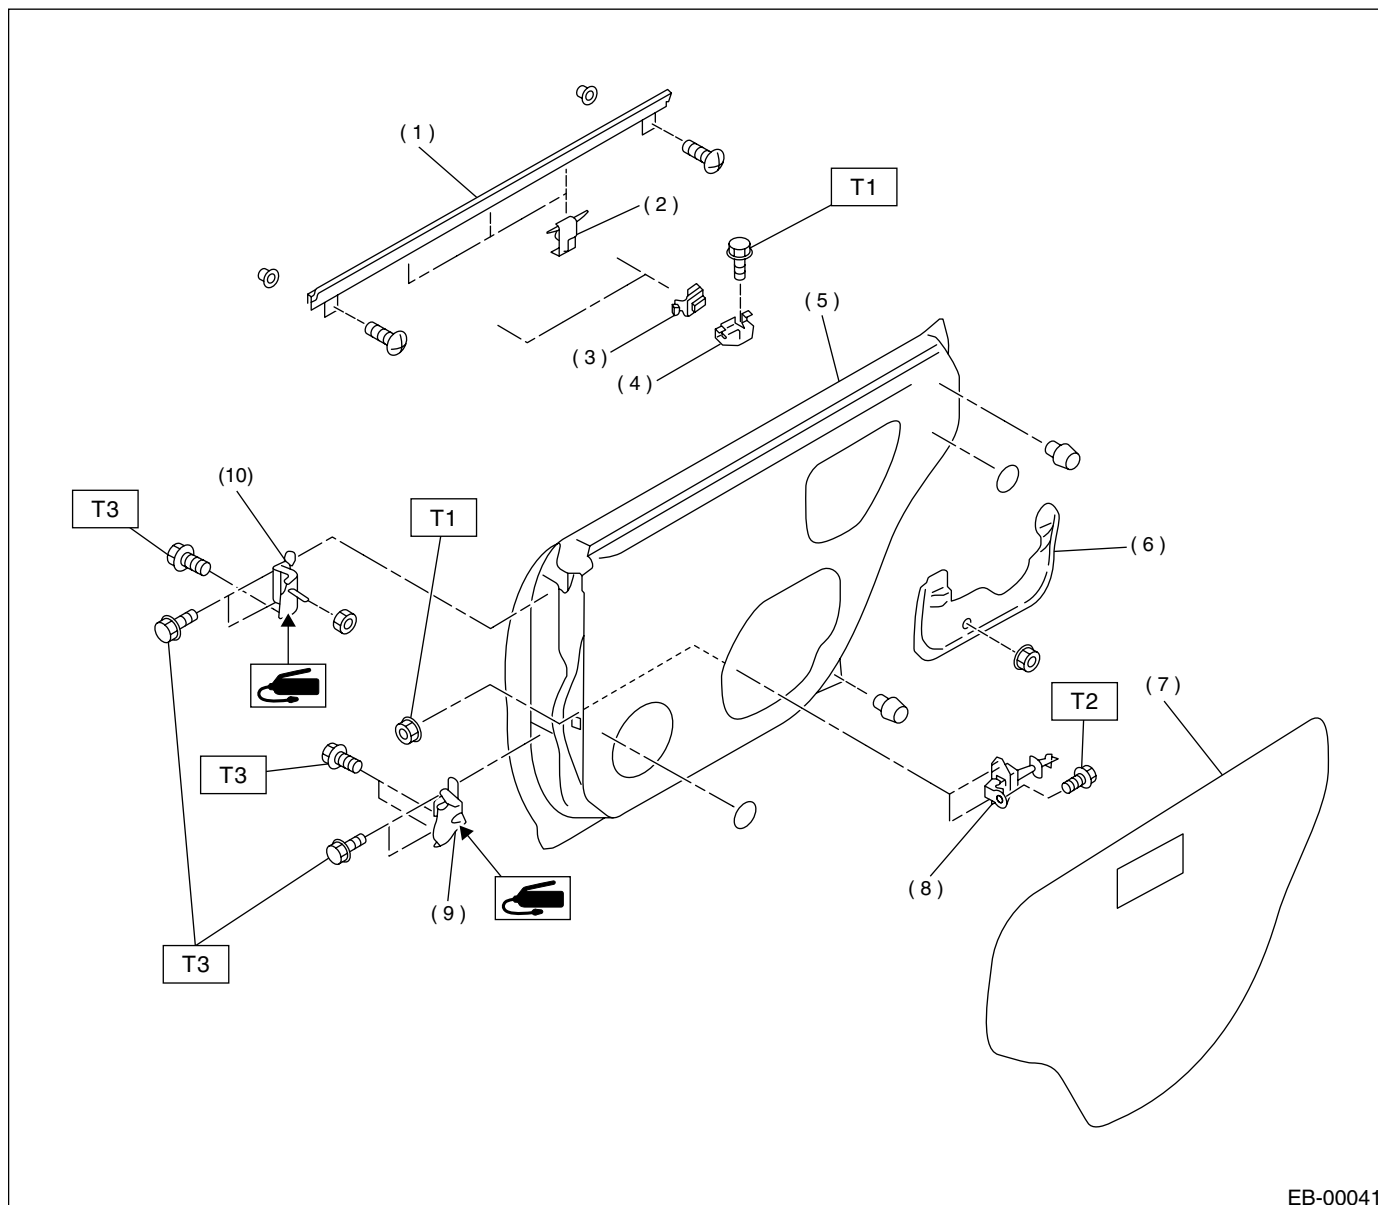

EB-00041

- | | |
|--------------------------------|-------------------|
| (1) Weatherstrip (Outer) | (7) Sealing cover |
| (2) Clip (Weatherstrip, outer) | (8) Checker |
| (3) Stabilizer (Outer) | (9) Lower hinge |
| (4) Stabilizer (Inner) | (10) Upper hinge |
| (5) Door panel | |
| (6) Bracket | |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.35 (0.75, 5.4)


T2: 18 (1.8, 13)

T3: 30 (3.1, 22.4)

GENERAL DESCRIPTION

EXTERIOR BODY PANELS

4. TRUNK LID PANEL

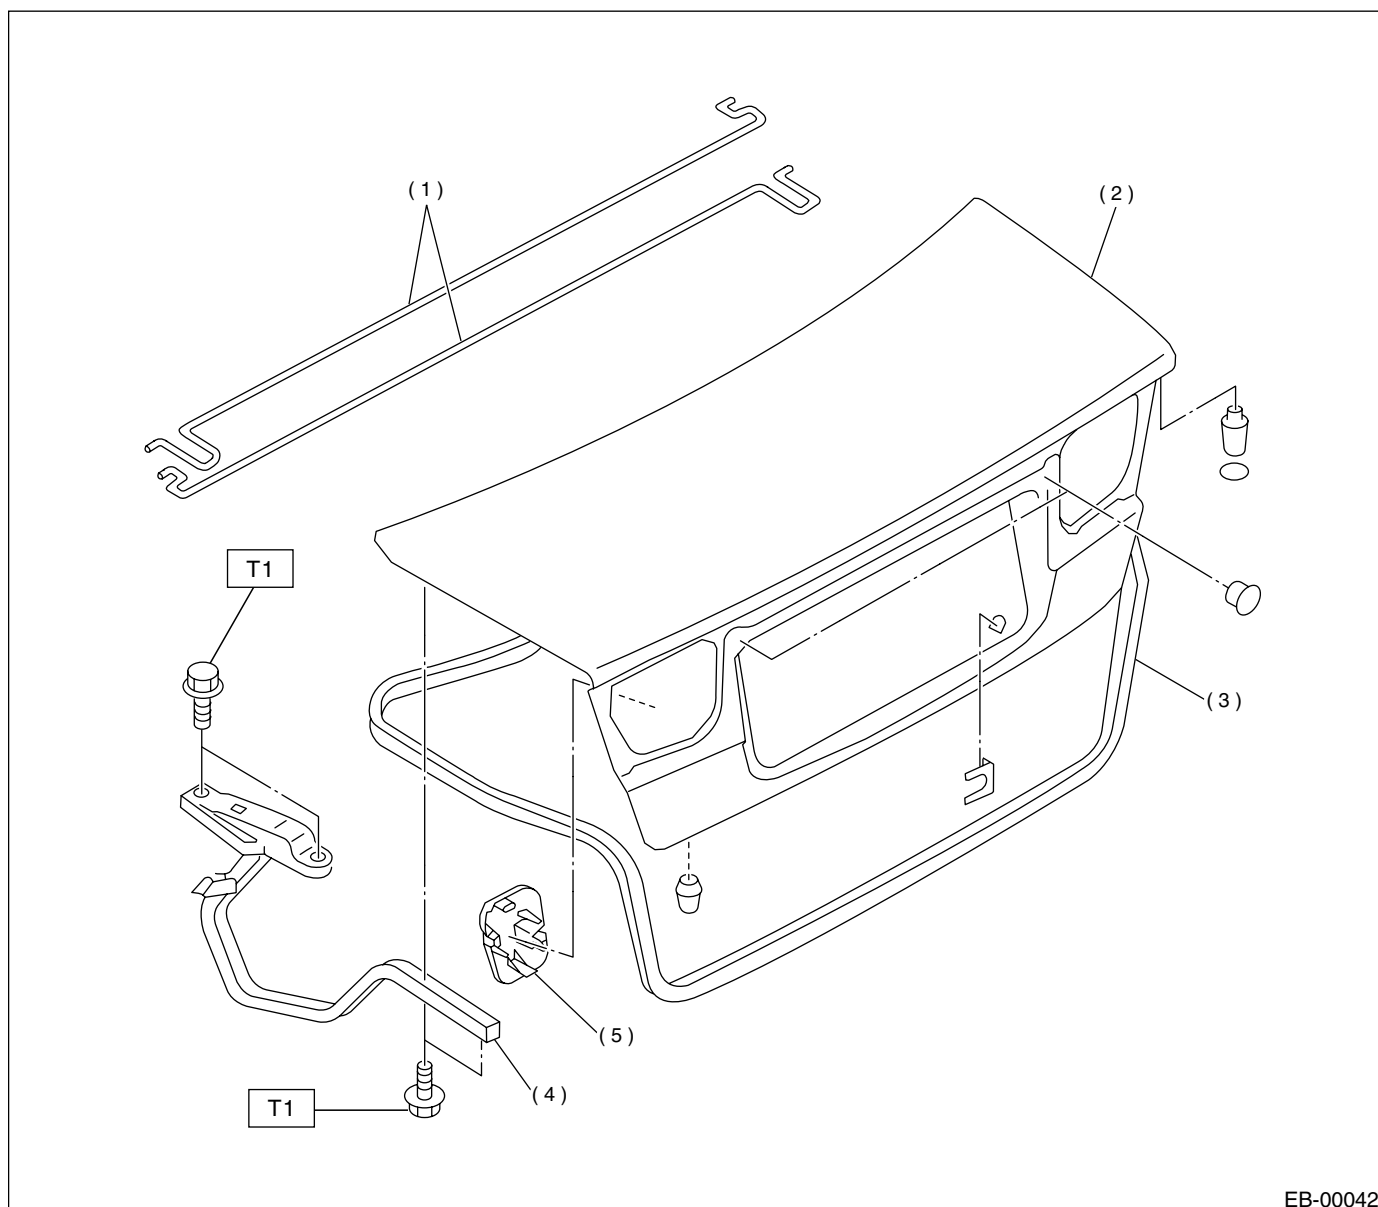


- (1) Torsion bar
- (2) Trunk lid
- (3) Weatherstrip

- (4) Hinge ASSY
- (5) Cover

Tightening torque: N·m (kgf-m, ft-lb)

T1: 18 (1.8, 13)

5. REAR GATE PANEL

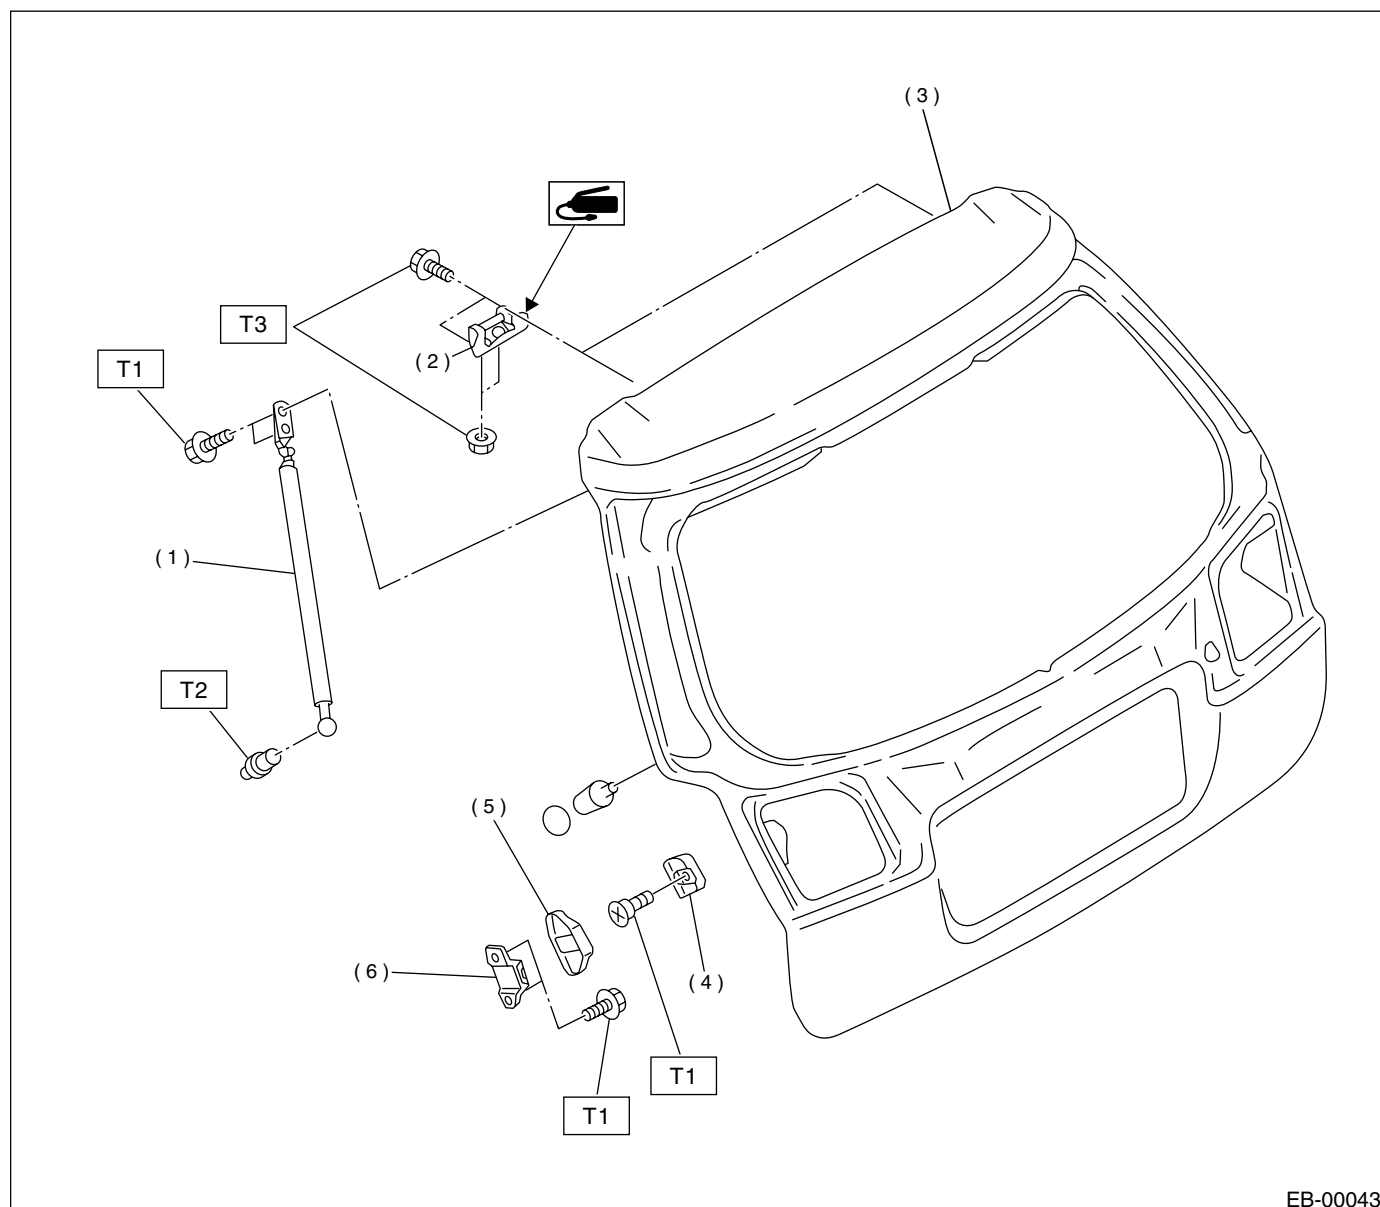

EB-00043

- | | |
|---------------|------------------------|
| (1) Gas stay | (4) Buffer (Rear gate) |
| (2) Hinge | (5) Buffer cover |
| (3) Rear gate | (6) Buffer (Back door) |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.5)


T2: 14 (1.4, 10.1)

T3: 25 (2.5, 18.1)

GENERAL DESCRIPTION

EXTERIOR BODY PANELS


6. TAIL GATE PANEL

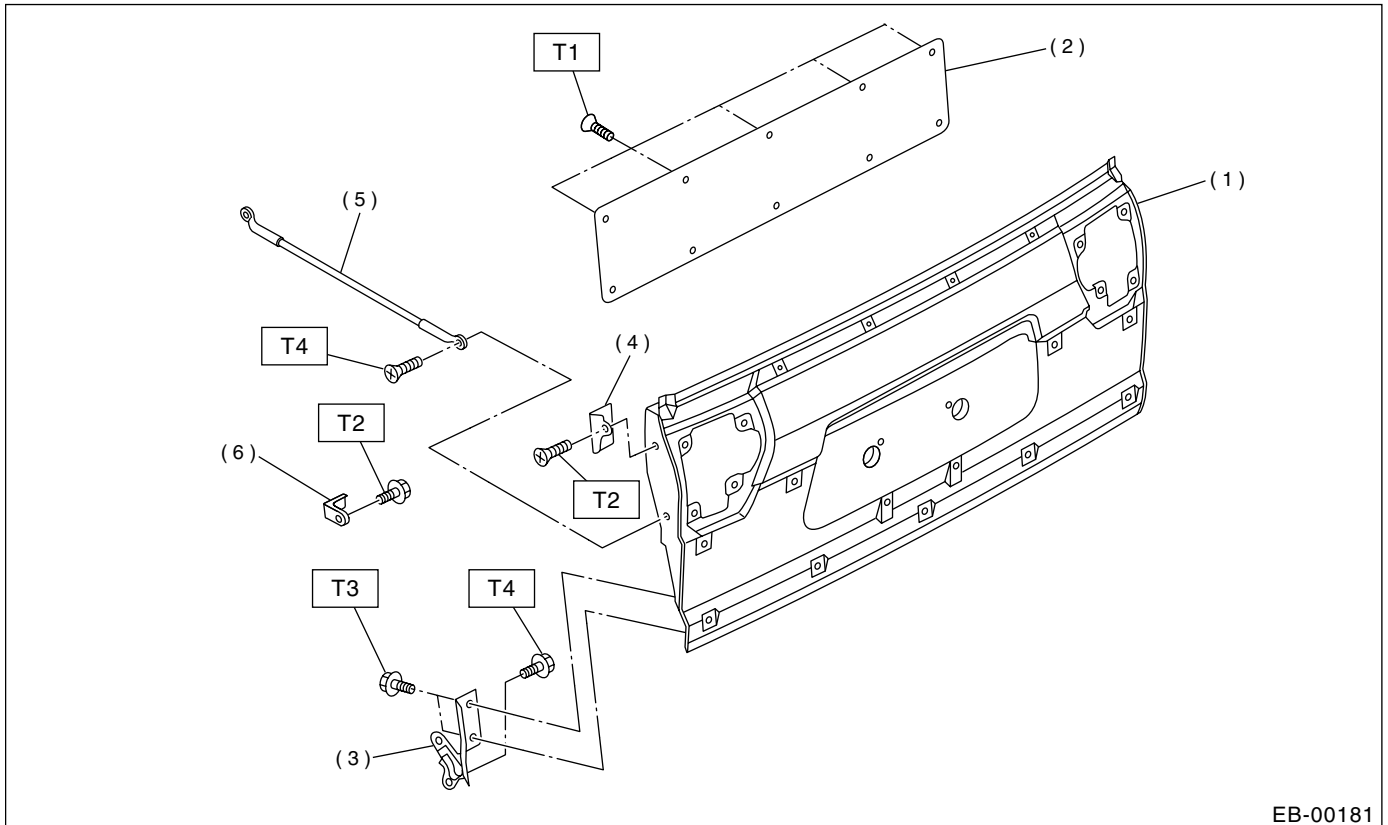

- | | |
|---------------------|---------------------|
| (1) Tail gate | (4) Protector |
| (2) Tail gate cover | (5) Tail gate cable |
| (3) Hinge | (6) Buffer |

Tightening torque: N·m (kgf·m, ft·lb)**T1: 2 (0.2, 1.4)****T2: 7.5 (0.76, 5.5)****T3: 25 (2.5, 18.1)****T4: 30 (3.1, 22.4)**

7. SWITCH BACK GATE

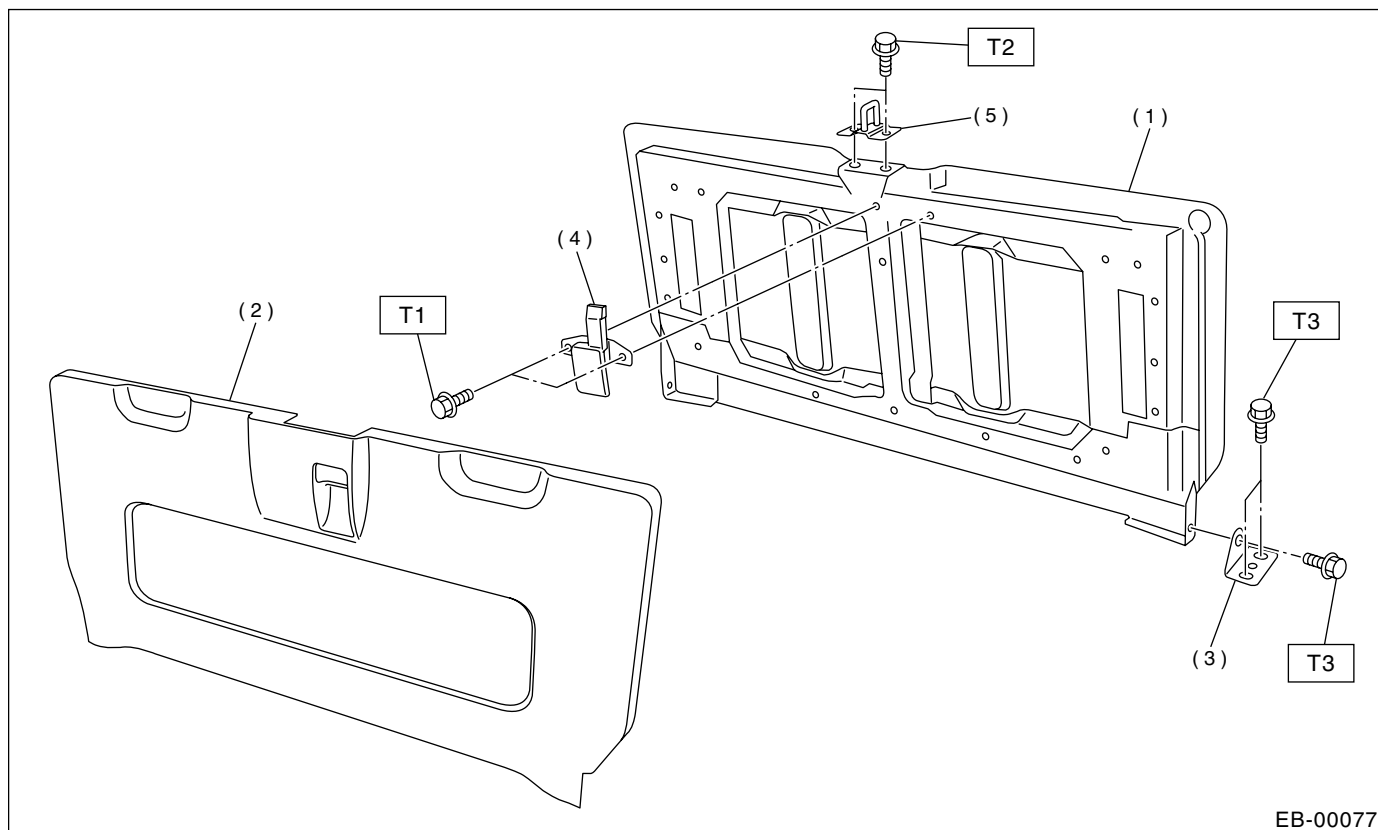

- (1) Switch back gate
- (2) Cover
- (3) Hinge

- (4) Release lever
- (5) Striker

Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.5)

T2: 18 (1.8, 13)



T3: 27.5 (2.80, 20.3)

GENERAL DESCRIPTION

EXTERIOR BODY PANELS

C: PREPARATION TOOL

1. SPECIAL TOOLS

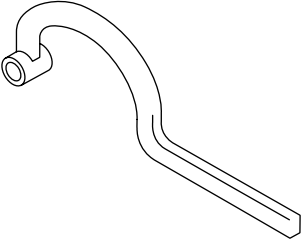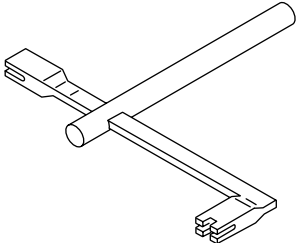ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-925610000	925610000	WRENCH	Used for removing and installing door hinge.
 ST-927780000	927780000	REMOVER	Used for removing and installing trunk torsion bar.

2. GENERAL TOOL

TOOL NAME	REMARKS
Support Jack	Used for supporting door panel.