


36.Cargo Bed Floor Tray

A: REMOVAL

- 1) Remove cargo bed side tray. <Ref. to EI-63, REMOVAL, Cargo Bed Side Tray.>
- 2) Remove cargo bed side molding. <Ref. to EI-64, REMOVAL, Cargo Bed Side Molding.>
- 3) Remove cargo bed C pillar molding. <Ref. to EI-65, REMOVAL, Cargo Bed C Pillar Molding.>
- 4) Remove back panel tray. <Ref. to EI-67, REMOVAL, Back Panel Tray.>
- 5) Remove bolt using TORX® bit T25. Remove clip.

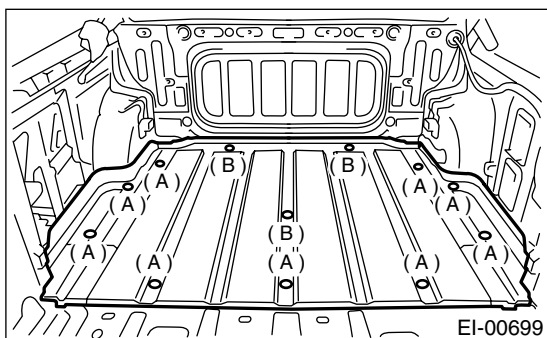

- (A) Bolt
(B) Clip

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Cargo bed floor tray;

7.5 N·m (0.76 kgf-m, 5.53 ft-lb)

Cargo bed side molding;

7.5 N·m (0.76 kgf-m, 5.53 ft-lb)

Cargo bed side tray;

7.5 N·m (0.76 kgf-m, 5.53 ft-lb)