


2. Front Grille

A: REMOVAL

- 1) Open hood.
- 2) Remove bolts and nuts to remove front grill.

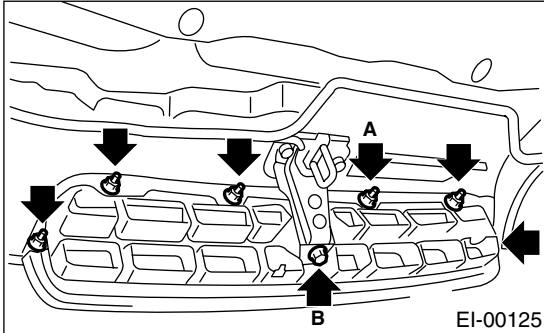

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

A: $4.4 \pm 1.5 \text{ N}\cdot\text{m}$ ($0.4 \pm 0.1 \text{ kgf}\cdot\text{m}$, $3.2 \pm 1.0 \text{ ft}\cdot\text{lb}$)

B: $7.0 \pm 2.0 \text{ N}\cdot\text{m}$ ($0.7 \pm 0.2 \text{ kgf}\cdot\text{m}$, $5.1 \pm 1.4 \text{ ft}\cdot\text{lb}$)