

REAR QUARTER TRIM


EXTERIOR/INTERIOR TRIM

22. Rear Quarter Trim

A: REMOVAL

1. SEDAN


- 1) Remove rear mole (A).
- 2) Remove rear shelf trim. <Ref. to EI-58, REMOVAL, Rear Shelf Trim.>
- 3) Remove side sill rear upper cover. <Ref. to EI-51, REMOVAL, Lower Inner Trim.>
- 4) Remove rear pillar lower trim (B).
- 5) Remove rear pillar upper trim (C).

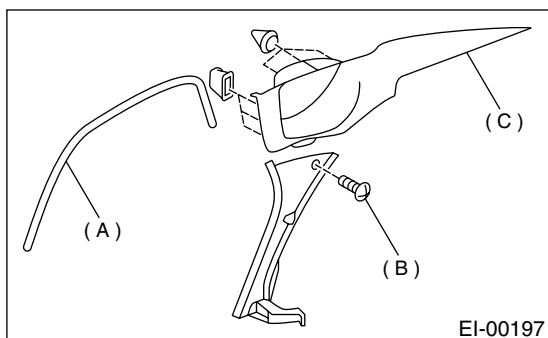

2. WAGON

- 1) Remove side sill rear upper cover. <Ref. to EI-51, REMOVAL, Lower Inner Trim.>
- 2) Remove luggage floor mat. <Ref. to EI-61, REMOVAL, Luggage Floor Mat.>
- 3) Remove rear skirt trim (A).
- 4) Remove rear quarter lower trim mounting bolts, screws and clips, then remove the trim (B).
- 5) Remove rear mole (C).
- 6) Remove rear quarter upper trim mounting screw, then remove the trim (D).

- 7) Remove rear rail trim (E).

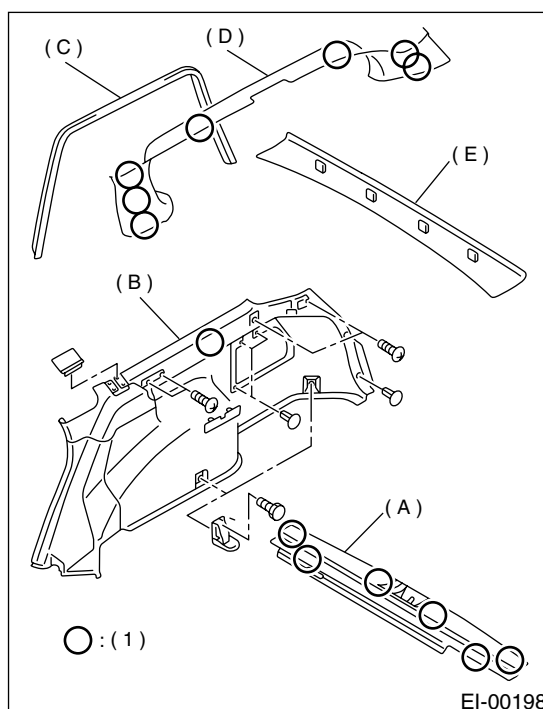

- (1) Hook pawl

B: INSTALLATION


Install in the reverse order of removal.

CAUTION:

Be sure to securely hook pawls of inner trim panel to body flange.

NOTE:

When installing rear quarter upper trim, be sure to set rear mole as shown in the figure.

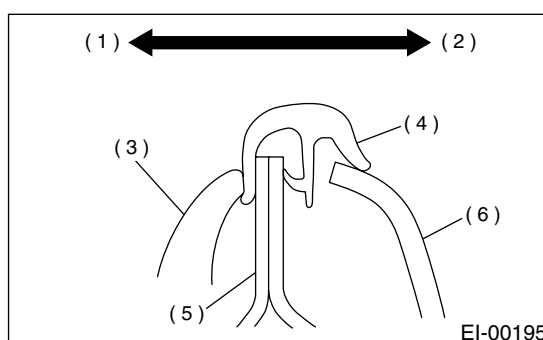

- (1) Outside
- (2) Inside
- (3) Weatherstrip
- (4) Mole
- (5) Body
- (6) Trim