

17. Roof Rail


A: REMOVAL

CAUTION:

When removing roof rail, use great care not to damage body panel by stud bolt.

1. WAGON

- 1) Remove roof trim. <Ref. to EI-54, REMOVAL, Roof Trim.>
- 2) Remove five mounting nuts and then detach roof rail carefully.

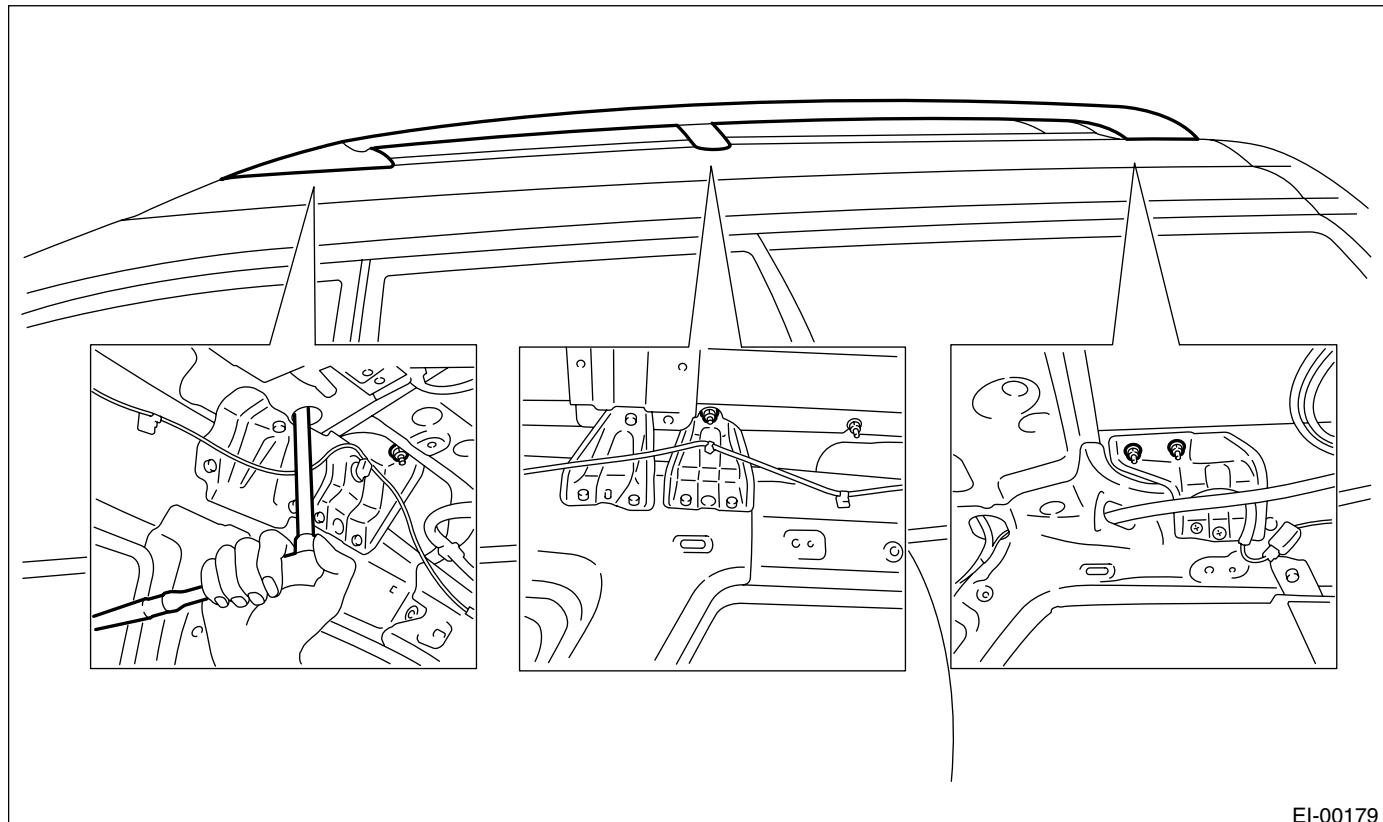


EI-00179

ROOF RAIL

EXTERIOR/INTERIOR TRIM

2. PICKUP

- 1) Remove cargo bed upper molding. <Ref. to EI-66, REMOVAL, Cargo Bed Upper Molding.>
- 2) Remove roof trim. <Ref. to EI-56, PICKUP, REMOVAL, Roof Trim.>
- 3) Remove five nuts and roof rail.
- 4) Remove roof molding.

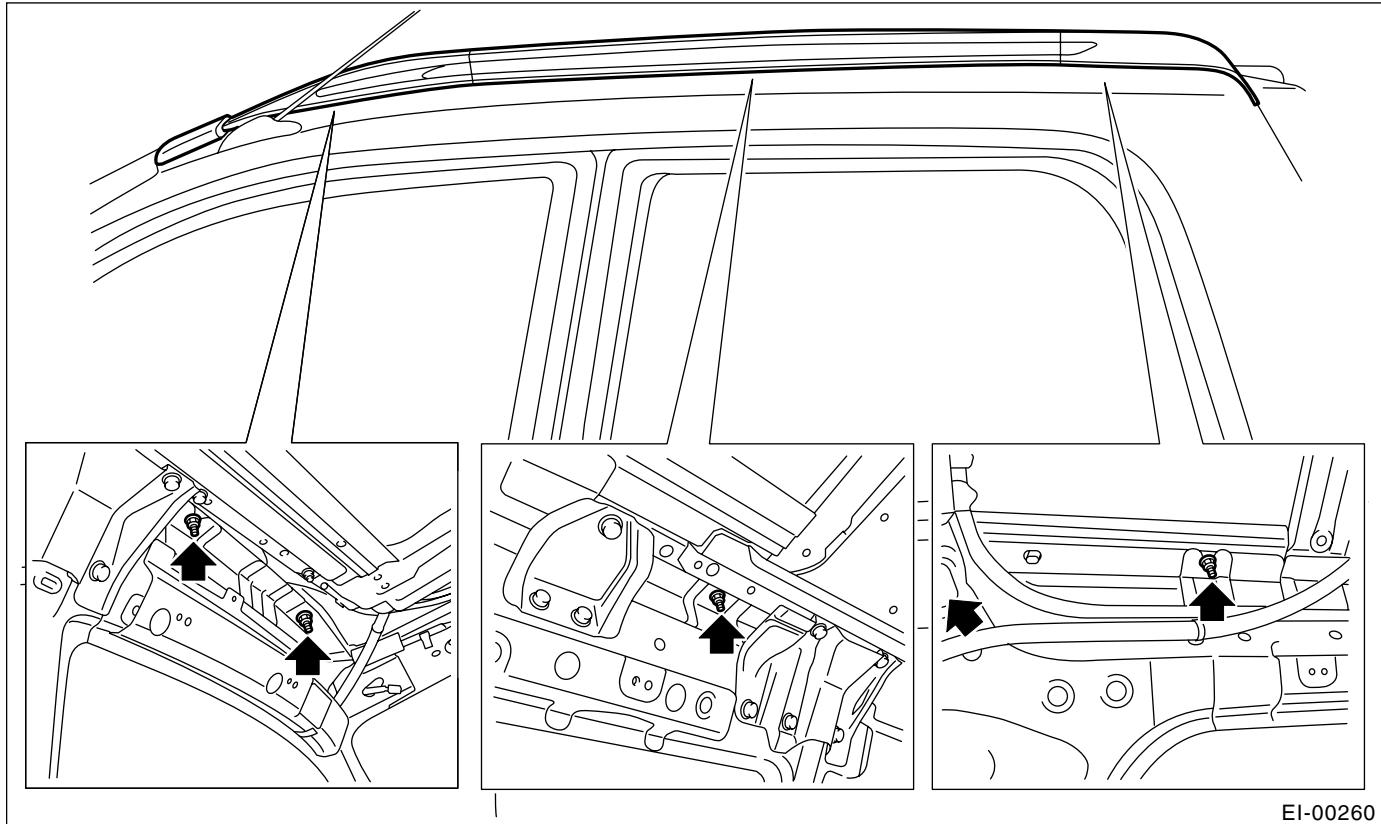

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be careful not to scratch body panels with roof rail stud bolts when installing them.