

16.Diagnostics for Engine Starting Failure

A: PROCEDURE

1. Check the fuel level.

DIAGNOSTICS FOR ENGINE STARTING FAILURE

ENGINE (DIAGNOSTICS)

C: CONTROL MODULE POWER SUPPLY AND GROUND LINE

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H4DOTC)-44, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H4DOTC)-36, OPERATION, Inspection Mode.>.

WIRING DIAGRAM:

DIAGNOSTICS FOR ENGINE STARTING FAILURE

ENGINE (DIAGNOSTICS)

DIAGNOSTICS FOR ENGINE STARTING FAILURE

ENGINE (DIAGNOSTICS)

D: IGNITION CONTROL SYSTEM

CAUTION:

