


## 6. Muffler

### A: REMOVAL

1) Separate the muffler from rear exhaust pipe.

**CAUTION:**

Be careful, the exhaust pipe is hot.

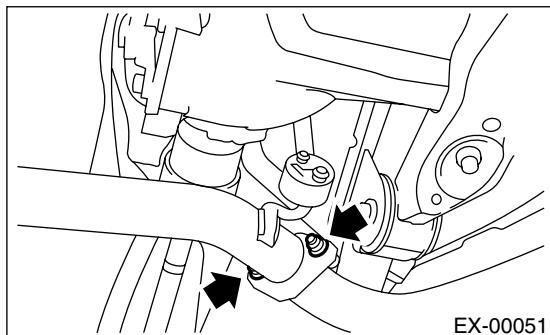

2) Remove the rubber cushions, and detach the muffler.



**CAUTION:**

Be careful not to drop the muffler during removal.

**NOTE:**

To facilitate removal, apply a coat of SUBARU CRC to the mating area of rubber cushions in advance.

**SUBARU CRC (Part No. 004301003)**

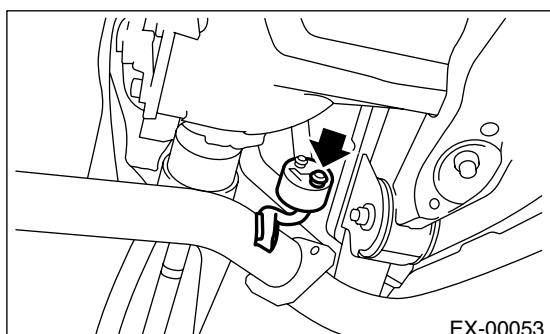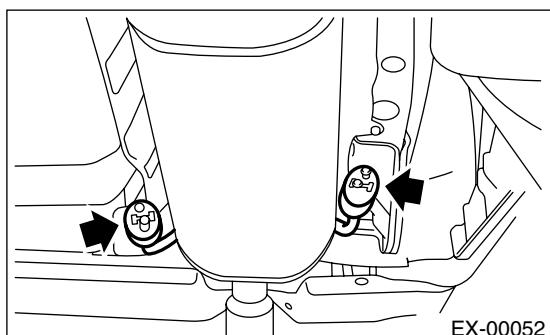

### B: INSTALLATION


Install in the reverse order of removal.

**NOTE:**

Replace the gasket and self-locking nut with a new one.

**Tightening torque:**

**48 N·m (4.9 kgf·m, 35.4 ft-lb)**

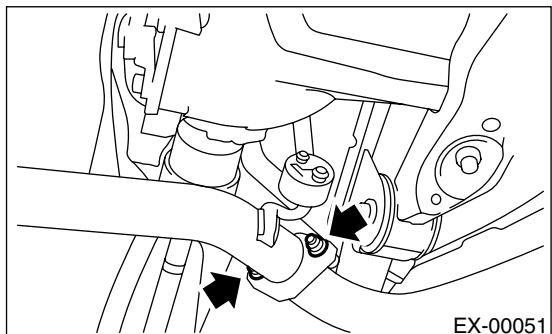

### C: INSPECTION

1) Make sure there are no exhaust leaks from connections and welds.

2) Make sure there are no holes or rusting.

3) Make sure the cushion rubber is not worn or cracked.

## **MUFFLER**

**EXHAUST**

---

**MEMO:**