

REAR EXHAUST PIPE

EXHAUST


5. Rear Exhaust Pipe

A: REMOVAL

- 1) Lift-up the vehicle.
- 2) Separate the rear exhaust pipe from center exhaust pipe.

CAUTION:


Be careful, the exhaust pipe is hot.

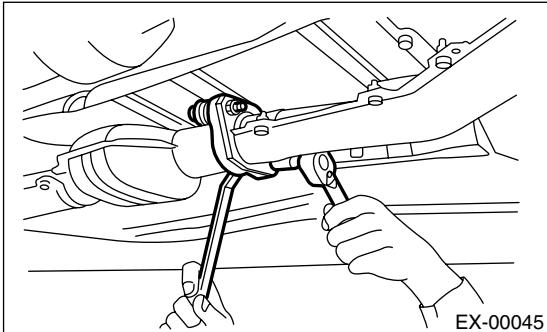

- 3) Separate the rear exhaust pipe from muffler.

CAUTION:

Be careful not to pull down the rear exhaust pipe.

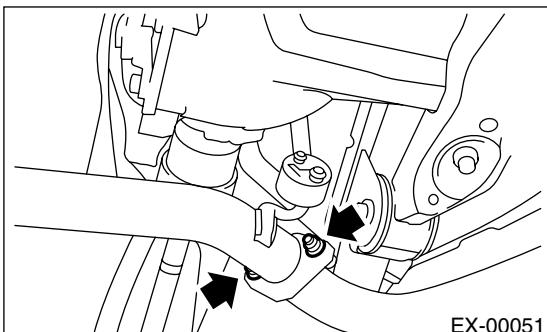

- 4) Remove the rear exhaust pipe.

B: INSTALLATION


NOTE:

Replace the gaskets with new ones.

- 1) Install the rear exhaust pipe to muffler.

Tightening torque:


48 N·m (4.9 kgf·m, 35.4 ft-lb)

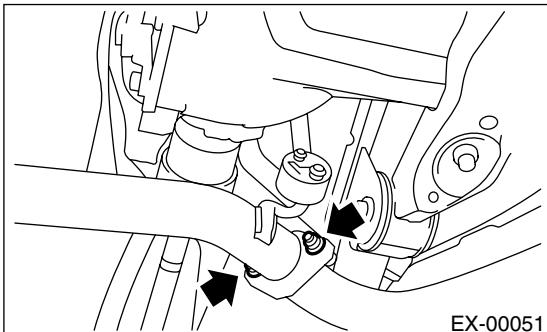

- 2) Install the rear exhaust pipe to center exhaust pipe.

Tightening torque:

18 N·m (1.8 kgf·m, 13.0 ft-lb)

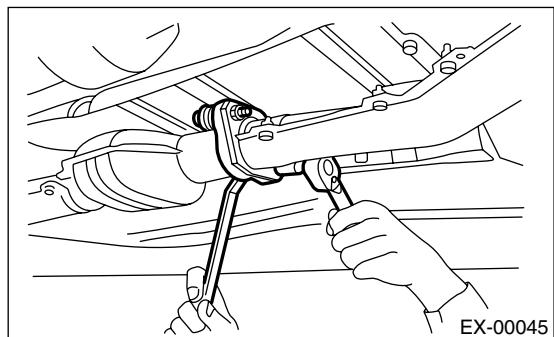

- 3) Lower the vehicle.

C: INSPECTION

- 1) Make sure there are no exhaust leaks from connections and welds.
- 2) Make sure there are no holes or rusting.
- 3) Make sure the cushion rubber is not worn or cracked.