


# ENGINE CONTROL MODULE (ECM)

## FUEL INJECTION (FUEL SYSTEMS)

### 17. Engine Control Module (ECM)

#### A: REMOVAL

- 1) Disconnect the ground cable from battery.

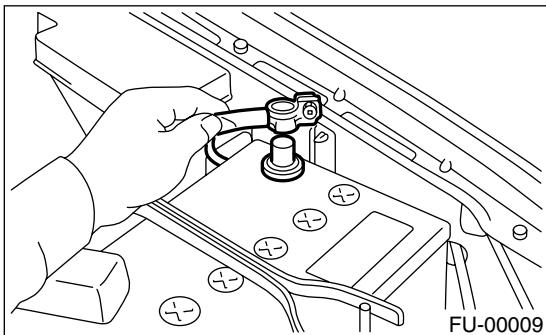


- 2) Remove the lower inner trim of the passenger side.

<Ref. to EI-51, REMOVAL, Lower Inner Trim.>


- 3) Detach the floor mat of the front passenger seat.

- 4) Remove the protect cover.

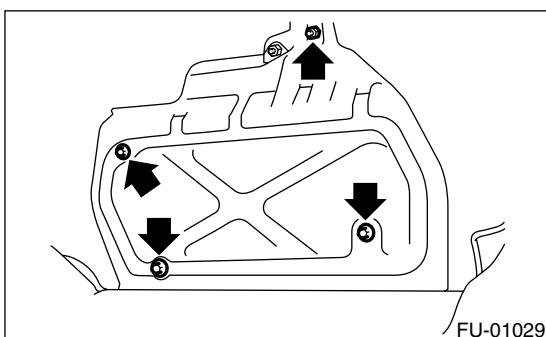

- 5) Remove the nuts (A) which hold ECM to the bracket.

- 6) Remove the clip (B) from the bracket.

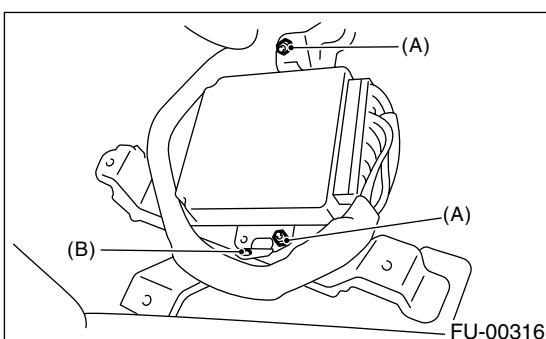

- 7) Disconnect the ECM connectors and take out the ECM.

#### B: INSTALLATION

Install in the reverse order of removal.

##### NOTE:

When replacing ECM, be careful not to use the wrong spec. ECM to avoid any damage to the fuel injection system.