


18.Main Relay

A: REMOVAL


1) Disconnect the ground cable from battery.

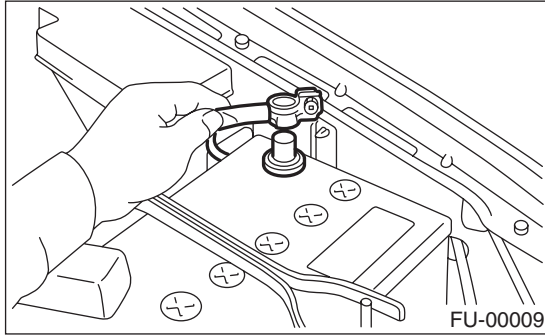

2) Remove the glove box. <Ref. to EI-34, REMOVAL, Glove Box.>

3) Remove the bolt which holds the main relay bracket on the body.

4) Disconnect the connectors from the main relay.

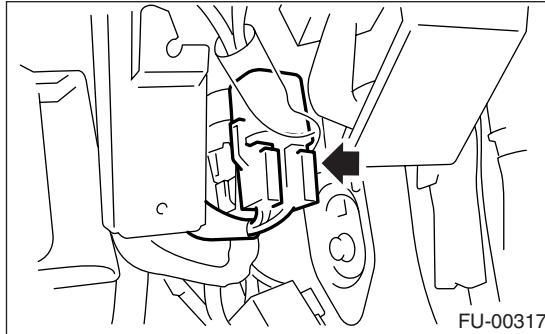

B: INSTALLATION

Install in the reverse order of removal.