


WASTEGATE CONTROL SOLENOID VALVE

FUEL INJECTION (FUEL SYSTEMS)


13. Wastegate Control Solenoid Valve

A: REMOVAL


- 1) Disconnect the ground cable from battery.

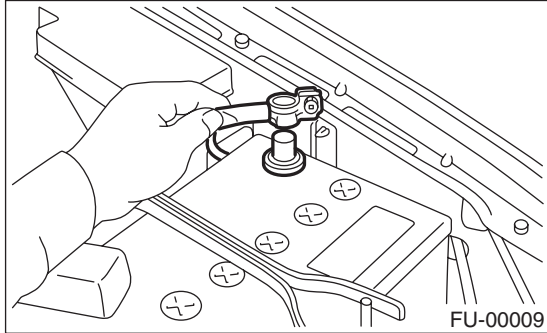


- 2) Disconnect the engine harness connector (A) from bracket.
3) Disconnect the connector (B) from wastegate control solenoid valve.
4) Remove the bracket from body.

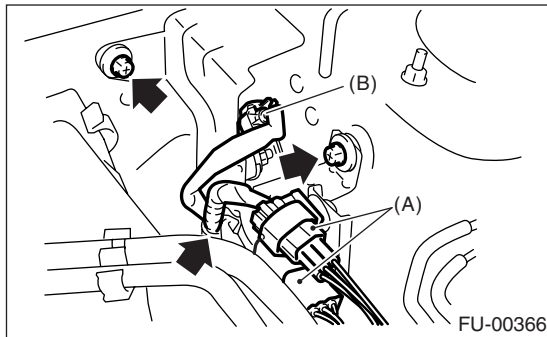

- 5) Disconnect the pressure hoses (C) from wastegate control solenoid valve.

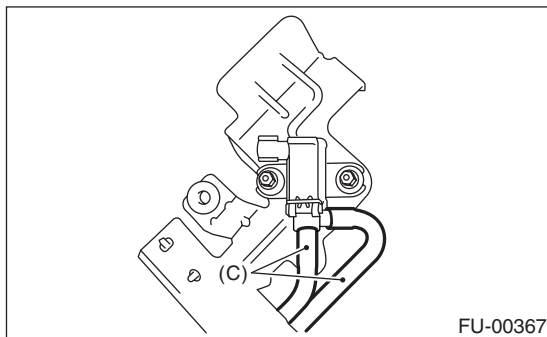

- 6) Remove the wastegate control solenoid valve from bracket.

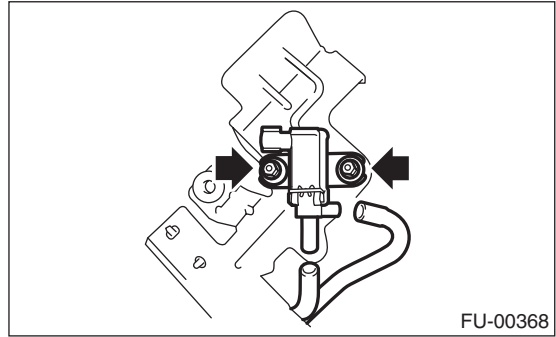

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

6.5 N·m (0.66 kgf-m, 4.8 ft-lb)

