


AIR BYPASS VALVE

INTAKE (INDUCTION)


7. Air Bypass Valve

A: REMOVAL

- 1) Disconnect air bypass hose from air bypass valve.

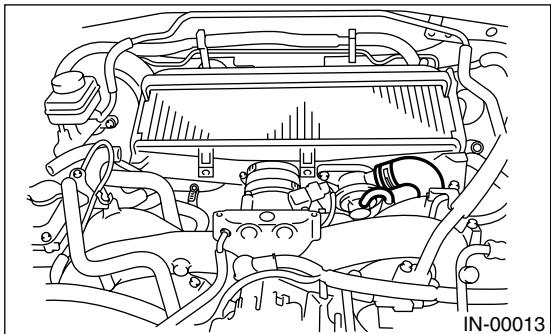

- 2) Remove air bypass valve from intercooler.

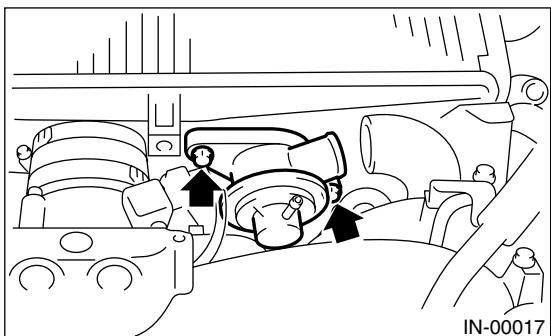

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Be careful pinching of O-ring.

Tightening torque:

16 N·m (1.6 kgf·m, 11.6 ft-lb)

