


4. Intake Duct

A: REMOVAL

- 1) Disconnect the ground cable from battery.

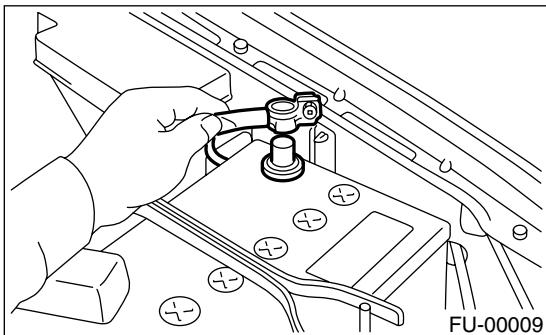


- 2) Remove the intake manifold.

<Ref. to FU(H4DOTC)-15, REMOVAL, Intake Manifold.>

- 3) Remove the sensor, engine harness and fuel pipe attached to intake manifold.

<Ref. to FU(H4DOTC)-20, DISASSEMBLY, Intake Manifold.>

- 4) Remove the intake duct from intake manifold.

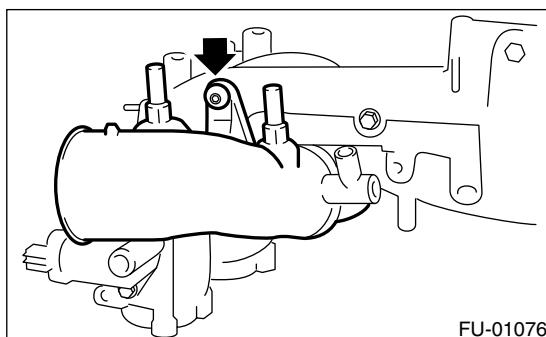

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

19 N·m (1.9 kgf·m, 13.7 ft-lb)

