

21.Intake and Exhaust Valve

A: REMOVAL AND INSTALLATION

For operations related to intake and exhaust valve, refer to "19. Cylinder Head." <Ref. to ME(H4DOTC)-67, REMOVAL, Cylinder Head Assembly.> <Ref. to ME(H4DOTC)-67, INSTALLATION, Cylinder Head Assembly.>