

22.Piston

A: REMOVAL AND INSTALLATION

For operations related to piston, refer to “20. Cylinder Block.” <Ref. to ME(H4DOTC)-74, REMOVAL, Cylinder Block.> <Ref. to ME(H4DOTC)-78, INSTALLATION, Cylinder Block.>