

# General Description

STARTING/CHARGING SYSTEMS

---

## 1. General Description

### A: SPECIFICATION

Specifications for the turbo model are included in the SC(H4SO) section. <Ref. to SC(H4SO)-2, General Description.>

# ENGINE (DIAGNOSTICS)

## *EN(H4DOTC)(diag)*

---

	<b>Page</b>
1. Basic Diagnostic Procedure .....	2
2. Check List for Interview .....	3
3. General Description .....	5
4. Electrical Component Location .....	8
5. Engine Control Module (ECM) I/O Signal .....	18
6. Engine Condition Data .....	22
7. Data Link Connector .....	23
8. General Scan Tool .....	24
9. Subaru Select Monitor .....	27
10. Read Diagnostic Trouble Code (DTC) .....	35
11. Inspection Mode .....	36
12. Drive Cycle .....	41
13. Clear Memory Mode .....	46
14. Compulsory Valve Operation Check Mode .....	47
15. Malfunction Indicator Light .....	49
16. Diagnostics for Engine Starting Failure .....	53
17. List of Diagnostic Trouble Code (DTC) .....	65
18. Diagnostic Procedure with Diagnostic Trouble Code (DTC) .....	73
19. General Diagnostic Table .....	387