



## 10. Front Sub Sensor

### A: REMOVAL

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 3) Remove the front grille and the front grille side.  
<Ref. to EI-16, REMOVAL, Front Grille.>
- 4) Disconnect the connector from front sub sensor.

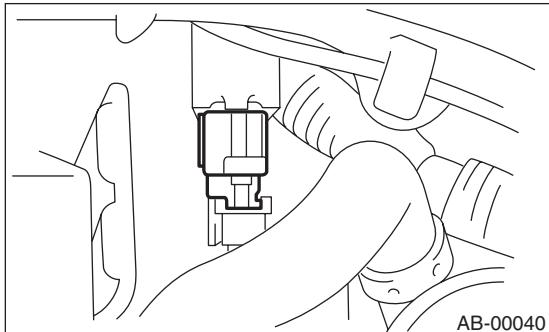

- 5) Loosen the nut and remove the front sub sensor.

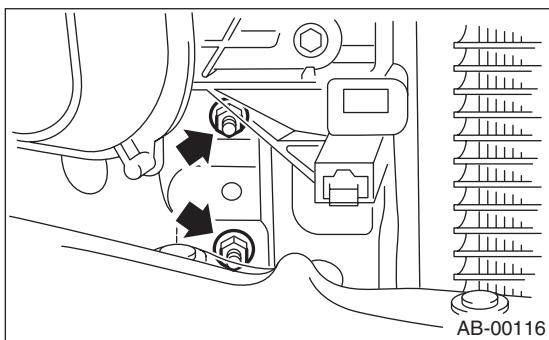

### B: INSTALLATION

Install in the reverse order of removal.

#### CAUTION:

- Do not reuse the bolts and nuts.
- Always use new bolts and nuts.

#### *Tightening torque:*

*Refer to “COMPONENT” of “General Description”. <Ref. to AB-2, SRS AIRBAG, COMPONENT, General Description.>*

### C: INSPECTION

Check for the following, and replace the damaged parts with new parts.

- Front sub sensor, mounting bracket and connector are damaged.
- Airbag is deployed.

## **Front Sub Sensor**

AIRBAG SYSTEM

---