


## 2. Airbag Connector

### A: PROCEDURE

#### 1. POWER SUPPLY

##### 1) How to disconnect:

(1) With the lock arm (A) pushed in, move the connector in the direction of arrow.

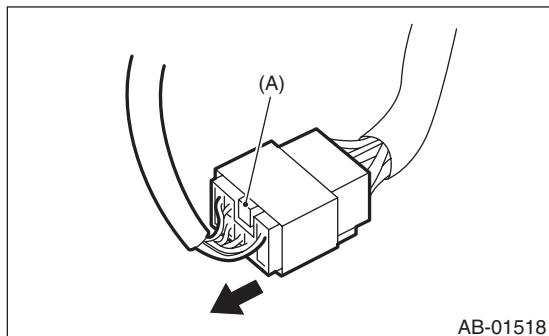


AB-01518

##### CAUTION:

When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.

##### 2) How to connect:

Holding the connector (A), and push it in carefully until a clicking sound is heard.

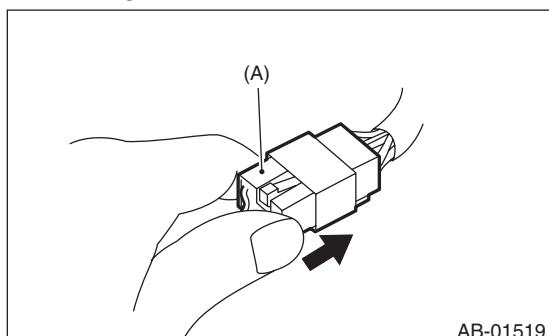

AB-01519


##### CAUTION:

Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.

#### 2. DRIVER'S AIRBAG (BETWEEN AIRBAG HARNESS AND ROLL CONNECTOR) AND SIDE AIRBAG

##### 1) How to disconnect:

(1) Push the lock arm (A).  
(2) With the lock arm (A) pushed in, move the slide lock (B) in the direction of arrow.

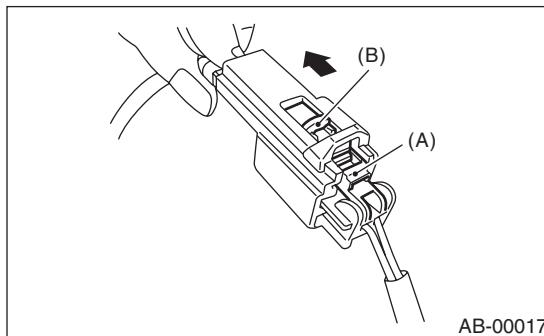


AB-00017

(3) With the slide lock pulled, release the lock arm (return to original position) and disconnect the connector.

##### CAUTION:

When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.

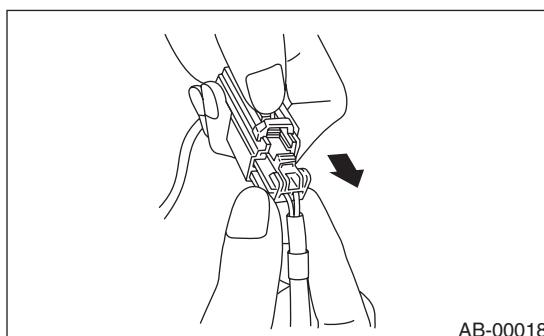


AB-00018

##### 2) How to connect:

Holding the connector, push it in securely until a clicking sound is heard.

##### CAUTION:

Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.

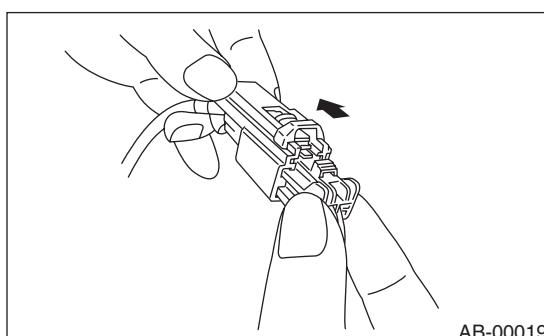


AB-00019


### 3. DRIVER'S AIRBAG MODULE AND PRETENSIONER

#### 1) How to disconnect:

(1) Using a flat tip screwdriver, pull the push lock upward to unlock.

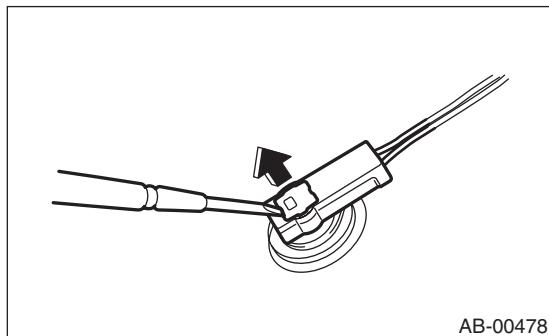

(2) Pull the connector to disconnect from driver's airbag module assembly or retractor assembly.

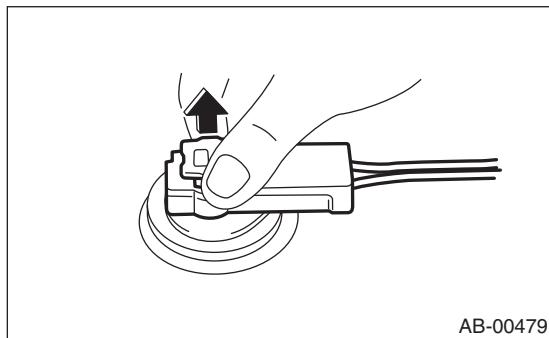


#### 2) How to connect:

Connect the connector in the reverse order of disconnecting. At this time, be sure to insert the push lock until a clicking sound is heard.

#### CAUTION:

- Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.
- Be sure to push the push lock in securely.

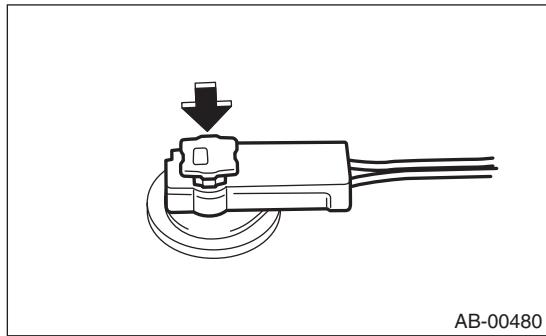


### 4. FRONT SUB-SENSOR AND SIDE AIRBAG SENSOR

#### 1) How to disconnect:

Holding outer part (A), pull it in the direction of arrow.

#### CAUTION:

When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.

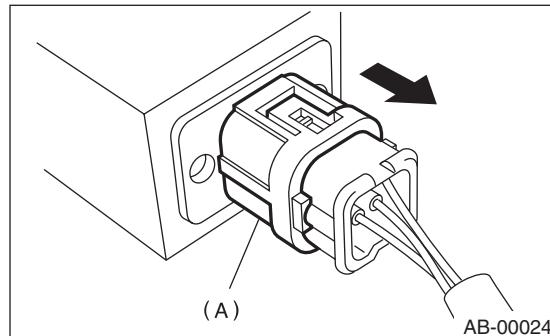

#### 2) How to connect:


Holding the connector, push it in securely until a clicking sound is heard.

#### NOTE:

You cannot connect the connector when the push lock is in the lock position. Move the push lock to the release position to connect the connector.

#### CAUTION:


- Do not touch the outer section since outer side (A) will move back.
- Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.

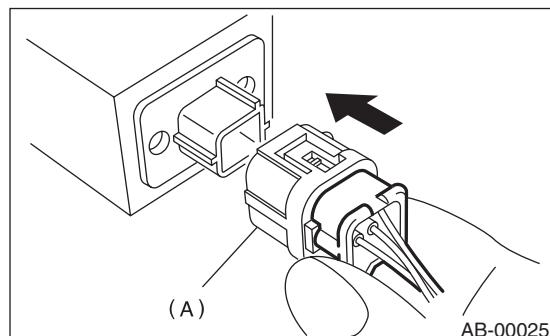


### 5. PASSENGER'S AIRBAG

#### 1) How to disconnect:

(1) Move the slide lock (A) in the direction of arrow.

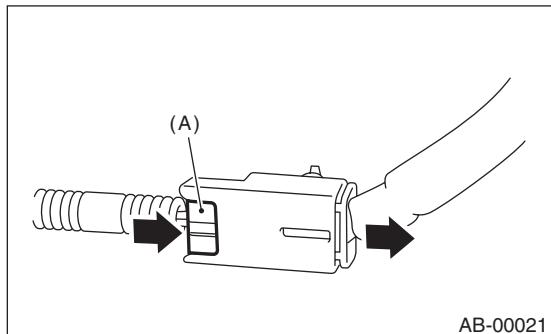

(2) With the slide lock pushed, pull it in the direction of arrow and disconnect the connector.

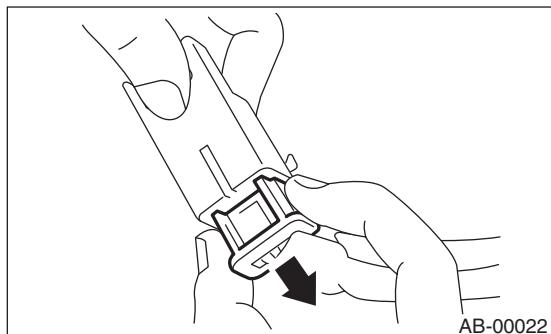

**CAUTION:**

**When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.**

2) How to connect:

Holding the connector, push it in securely until a clicking sound is heard.

**CAUTION:**

**Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.**

