

Basic Diagnostic Procedure

AIRBAG SYSTEM (DIAGNOSTICS)

1. Basic Diagnostic Procedure

A: PROCEDURE

Step	Check	Yes	No
1 CHECK AIRBAG WARNING LIGHT. Turn the ignition switch to ON.	Does airbag warning light turn on?	Go to step 2. <Ref. to AB(diag)-36, Airbag Warning Light Failure.>Go to "Airbag Warning Light Failure".	
2 READ DTC. <Ref. to AB(diag)-28, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.>	Is the normal code being detected?	Finish the diagnosis. Go to step 3.	
3 PERFORM DIAGNOSIS. 1) Judge the possible cause from "List of Diagnostic Trouble Code" <Ref. to AB(diag)-40, List of Diagnostic Trouble Code (DTC).> 2) Inspect the DTC using "List of Diagnostic Trouble Code (DTC)". 3) Repair the trouble cause. 4) Perform the Clear Memory Mode. <Ref. to AB(diag)-34, Clear Memory Mode.> 5) Perform the Inspection Mode. <Ref. to AB(diag)-33, Inspection Mode.> 6) Read any other DTCs displayed.	Is DTC being displayed?	Perform the procedure 1) to 5) in step 3. Finish the diagnosis.	