


# Electrical Component Location

## AIRBAG SYSTEM (DIAGNOSTICS)

### 4. Electrical Component Location

#### A: LOCATION

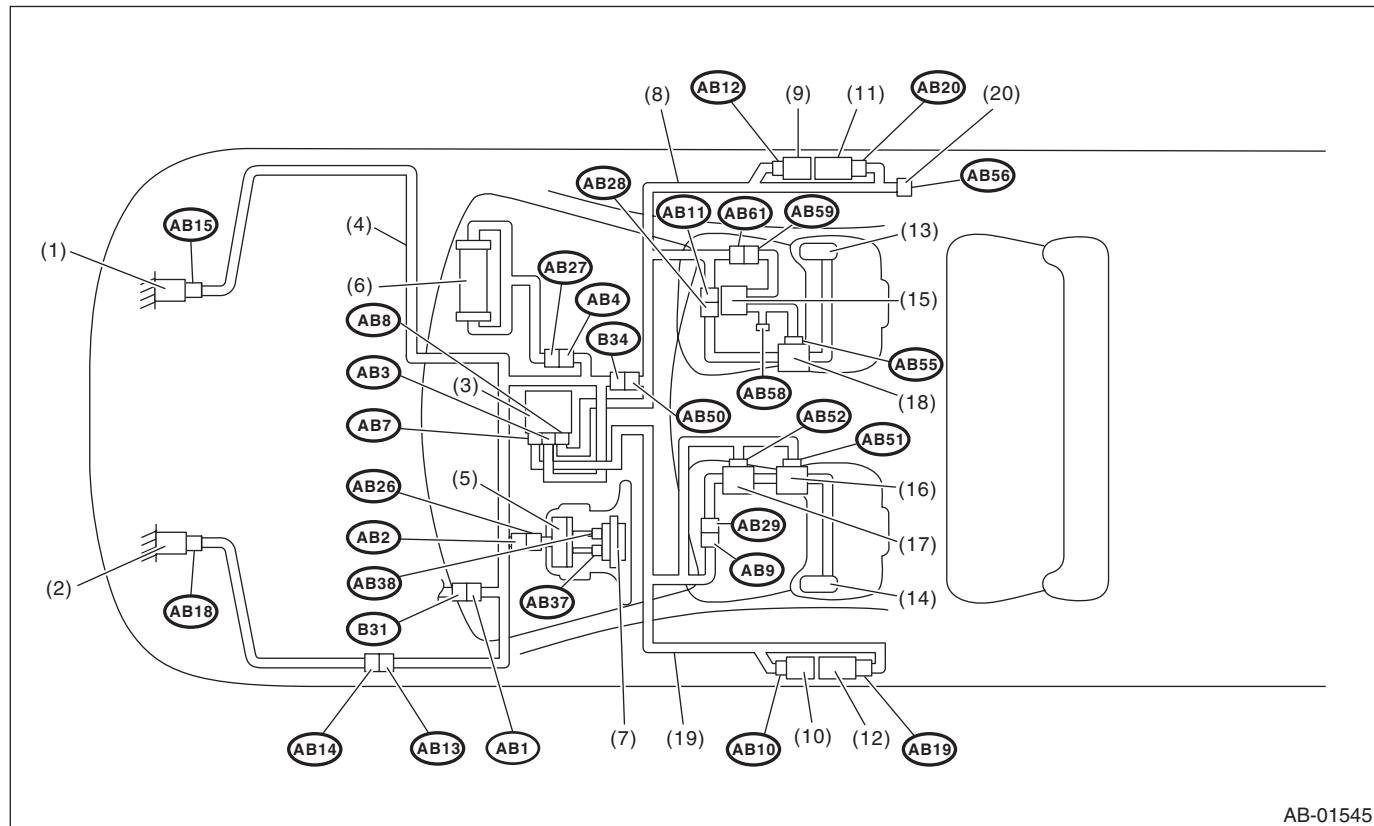

(1) Front sub sensor (RH)	(7) Driver's airbag inflator	(14) Side airbag inflator (LH)
(2) Front sub sensor (LH)	(8) Airbag rear harness (RH)	(15) Occupant detection control module
(3) Airbag control module with built-in safing and electric sensor	(9) Side airbag sensor (RH)	(16) Buckle switch (LH)
(4) Airbag main harness	(10) Side airbag sensor (LH)	(17) Seat position sensor (LH)
(5) Roll connector	(11) Seat belt pretensioner (RH)	(18) Buckle switch (RH)
(6) Passenger's airbag inflator	(12) Seat belt pretensioner (LH)	(19) Airbag rear harness (LH)
	(13) Side airbag inflator (RH)	(20) Belt tension sensor (RH)

Connector No.	(AB1)	(AB2)	(AB3)	(AB4)	(AB7)	(AB8)	(AB9)	(AB10)	(AB11)	(AB12)	(AB13)	(AB14)
Pin	8	4	28	4	12	12	2	4	2	4	2	2
Color	White	Yellow										
Male/Female	Male	Female	Male									

Connector No.	(AB15)	(AB18)	(AB19)	(AB20)	(AB26)	(AB27)	(AB28)	(AB29)	(AB37)	(AB38)	(AB50)	(AB51)
Pin	2	2	2	2	4	4	2	2	2	2	2	2
Color	Yellow	Yellow	Black	Black	Yellow	Yellow	Yellow	Yellow	Orange	Black	Yellow	Yellow
Male/Female	Female	Female	Female	Female	Male	Male	Male	Male	Female	Female	Male	Female

Connector No.	(AB52)	(AB55)	(AB56)	(AB58)	(AB59)	(AB61)	(AB62)					
Pin	2	2	3	3	6	6	18					
Color	Yellow	Black	Brown	Gray	Gray	Gray	White					
Male/Female	Female	Female	Female	Female	Male	Female	Female					