

2. Cruise Control Unit

A: NOTE

The control of cruise control system is carried out in engine control module (ECM).

B: REMOVAL

- SOHC MODEL <Ref. to FU(H4SO)-41, REMOVAL, Engine Control Module (ECM).>
- DOHC MODEL <Ref. to FU(H4DOTC)-46, REMOVAL, Engine Control Module (ECM).>

C: INSTALLATION

- SOHC MODEL <Ref. to FU(H4SO)-41, INSTALLATION, Engine Control Module (ECM).>
- DOHC MODEL <Ref. to FU(H4DOTC)-46, INSTALLATION, Engine Control Module (ECM).>