


3. Cruise Control Command Switch

A: REMOVAL


WARNING:

Before servicing, be sure to read the notes in the "AB" section for proper handling of the driver's airbag module. <Ref. to AB-4, CAUTION, General Description.>


- 1) Set the front wheels in straight ahead position.
- 2) Turn the ignition switch to OFF.
- 3) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 4) Using TORX® bit T30 (1), loosen the two TORX® bolts which secure driver's airbag module.

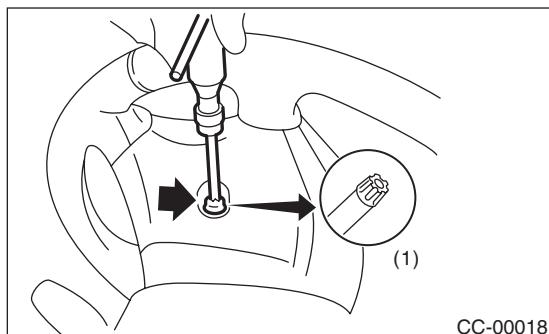

- 5) Disconnect the airbag module connector on back of the airbag module.
- 6) Remove the steering wheel. <Ref. to PS-13, REMOVAL, Steering Wheel.>
- 7) Remove the four screws to remove the lower cover from steering wheel.

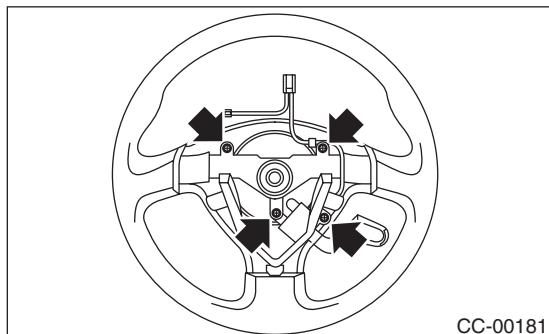

- 8) Remove one screw to remove the cruise control command switch from lower cover.

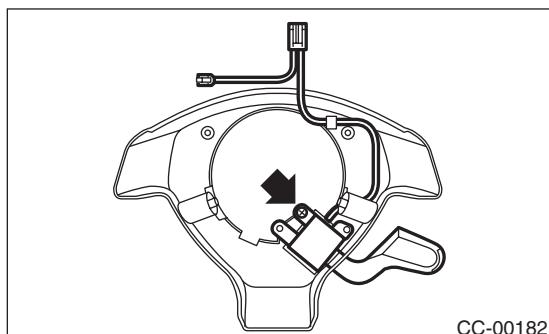


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the cruise control command switch resistance.

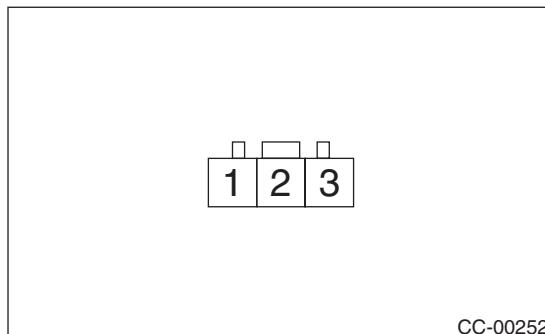

| Switch | Position | Terminal No. | Standard value |
|---|----------|--------------|----------------|
| CANCEL SET/COAST RESUME/ ACCEL | All OFF | 2 and 3 | Approx. 4 kΩ |
| CANCEL | ON | 2 and 3 | Less than 1 Ω |
| SET/COAST | ON | 2 and 3 | Approx. 250 Ω |
| RESUME/ ACCEL | ON | 2 and 3 | Approx. 1500 Ω |
| MAIN | OFF | 1 and 2 | 1 MΩ or more |
| | ON | 1 and 2 | Less than 1 Ω |

If NG, replace the cruise control command switch.