

## 2. Radio System

### A: WIRING DIAGRAM

#### 1. RADIO BODY

<Ref. to WI-133, WIRING DIAGRAM, Audio System.>

### B: INSPECTION

Symptom	Repair order
No power coming in. (No display and no sound from speakers)	<ol style="list-style-type: none"><li>1. Check the fuse and power supply for radio.</li><li>2. Check the radio ground.</li><li>3. Remove the radio for repair.</li></ol>
A specific speaker does not operate.	<ol style="list-style-type: none"><li>1. Check the speaker.</li><li>2. Check the output circuit between radio and speaker.</li></ol>
Radio generates noise with engine running.	<ol style="list-style-type: none"><li>1. Check the radio ground.</li><li>2. Check the generator.</li><li>3. Check the ignition coil.</li><li>4. Remove the radio for repair.</li></ol>
Volume is low in AM and FM modes or interference noise occurs.	<ol style="list-style-type: none"><li>1. Check the antenna.</li><li>2. Check the antenna amplifier.</li><li>3. Check the noise suppressor.</li><li>4. Check the radio ground.</li><li>5. Remove the radio for repair.</li></ol>