


## 6. Rear Speaker

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the rear door trim. <Ref. to EI-34, RE-  
MOVAL, Rear Door Trim.>
- 3) Remove the rear speaker mounting screws.

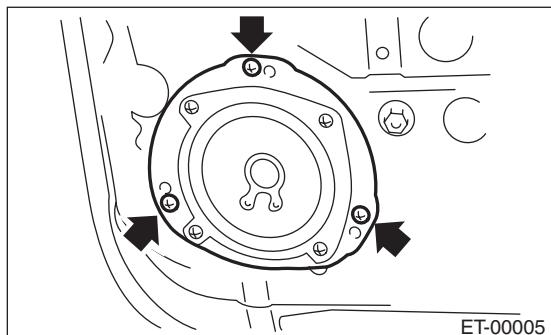

- 4) Disconnect the harness connector and remove the rear speaker.

### B: INSTALLATION

Install in the reverse order of removal.