


2. Front Hood


A: REMOVAL

- 1) Open the front hood to remove the washer nozzles.
- 2) Release the clips to remove the front hood insulator.

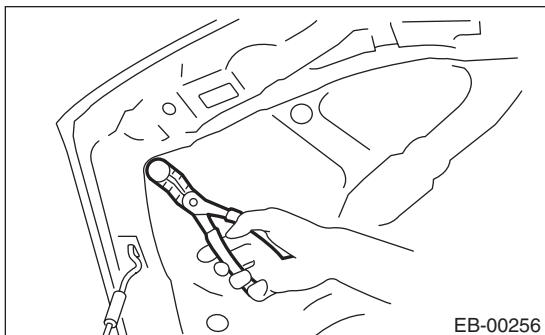

EB-00256

- 3) Remove the bolts to disconnect the hood from hinges.

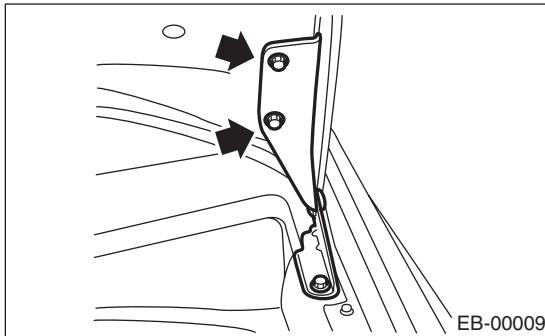

EB-00009

B: INSTALLATION


- 1) Install in the reverse order of removal.
- 2) Adjust the clearance between front hood panel and front fender panel. Clearance must be equal at both sides.

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to EB-3, FRONT HOOD, COMPONENT, General Description.>


C: ADJUSTMENT

- 1) Use a hinge mounting holes to align the front hood longitudinally and laterally.

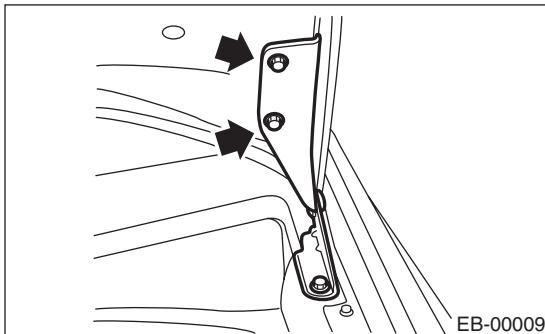

EB-00009

- 2) Adjust the height at the front end of front hood. <Ref. to SL-39, ADJUSTMENT, Front Hood Lock Assembly.>
- 3) Rotate the front hood buffer to adjust lateral height.

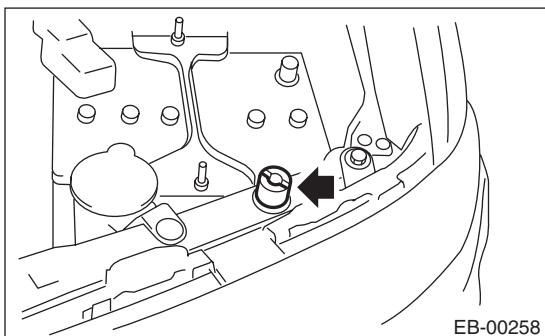

EB-00258