


## 9. Rear Gate Garnish

### A: REMOVAL

- 1) Remove the rear gate trim. <Ref. to EI-46, REMOVAL, Rear Gate Trim.>
- 2) Remove the 5 flange nuts from the rear gate panel inner side (vehicle side).
- 3) Remove the license plate light assembly connector from the rear gate panel inner side (luggage compartment side).
- 4) Close the gate and then remove the rear gate garnish assembly by pulling it manually.

**CAUTION:**

**Be careful not to pull by force. It may damage the clip and license plate light harness.**

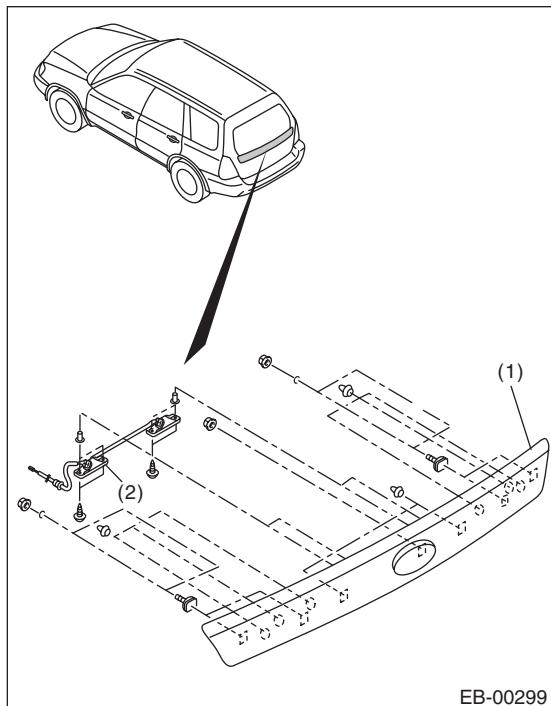

(1) Rear garnish ASSY

(2) License plate light

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Make sure the rear gate garnish is not greatly scratched or cracked.