


General Description

EXTERIOR/INTERIOR TRIM

1. General Description

A: COMPONENT

1. UNDER COVER

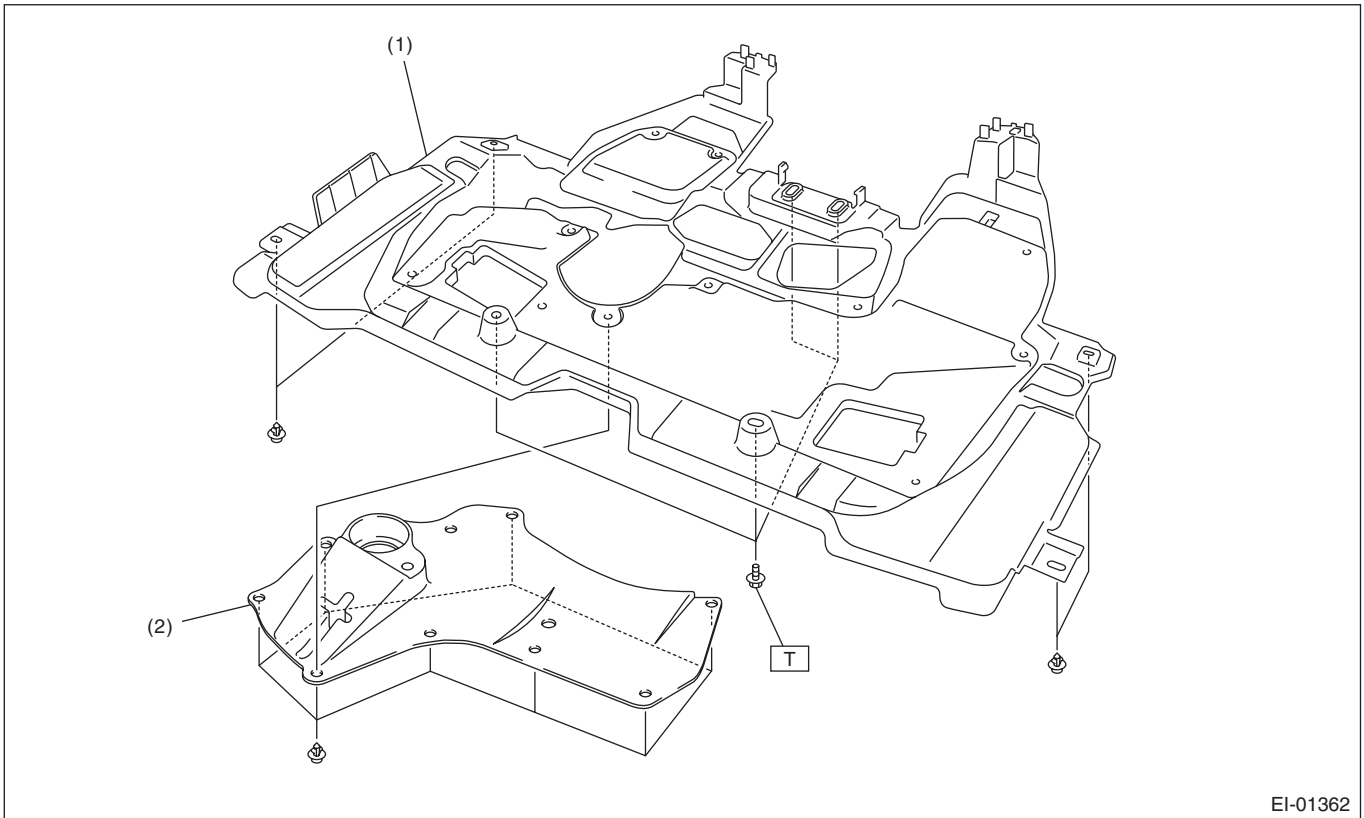


(1) Front under cover

(2) Service hole cover

Tightening torque: N·m (kgf-m, ft-lb)

T: 18 (1.84, 13.3)


2. HEAT SHIELD COVER

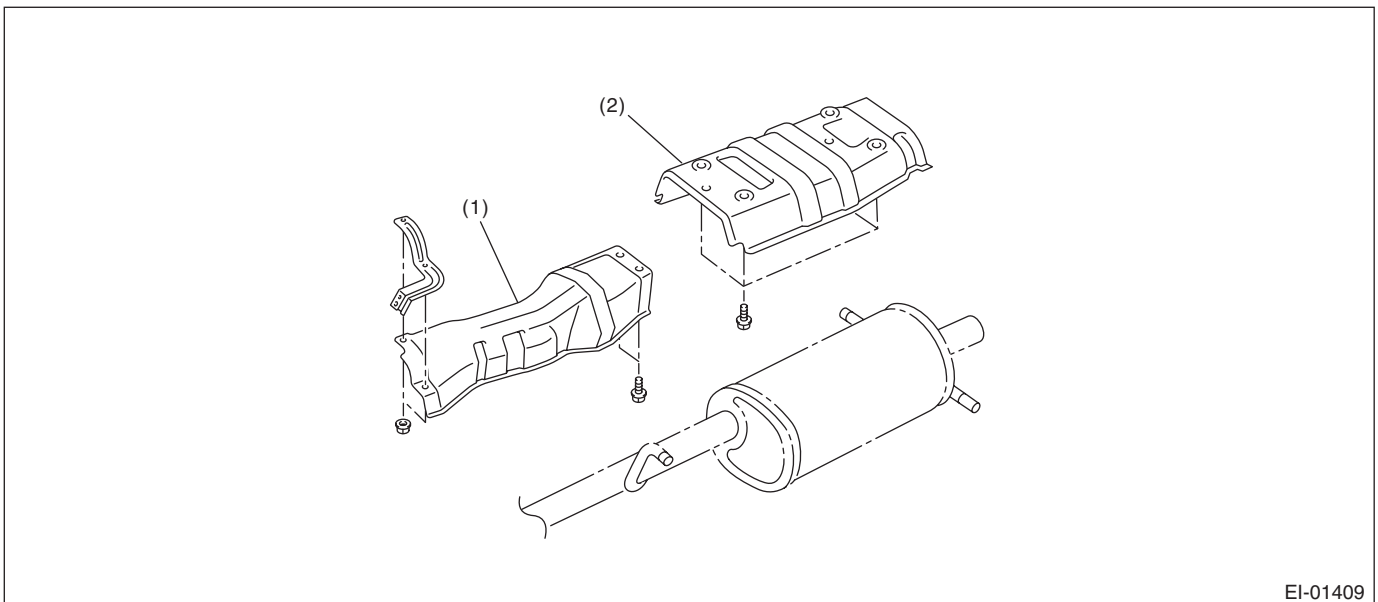

(1) Center heat shield cover

(2) Rear heat shield cover

3. FRONT BUMPER

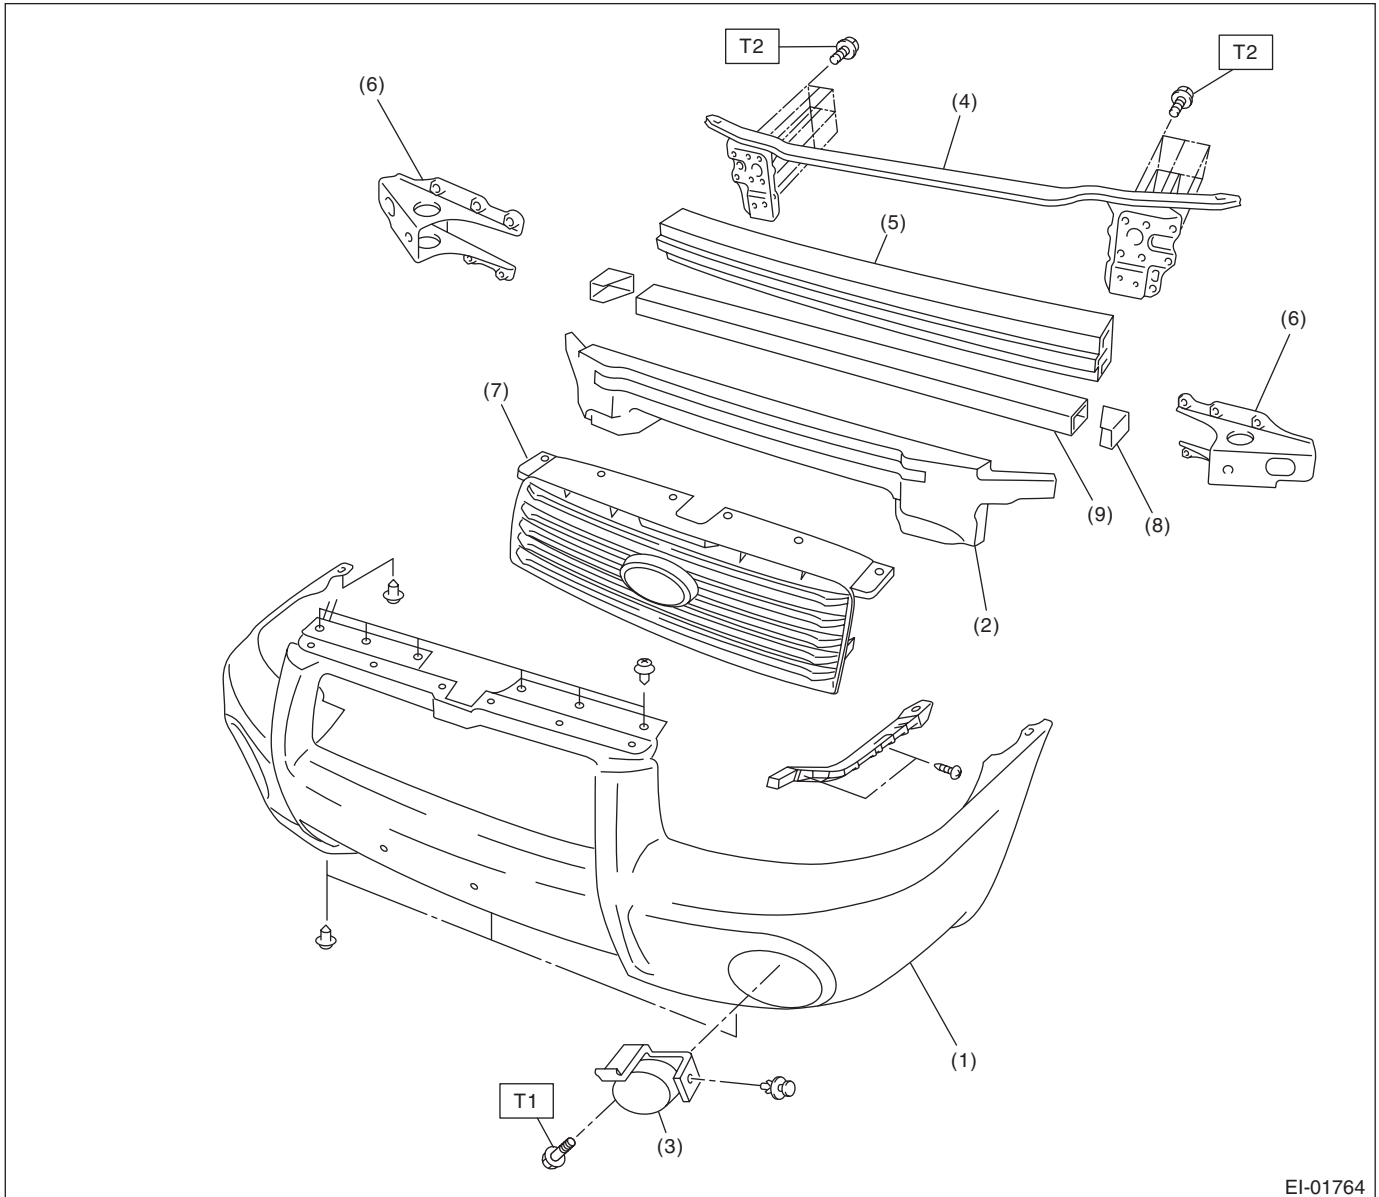

EI-01764

- | | |
|-----------------|------------------------------|
| (1) Bumper face | (6) Side bracket |
| (2) E/A foam | (7) Front grille |
| (3) Fog light | (8) Lower beam reinforcement |
| (4) Upper beam | (9) Lower beam |
| (5) Main beam | |

Tightening torque: N·m (kgf-m, ft-lb)


T1: 7.5 (0.76, 5.53)

T2: 70 (7.1, 51)

General Description

EXTERIOR/INTERIOR TRIM

4. REAR BUMPER

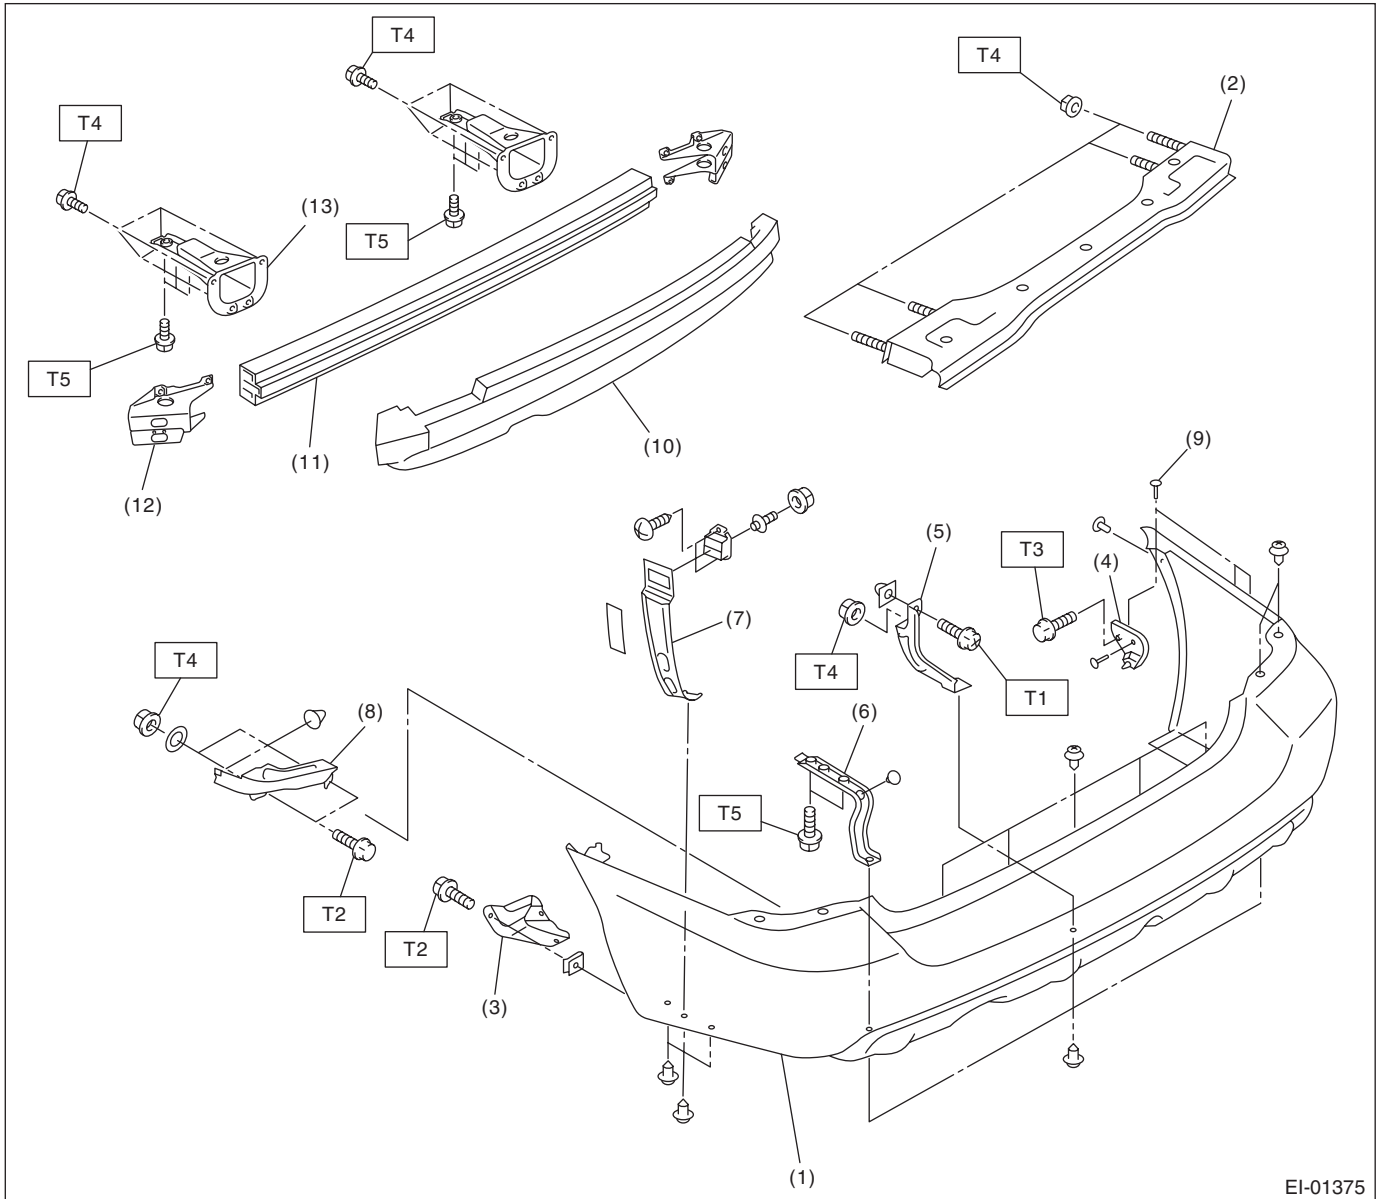

EI-01375

- | | |
|------------------------------------|---------------------------------|
| (1) Bumper face | (8) Rear bumper upper beam side |
| (2) Rear bumper upper beam | (9) Rivet |
| (3) Cover rear arch | (10) E/A foam |
| (4) Bracket side rear bumper front | (11) Main beam |
| (5) Bracket center | (12) Side bracket |
| (6) Stay COMPL | (13) Bumper stay |
| (7) Bracket bumper side rear ASSY | |

Tightening torque:N·m (kgf-m, ft-lb)

T1: 1.8 (0.18, 1.3)


T2: 4.4 (0.45, 3.26)

T3: 7.4 (0.75, 5.46)

T4: 32 (3.3, 24)

T5: 93 (9.5, 68.7)

5. MUD GUARD

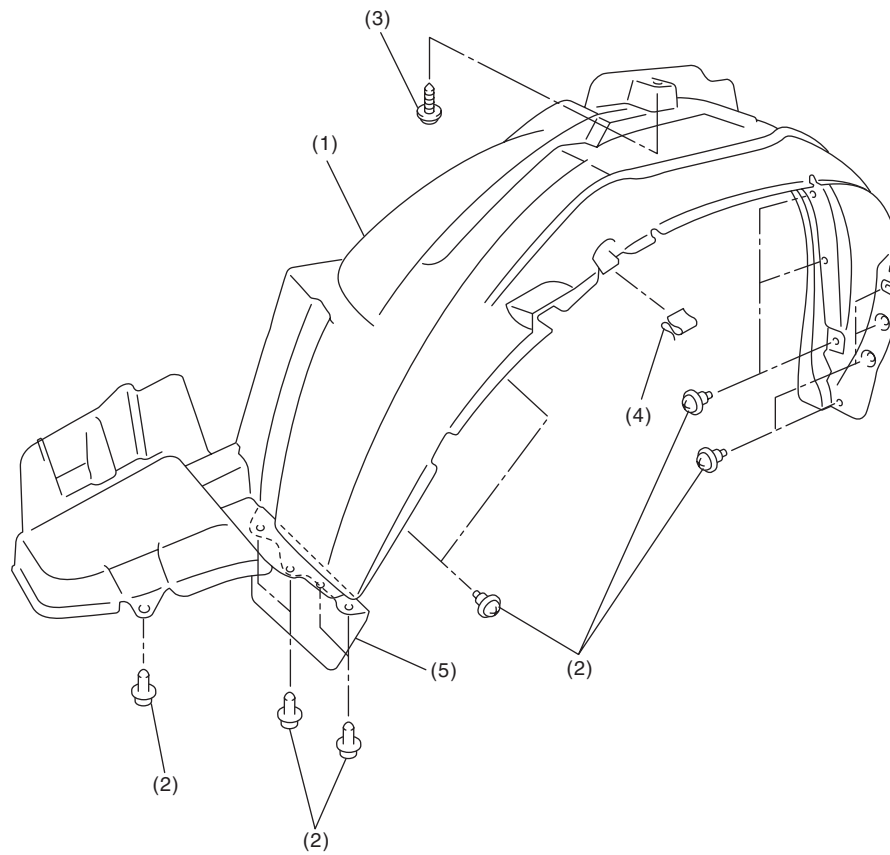

EI-00938

(1) Mud guard

(2) Clip

(3) Screw


(4) Clip (S-shaped)

(5) Air flap

General Description

EXTERIOR/INTERIOR TRIM

6. COWL PANEL

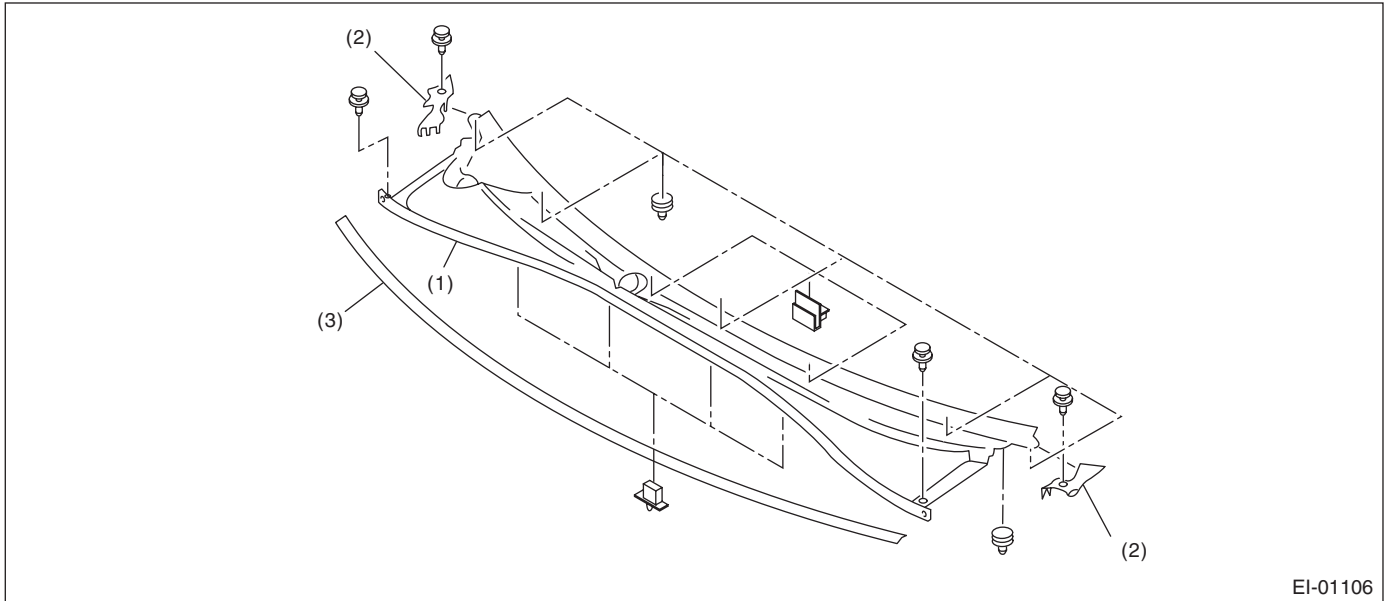


EI-01106

(1) Cowl panel

(2) Cowl panel side

(3) Seal

7. SIDE SILL SPOILER

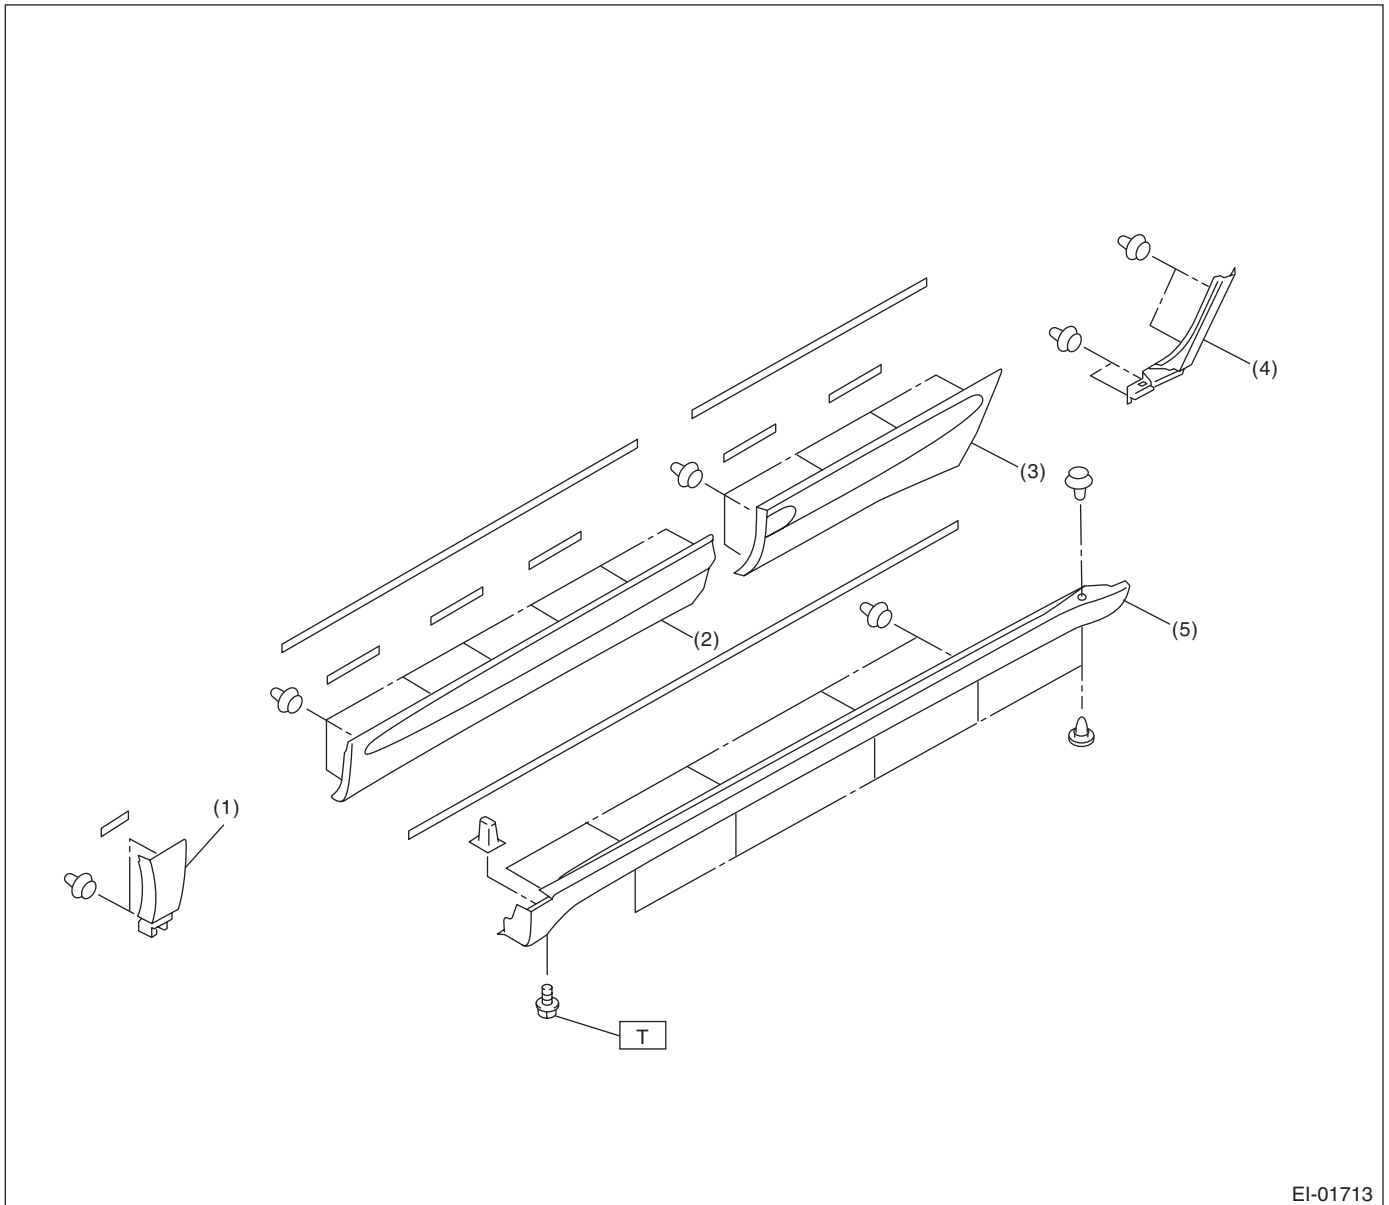

EI-01713

- (1) Side garnish (Front fender)
- (2) Side garnish (Front door)
- (3) Side garnish (Rear door)

- (4) Side garnish (Rear quarter)
- (5) Side garnish (Side sill)


Tightening torque: N·m (kgf-m, ft-lb)

T: 2 (0.20, 1.46)

General Description

EXTERIOR/INTERIOR TRIM

8. ROOF RAIL

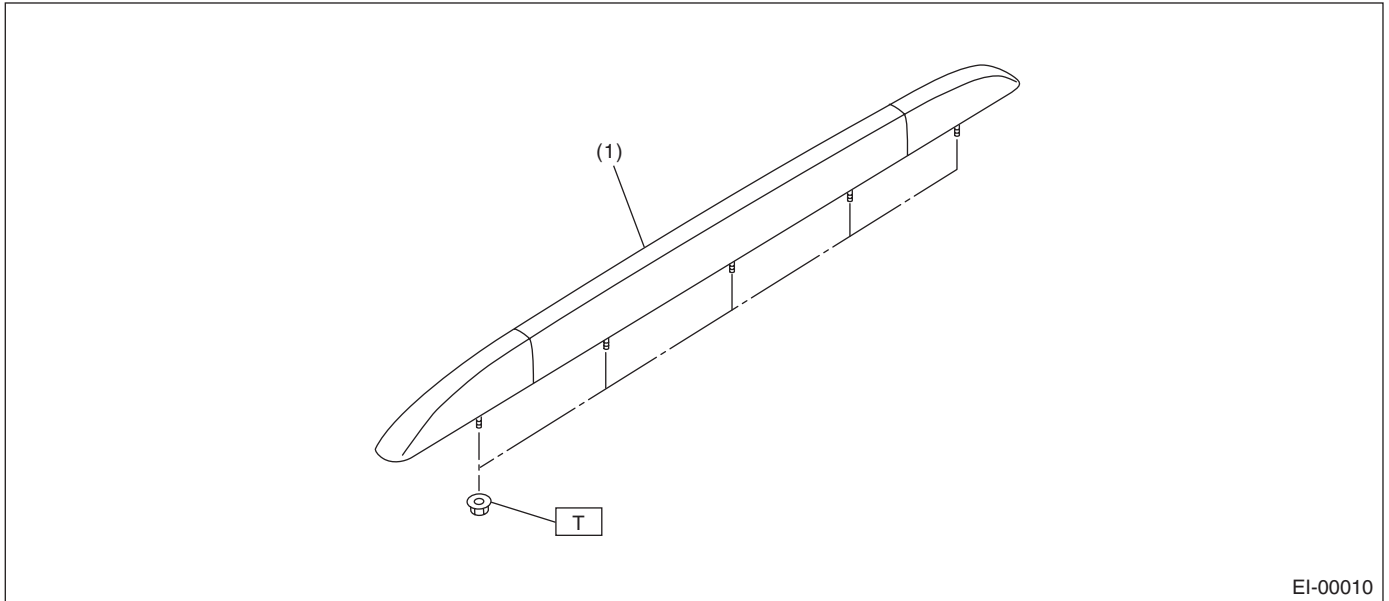


EI-00010

(1) Roof rail

Tightening torque: N·m (kgf-m, ft-lb)

T: 7.5 (0.76, 5.53)

9. DOOR TRIM

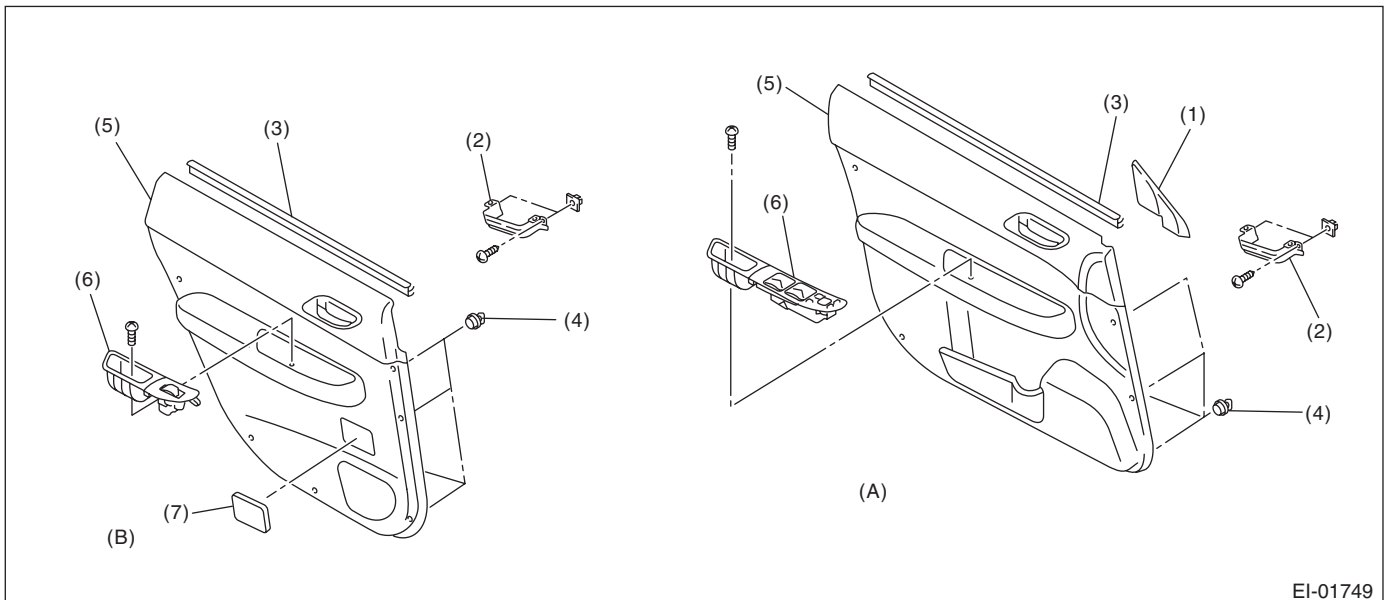

EI-01749

(A) Front door trim

(B) Rear door trim

(1) Gusset cover

(4) Clip

(6) Power window switch cover


(2) Bracket

(5) Trim panel

(7) Cover

(3) Upper weather strip

10.REAR GATE TRIM

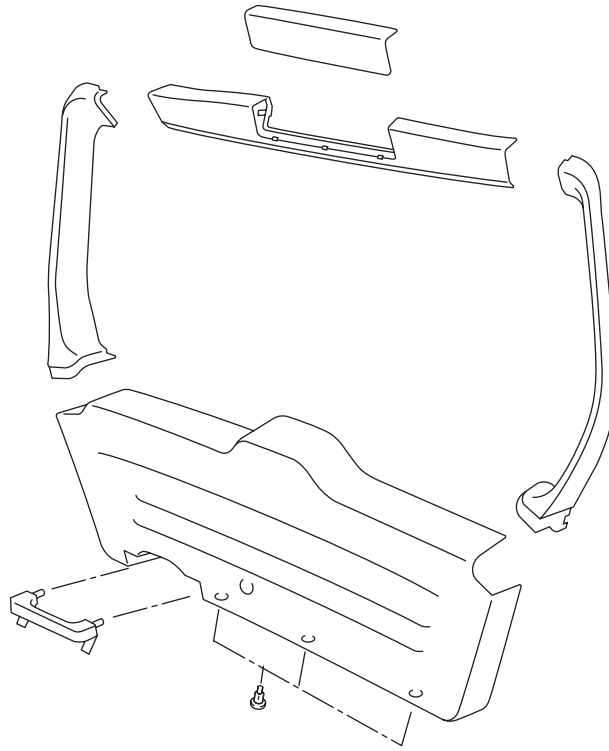


EI-00012

General Description

EXTERIOR/INTERIOR TRIM


11.CONSOLE BOX

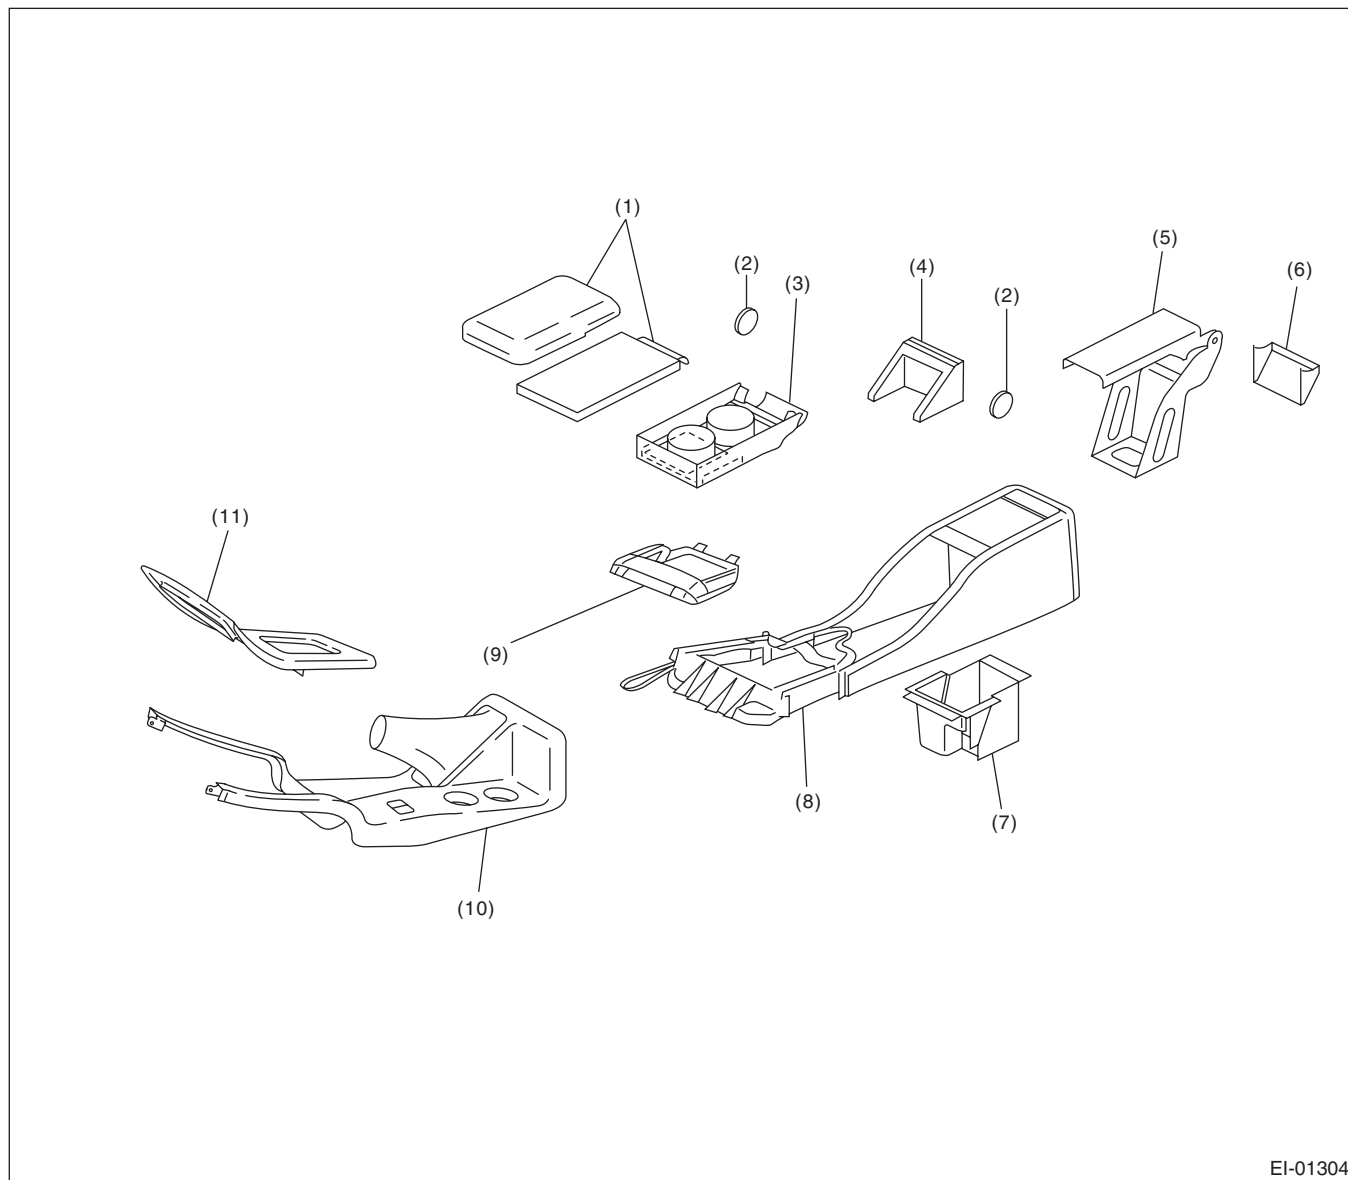

EI-01304

- | | | |
|-----------------------|----------------------|--------------------------|
| (1) Arm cover | (5) Armrest frame | (9) Console lid and tray |
| (2) Hinge cover | (6) Hinge rear cover | (10) Console cover |
| (3) Cup holder | (7) Console pocket | (11) Front cover |
| (4) Hinge front cover | (8) Console box | |

12. INSTRUMENT PANEL

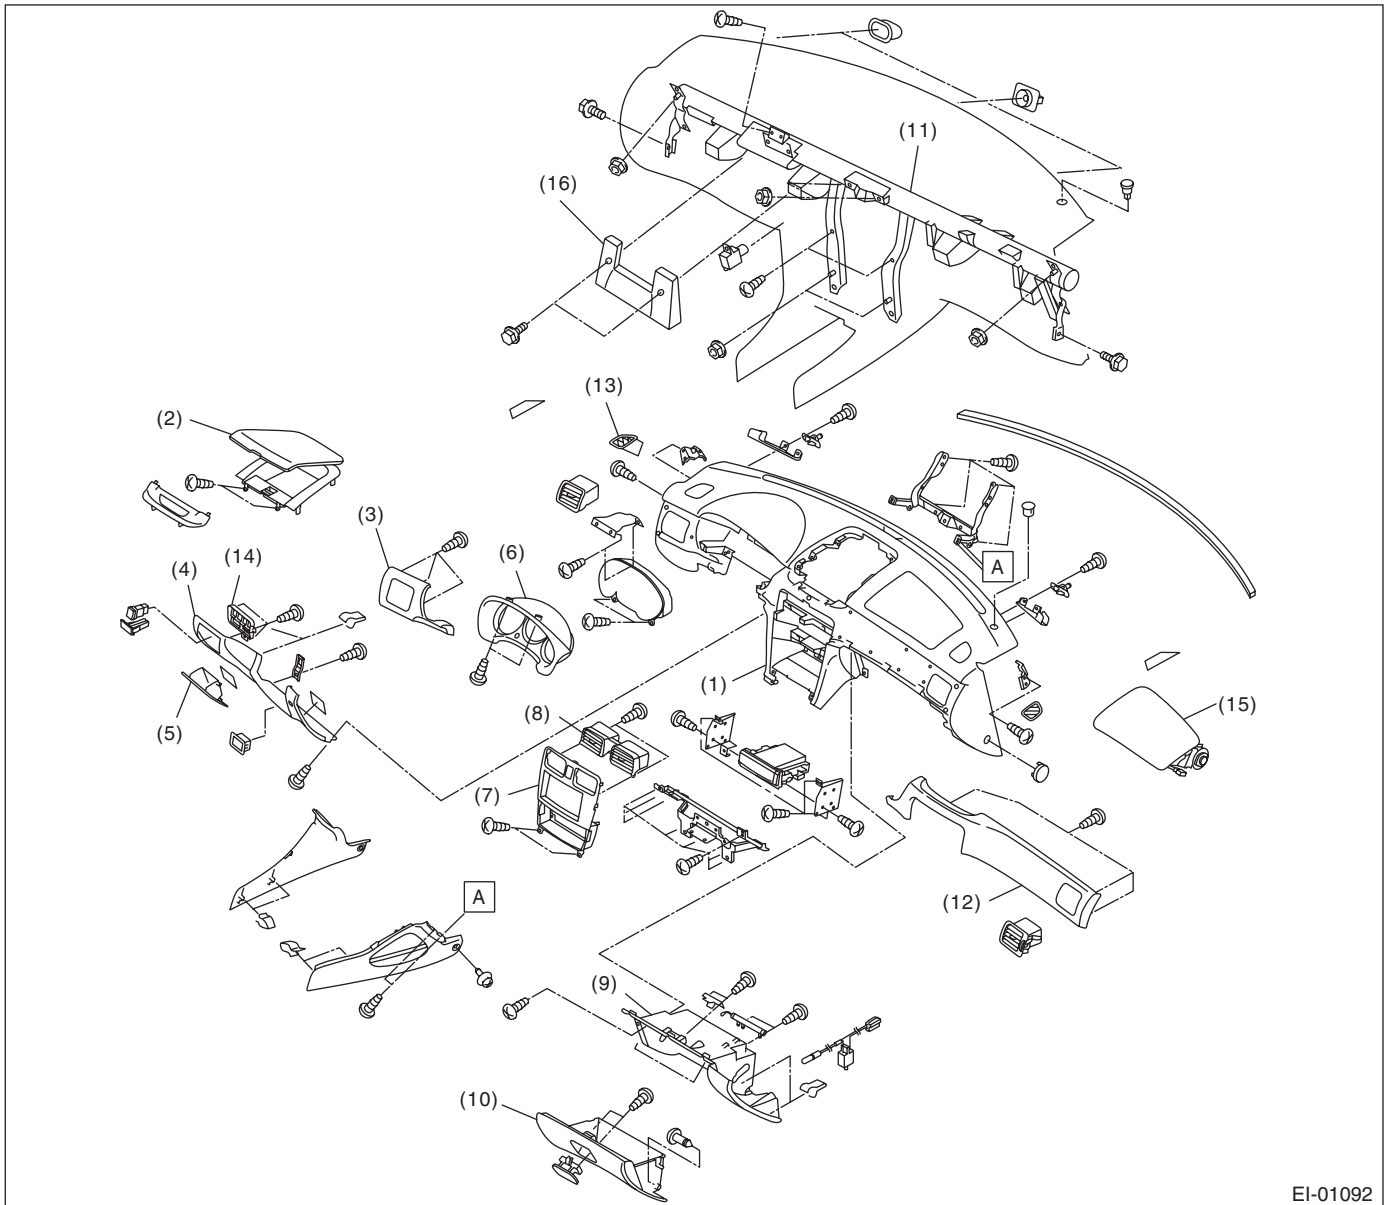


EI-01092

- | | | |
|--|---------------------|----------------------------------|
| (1) Pad and frame | (6) Meter visor | (12) Grille cover |
| (2) Center compartment (Model without navigation system) | (7) Center panel | (13) Air vent grille (Defroster) |
| (3) Grille cover | (8) Air vent grille | (14) Switch panel |
| (4) Lower cover | (9) Glove box panel | (15) Passenger's airbag module |
| (5) Coin box | (10) Glove box lid | (16) Knee guard panel |
| | (11) Steering beam | |

General Description

EXTERIOR/INTERIOR TRIM

13.INNER TRIM

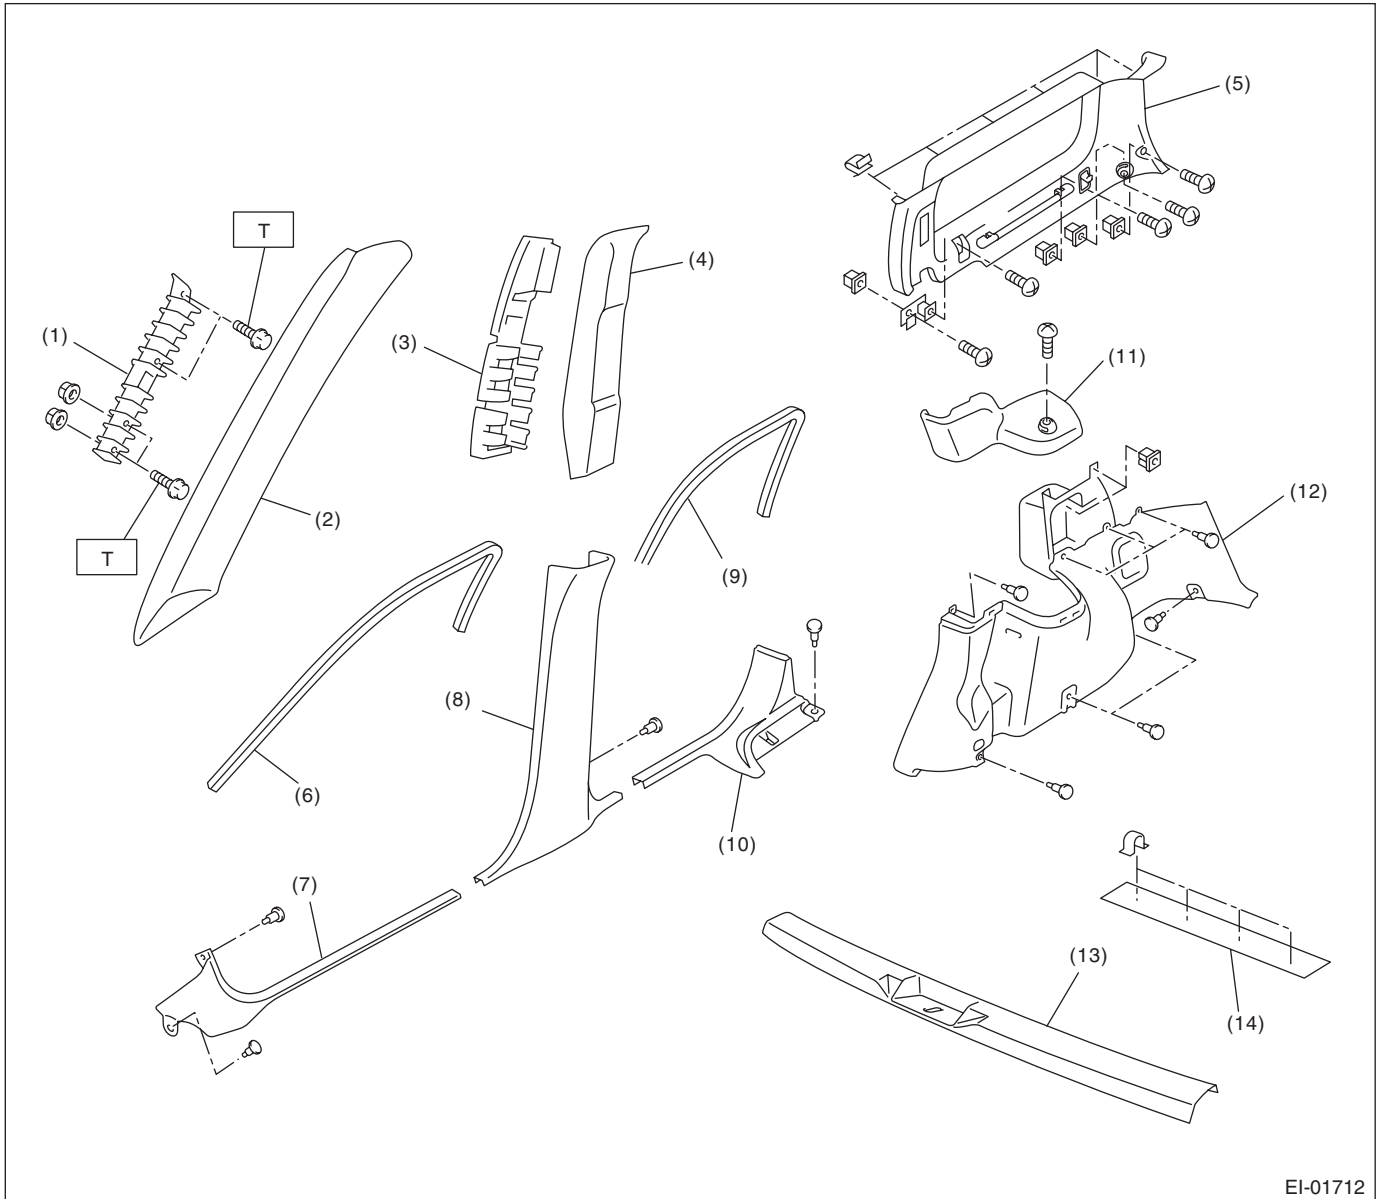

- (1) Front pillar inner rib
- (2) Front pillar upper trim
- (3) Center pillar inner rib
- (4) Center pillar upper trim
- (5) Rear pillar upper trim
- (6) Front garnish


- (7) Side sill front cover
- (8) Center pillar lower trim
- (9) Rear garnish
- (10) Side sill rear cover
- (11) Strut cap
- (12) Rear quarter lower trim

- (13) Rear skirt trim
- (14) Rear rail trim


Tightening torque: N·m (kgf-m, ft-lb)

T: 2 (0.20, 1.46)

14.ROOF TRIM

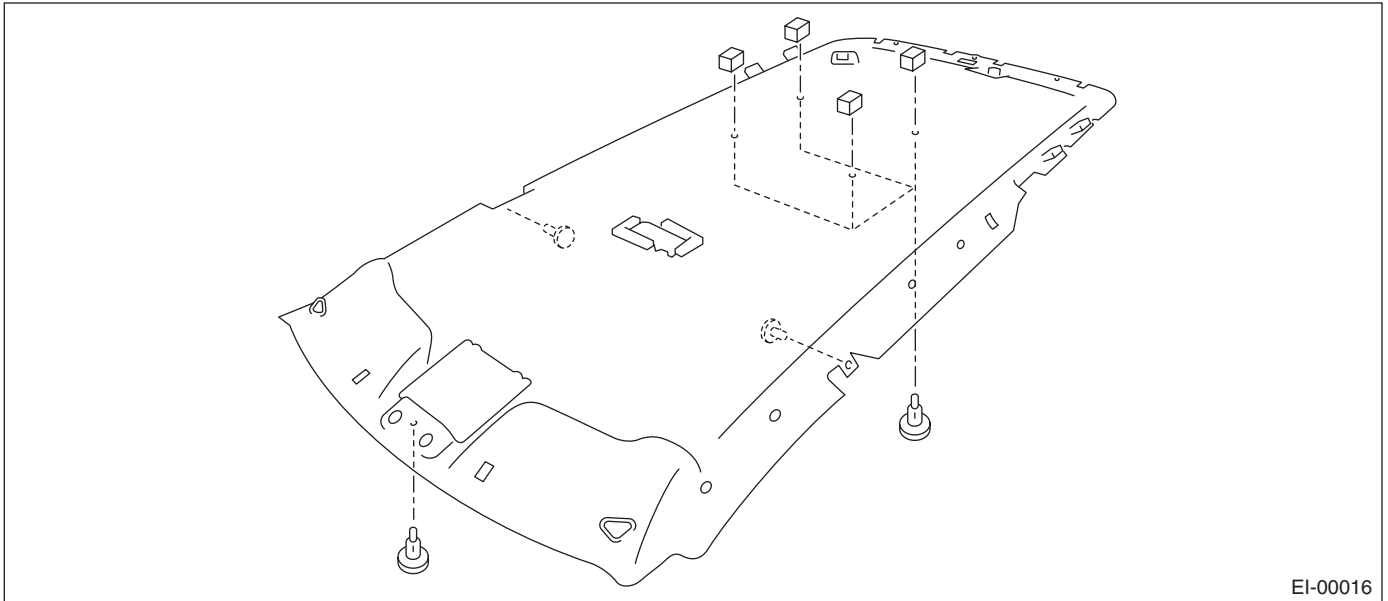

15.FLOOR MAT

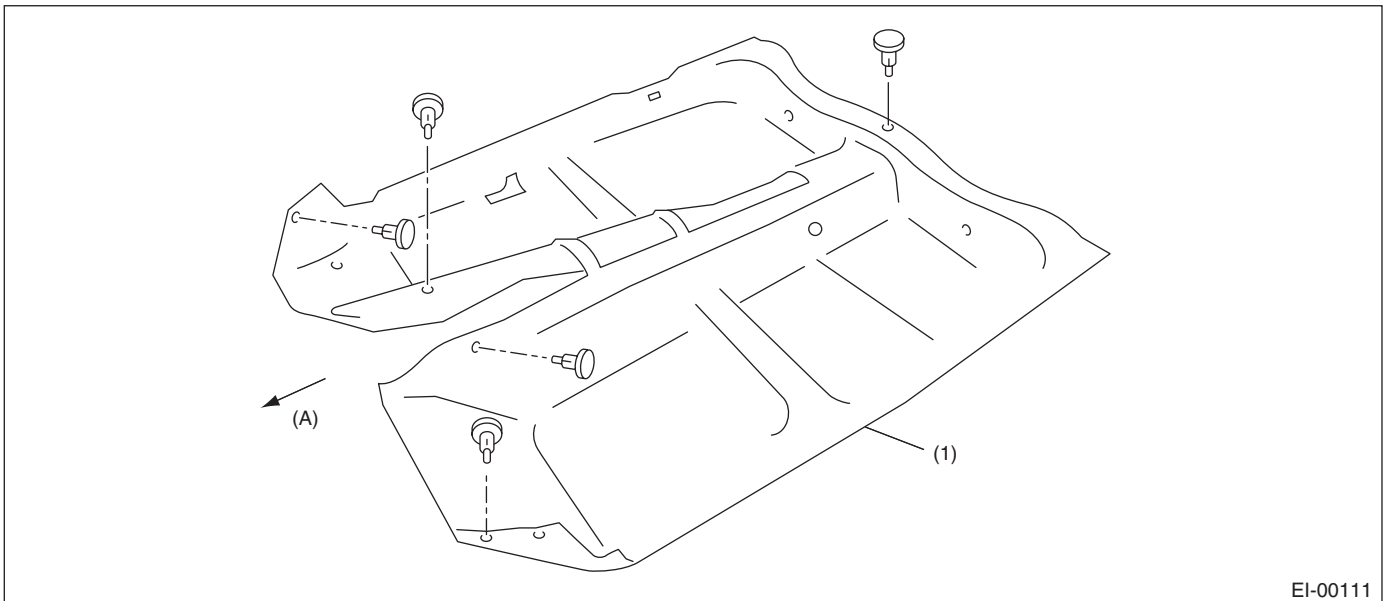


(A) Front side of vehicle

(1) Floor mat

General Description

EXTERIOR/INTERIOR TRIM

16.LUGGAGE FLOOR MAT

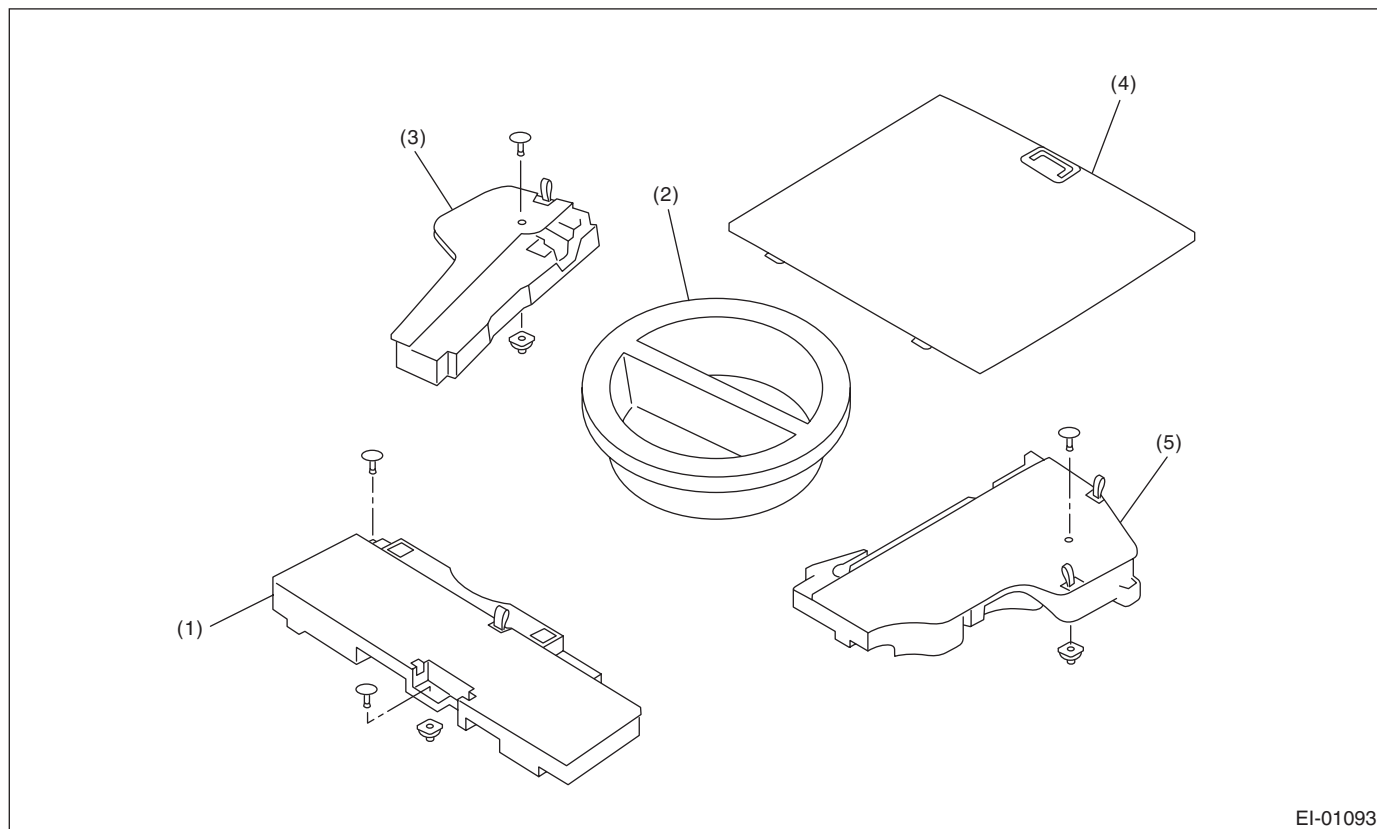

(1) Front floor mat


(2) Floor box

(3) Side floor mat RH

(4) Center floor mat

(5) Side floor mat LH

17.COMPARTMENT ACCESSORIES

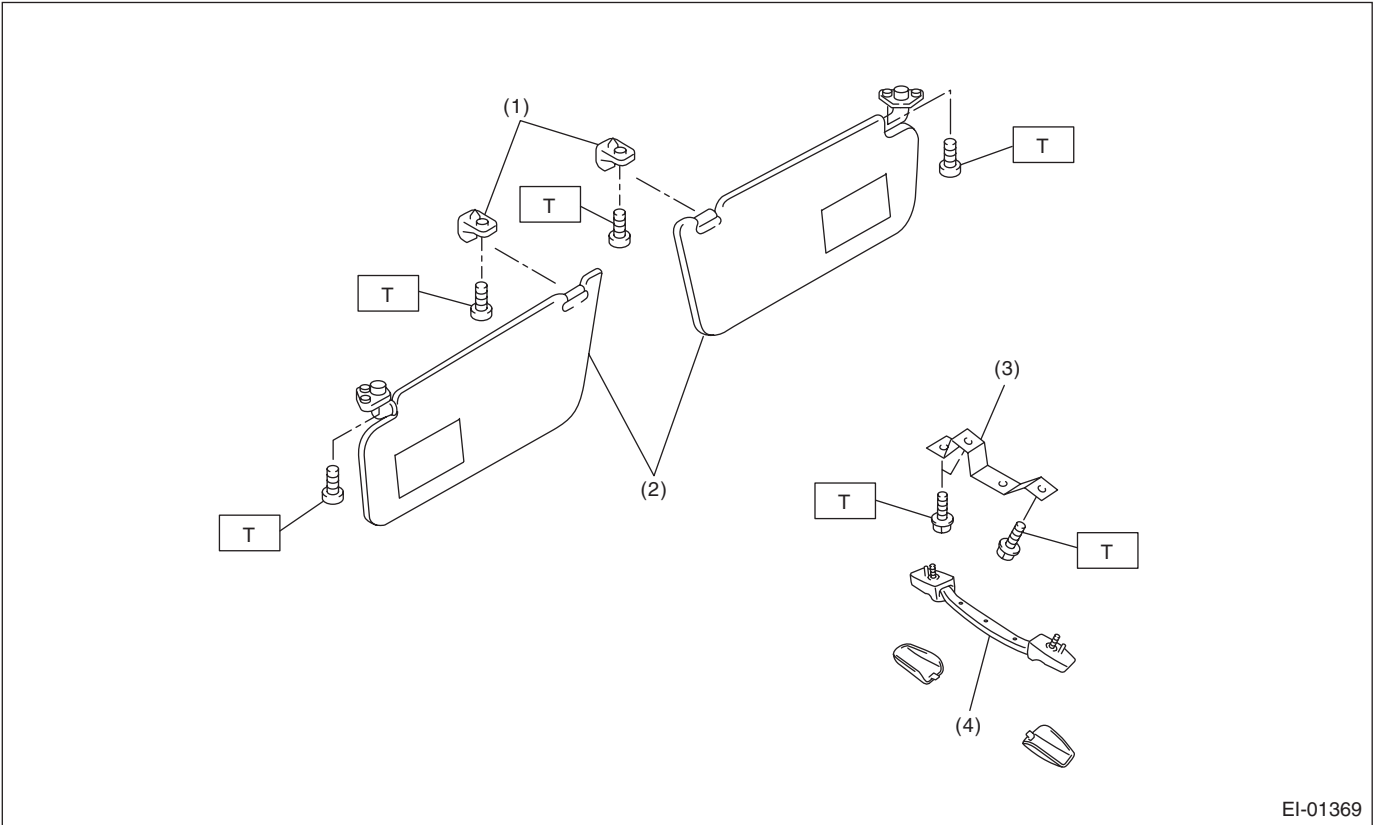

- (1)

Hook
- (2)

Sun Visor
- (3)

Assist rail bracket
- (4)

Assist grip (Retractable)

Tightening torque:*N·m (kgf-m, ft-lb)*

T: *2 (0.20, 1.46)*

B: PREPARATION TOOL

TOOL NAME	REMARKS
Clip remover	Used for removing trim.
Clip clamp pliers	Used for removal of various clips and clamps.