


17.Upper Inner Trim

A: REMOVAL

- 1) Remove the lower inner trim. <Ref. to EI-42, RE-MOVAL, Lower Inner Trim.>
- 2) Remove the front moulding (A).
- 3) Remove the front pillar upper trim (B).
- 4) Detach the front seat belt shoulder anchor, then remove the center pillar upper trim (C).

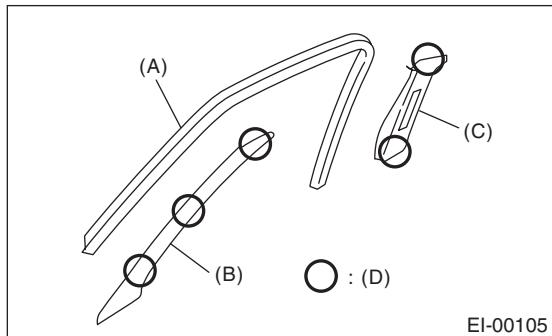

(D) Clip

B: INSTALLATION


Install in the reverse order of removal.

CAUTION:

Be sure to securely hook claws of inner trim panel to body flange.

NOTE:

When installing the center pillar upper trim and the front pillar upper trim, be sure to set the front moulding as shown in figure.

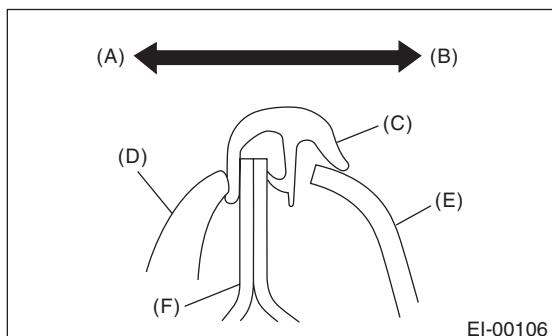

(A) Outside
(B) Inside
(C) Molding
(D) Weather strip
(E) Trim
(F) Body