


### 18. Lower Inner Trim

#### A: REMOVAL

- 1) Remove the side sill front cover (A).
- 2) Remove the rear seat cushion <Ref. to SE-17, REMOVAL, Rear Seat.>, and then remove the side sill rear cover (B).
- 3) Remove the center pillar lower trim (C).

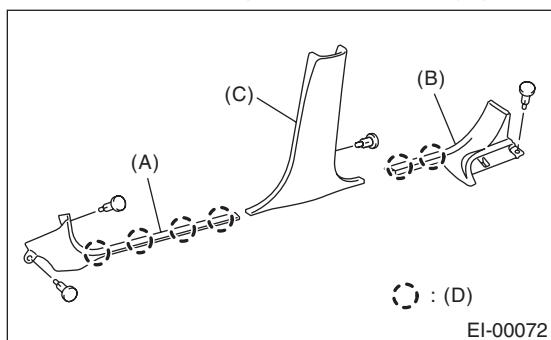

(D) Clip

#### B: INSTALLATION

Install in the reverse order of removal.

##### CAUTION:

**Be sure to securely hook claws of inner trim panel to body flange.**