


## 26. Heat Shield Cover

### A: REMOVAL


#### 1. CENTER HEAT SHIELD COVER

Loosen four bolts to remove the center heat shield cover.

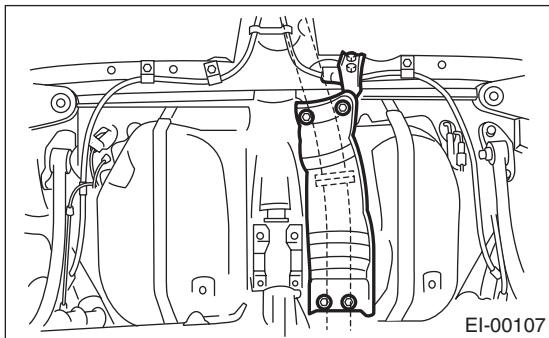

#### 2. REAR HEAT SHIELD COVER

- 1) Remove the muffler. <Ref. to EX(H4SO)-10, REMOVAL, Muffler.>
- 2) Loosen the four bolts to remove the rear heat shield cover.

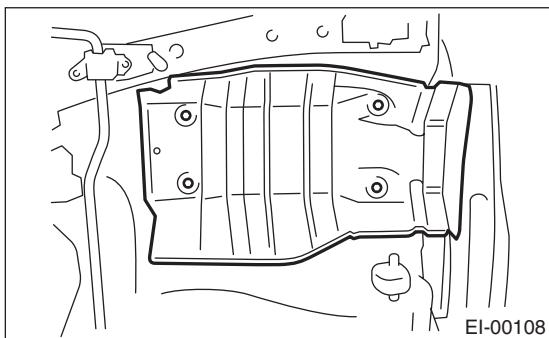

### B: INSTALLATION

Install in the reverse order of removal.