


14. Rearview Mirror

A: REMOVAL


NOTE:

Never reuse the spring. Prepare a new spring before removal.

- 1) Turn the mirror base 90° clockwise or counter-clockwise to remove it.

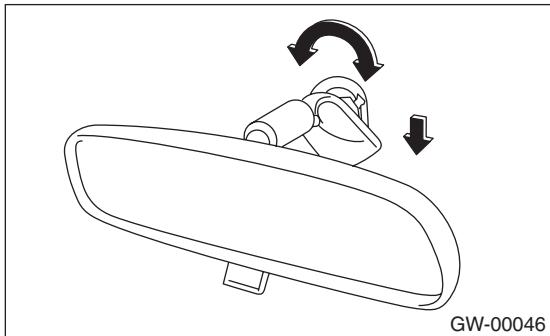

- 2) Remove the spring from the mirror base.

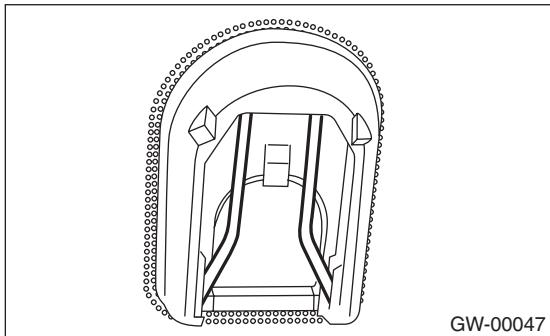

CAUTION:

Be careful not to damage the mirror surface.

- 3) When the mirror base is damaged, use the piano wire or spatula to remove.

CAUTION:

Be careful not to damage the windshield glass.

B: INSTALLATION

- 1) When the mirror base is removed, clean the old adhesive, and align the windshield glass mark to install.

Adhesive:

REPAIR KIT IN MR (Part No. 65029FC000)

- 2) Make sure the mirror base is securely attached and then install the spring to it.
- 3) Install in the reverse order of removal.

C: INSPECTION

Check that the mirror is not damaged.

Check that the spring is not damaged.