


Outer Mirror Assembly

GLASS/WINDOWS/MIRRORS

6. Outer Mirror Assembly


A: REMOVAL

- 1) Remove the door trim. <Ref. to EI-33, REMOVAL, Front Door Trim. >
- 2) Remove the mirror gusset cover.

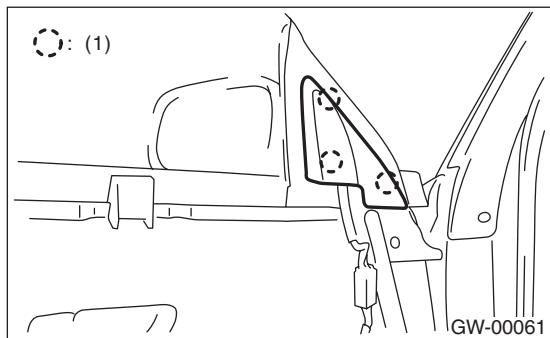

(1) Hook

- 3) Disconnect the outer mirror connector.
- 4) Remove the grommet, and loosen the screws to remove the outer mirror assembly.

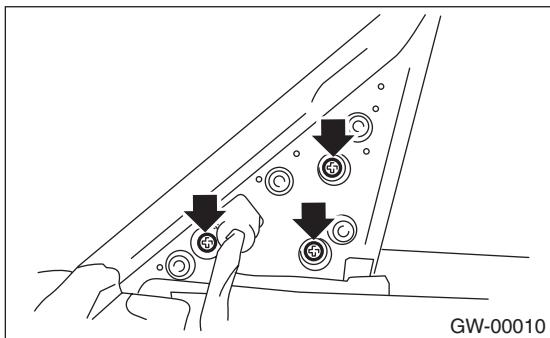


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. OUTER MIRROR WITH SIDE TURN SIGNAL LIGHT (MODEL WITHOUT MIRROR HEATER)

- 1) Check to ensure that the outer mirror moves properly when the battery voltage is applied to terminals.

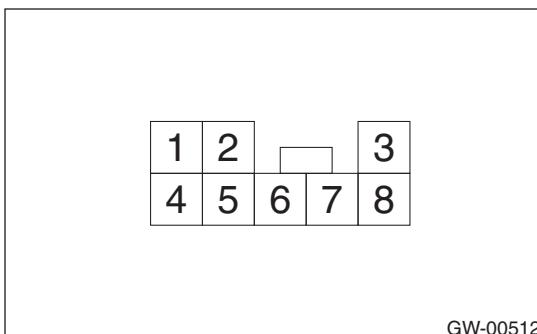


GW-00512

Switch position	Terminal No.
OFF	—
UP	6 (+) and 3 (-)
DOWN	3 (+) and 6 (-)
LEFT	7 (+) and 8 (-)
RIGHT	8 (+) and 7 (-)

- 2) Replace the mirror if defective.

2. OUTER MIRROR WITH SIDE TURN SIGNAL LIGHT (MODEL WITH MIRROR HEATER)

- 1) Check to ensure that the outer mirror moves properly when the battery voltage is applied to terminals.

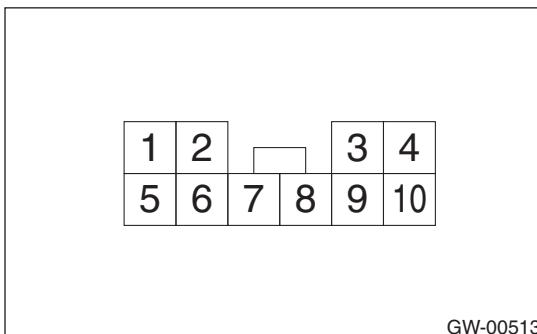


GW-00513

Switch position	Terminal No.
OFF	—
UP	7 (+) and 3 (-)
DOWN	3 (+) and 7 (-)
LEFT	8 (+) and 9 (-)
RIGHT	9 (+) and 8 (-)

- 2) Replace the mirror if defective.

3. STANDARD SIZE OUTER MIRROR (MODEL WITHOUT MIRROR HEATER)

- 1) Check to ensure that the outer mirror moves properly when the battery voltage is applied to terminals.

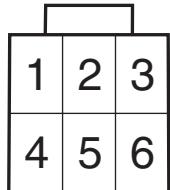


GW-00520

Switch position	Terminal No.
OFF	—
UP	1 (+) and 3 (-)
DOWN	3 (+) and 1 (-)
LEFT	2 (+) and 3 (-)
RIGHT	3 (+) and 2 (-)

- 2) Replace the mirror if defective.

4. STANDARD SIZE OUTER MIRROR (MODEL WITH MIRROR HEATER)

- 1) Check to ensure that the outer mirror moves properly when the battery voltage is applied to terminals.

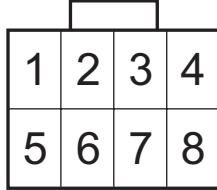

GW-00521

Switch position	Terminal No.
OFF	—
UP	2 (+) and 4 (-)
DOWN	4 (+) and 2 (-)
LEFT	3 (+) and 4 (-)
RIGHT	4 (+) and 3 (-)

- 2) Replace the mirror if defective.