

## 8. Remote Control Mirror Switch

### A: REMOVAL


Refer to Power Window Control Switch because the remote control mirror switch is unitized with the power window control switch. <Ref. to GW-8, REMOVAL, Power Window Control Switch.>

### B: INSTALLATION

Refer to Power Window Control Switch because the remote control mirror switch is unitized with the power window control switch. <Ref. to GW-8, INSTALLATION, Power Window Control Switch.>

### C: INSPECTION

Move the remote control mirror switch to each position and check continuity between terminals.

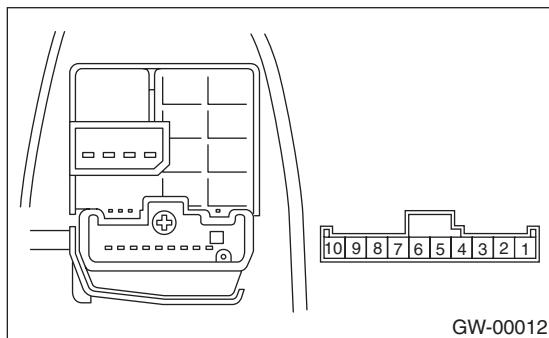

#### Switch the change over switch to the right side:

Switch position	Terminal No.	Standard
OFF	—	1 MΩ or more
UP	8 and 3, 6 and 7	Less than 1 Ω
DOWN	8 and 6, 3 and 7	Less than 1 Ω
LEFT	8 and 2, 6 and 7	Less than 1 Ω
RIGHT	8 and 6, 2 and 7	Less than 1 Ω

#### Switch the change over switch to the left side:

Switch position	Terminal No.	Standard
OFF	—	1 MΩ or more
UP	8 and 4, 6 and 7	Less than 1 Ω
DOWN	8 and 6, 4 and 7	Less than 1 Ω
LEFT	8 and 5, 6 and 7	Less than 1 Ω
RIGHT	8 and 6, 5 and 7	Less than 1 Ω

If NG, replace the switch.