


20. Sunload Sensor (Auto A/C Model)

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Disconnect the sunload sensor connector.

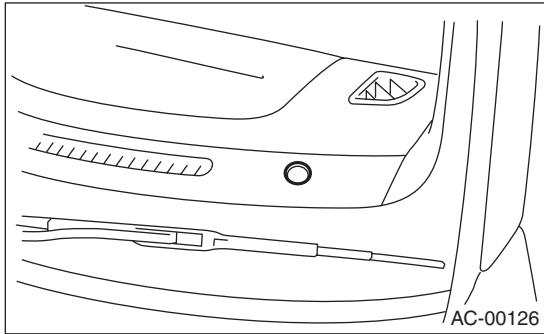

CAUTION:

Be careful not to damage the sensors and interior trims when removing.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

<Ref. to AC(diag)-36, SUNLOAD SENSOR, Diagnostic Procedure for Sensors.>