


## 21. In-vehicle Sensor (Auto A/C Model)


### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the instrument panel lower cover. <Ref. to EI-38, REMOVAL, Instrument Panel Assembly.>
- 3) Remove the in-vehicle sensor from the instrument panel.

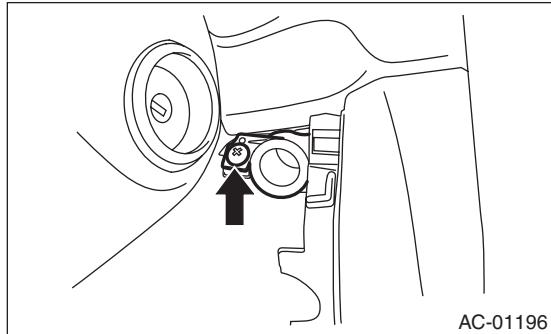

AC-01196

- 4) Disconnect the connector and aspirator hose.

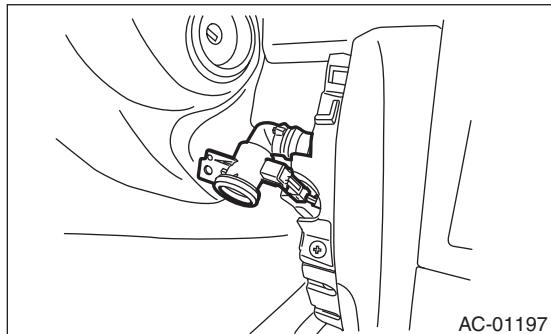

AC-01197

#### CAUTION:

Be careful not to damage the sensors and interior trims when removing.

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

<Ref. to AC(diag)-32, IN-VEHICLE SENSOR, Diagnostic Procedure for Sensors.>